

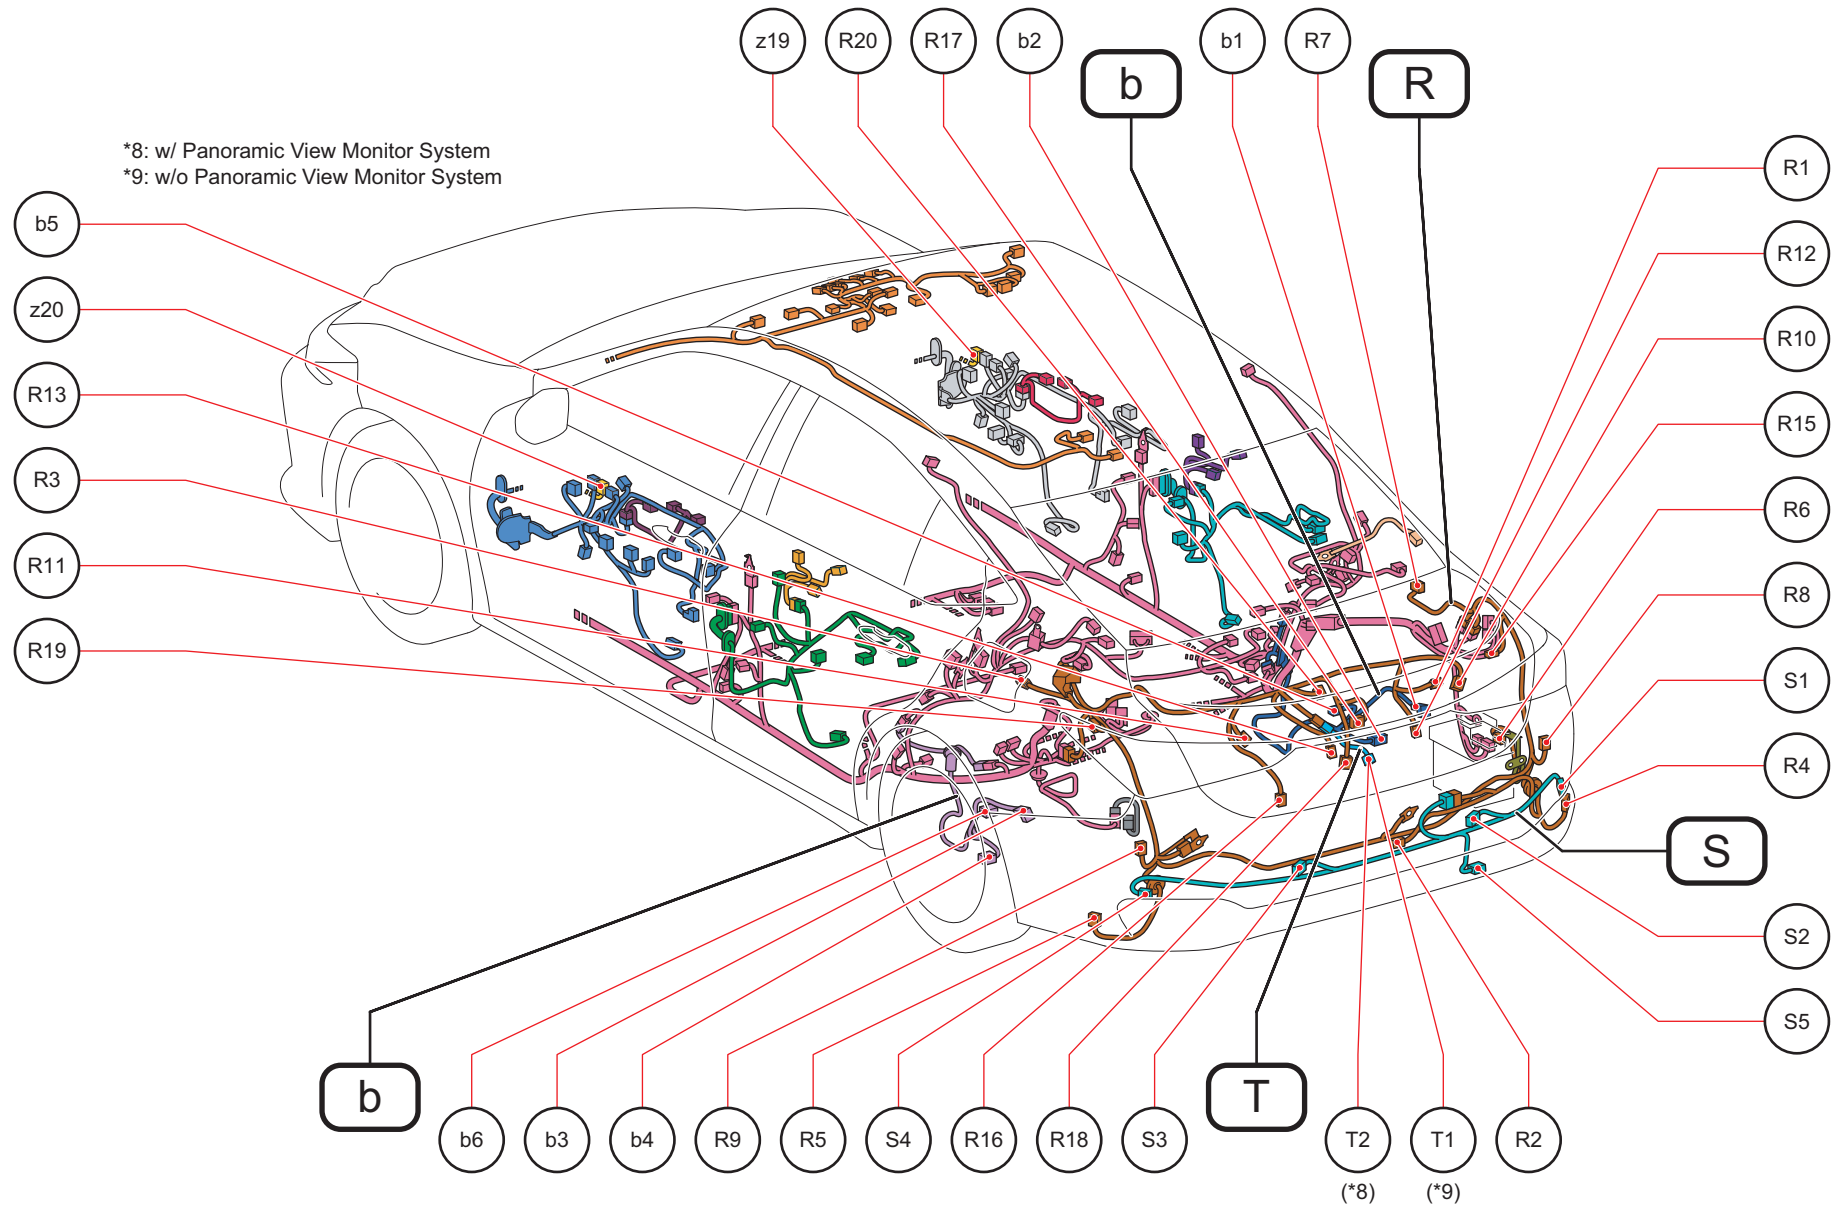
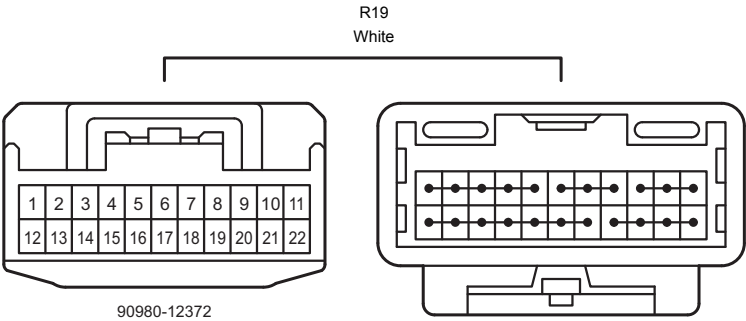
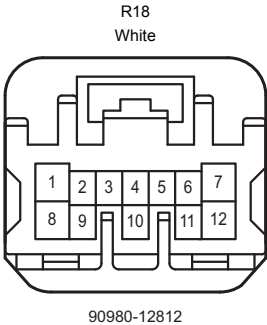
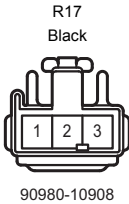
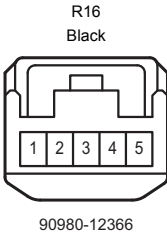
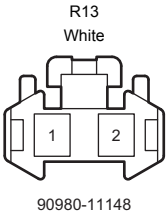
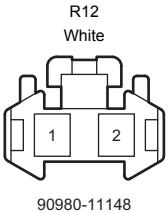
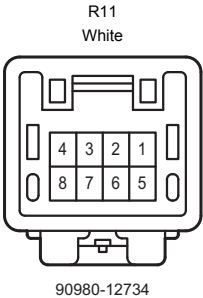
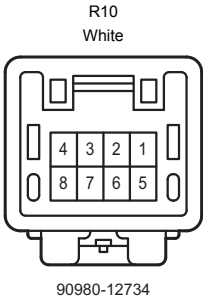
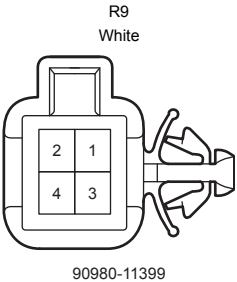
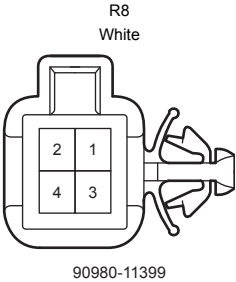
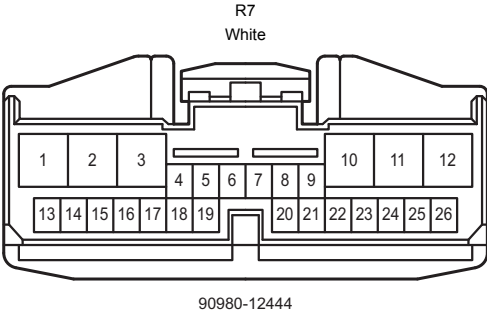
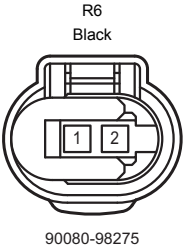
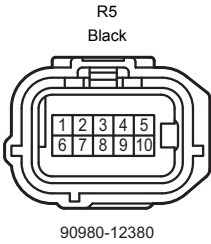
 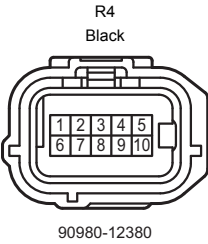


Position of Parts in Body (RHD/A25A-FXS)

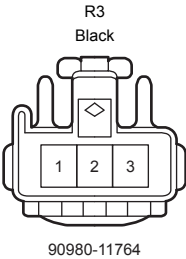

- R 1 Luggage Electrical Key Switch
- R 2 Electrical Key Antenna (Outside Luggage Compartment)
- R 3 Fuel Lid Lock with Motor Assembly
- R 4 Blind Spot Monitor Sensor RH
- R 5 Blind Spot Monitor Sensor LH
- R 6 Battery State Sensor Assembly
- R 7 Luggage Closer Motor Assembly
- R 8 Rear Combination Light Assembly RH
- R 9 Rear Combination Light Assembly LH
- R 10 Rear Light Assembly RH
- R 11 Rear Light Assembly LH
- R 12 License Plate Light Assembly RH
- R 13 License Plate Light Assembly LH
- R 15 Power Outlet Socket
- R 16 Luggage Closer Switch (Door Control Switch)
- R 17 Luggage Compartment Door Lock Assembly
- R 18 Luggage Compartment Door Lock Assembly
- R 19 No. 29 Junction Connector
- R 20 No. 30 Junction Connector
- S 1 Rear Corner Ultrasonic Sensor RH
- S 2 Rear Center Ultrasonic Sensor RH
- S 3 Rear Center Ultrasonic Sensor LH
- S 4 Rear Corner Ultrasonic Sensor LH
- S 5 Kick Door Control Sensor
- T 1 Rear Television Camera Assembly
- T 2 Rear Television Camera Assembly
- b 1 Parking Brake Actuator Assembly RH
- b 2 Rear Speed Sensor RH (Rear Axle Hub and Bearing Assembly RH)
- b 3 Parking Brake Actuator Assembly LH
- b 4 Rear Speed Sensor LH (Rear Axle Hub and Bearing Assembly LH)
- b 5 Rear Shock Absorber Assembly RH
- b 6 Rear Shock Absorber Assembly LH
- z 19 Outer Rear View Mirror Assembly RH, Outer Mirror Control ECU Assembly RH
- z 20 Outer Rear View Mirror Assembly LH, Outer Mirror Control ECU Assembly LH

Position of Parts in Body (RHD/A25A-FXS)



Position of Parts in Body (RHD/A25A-FXS)

