



Position of Parts in Engine Compartment (2GR-FKS)

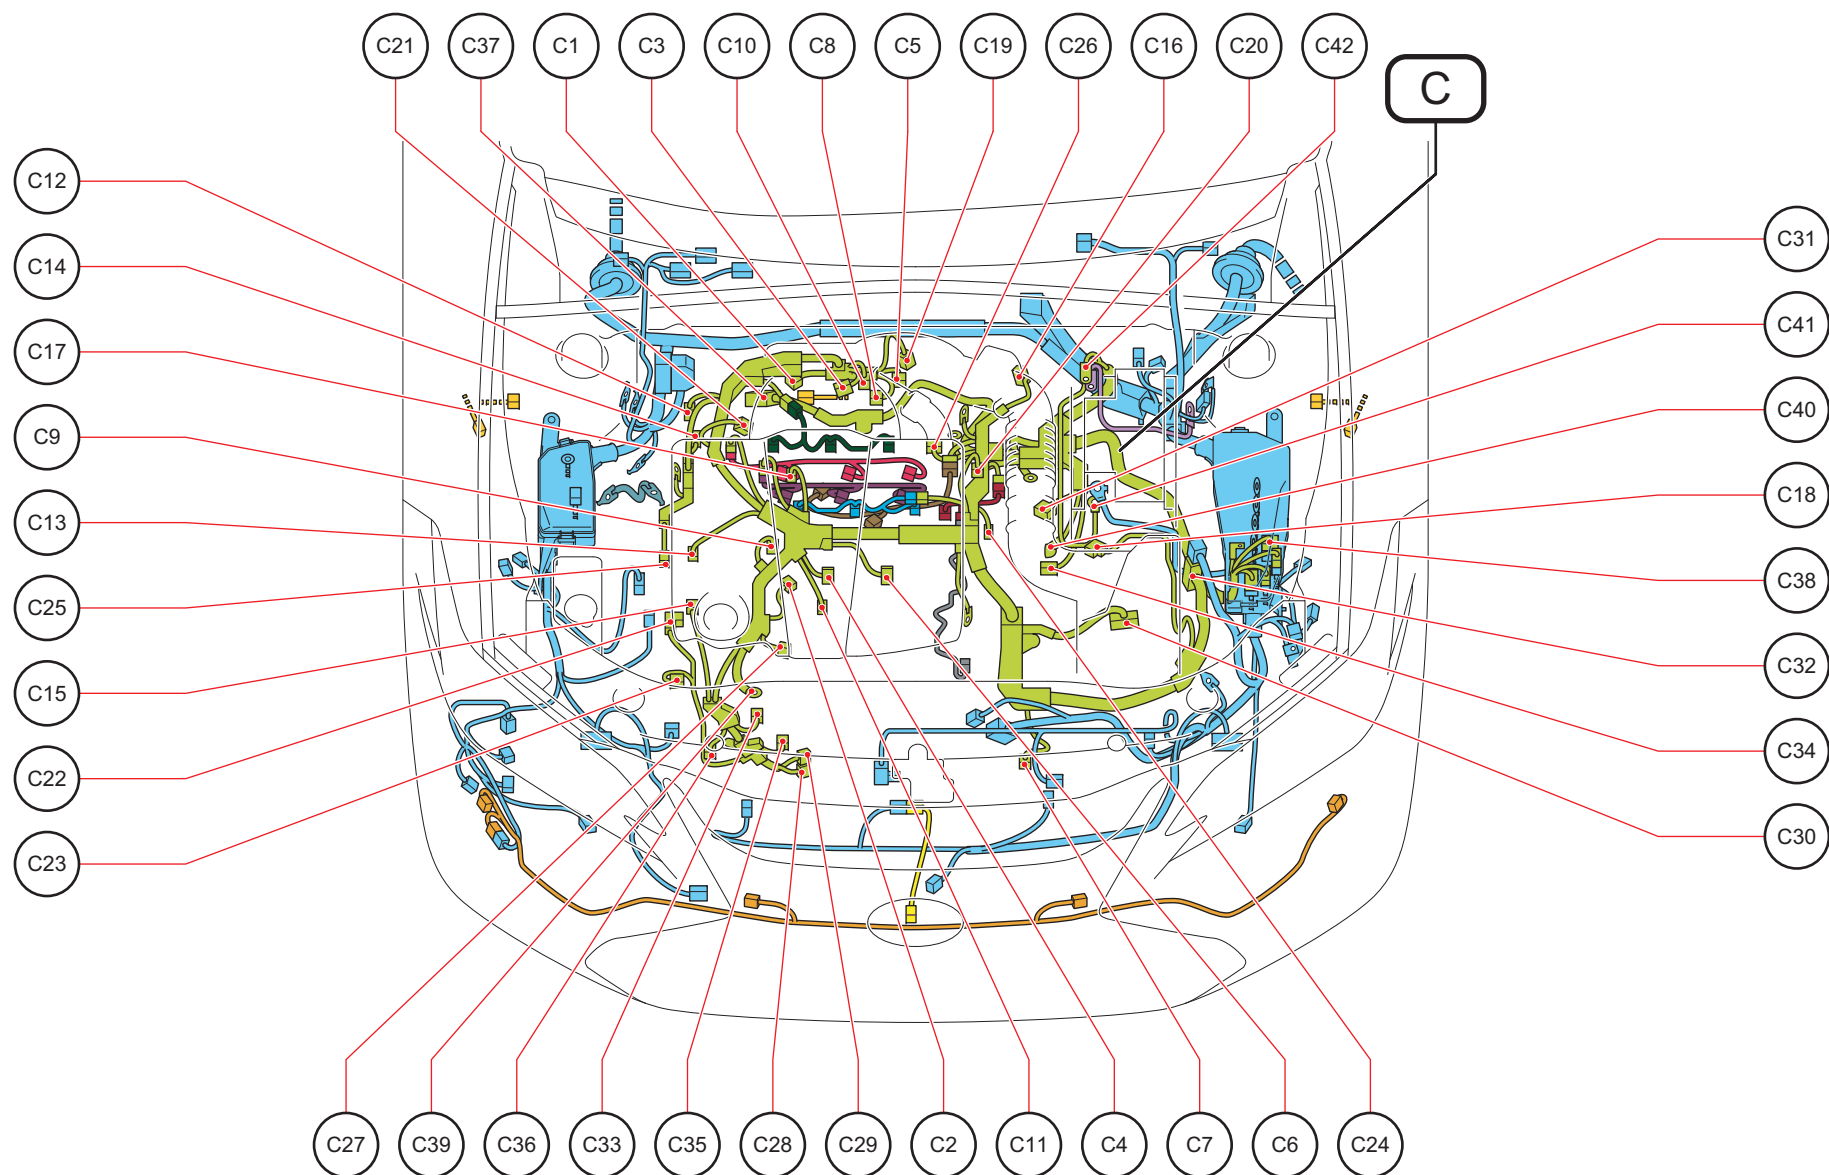

- C 1 No. 1 Ignition Coil Assembly
- C 2 No. 2 Ignition Coil Assembly
- C 3 No. 3 Ignition Coil Assembly
- C 4 No. 4 Ignition Coil Assembly
- C 5 No. 5 Ignition Coil Assembly
- C 6 No. 6 Ignition Coil Assembly
- C 7 Vacuum Switching Valve
- C 8 Crank Position Sensor (for Intake Camshaft of Bank 1)
- C 9 No. 2 Crank Position Sensor (for Intake Camshaft of Bank 2)
- C 10 Crank Position Sensor (for Exhaust Camshaft of Bank 1)
- C 11 No. 2 Crank Position Sensor (for Exhaust Camshaft of Bank 2)
- C 12 Cam Timing Oil Control Solenoid Assembly (for Intake Camshaft of Bank 1)
- C 13 Cam Timing Oil Control Solenoid Assembly (for Intake Camshaft of Bank 2)
- C 14 Cam Timing Oil Control Solenoid Assembly (for Exhaust Camshaft of Bank 1)
- C 15 Cam Timing Oil Control Solenoid Assembly (for Exhaust Camshaft of Bank 2)
- C 16 Throttle Body with Motor Assembly
- C 17 No. 1 Vacuum Switching Valve (for Intake Air Control Valve)
- C 18 Intake Mass Air Flow Meter Sub-Assembly
- C 19 Fuel Pump Assembly (for High Pressure Side)
- C 20 No. 1 Vacuum Switching Valve Assembly
- C 21 Fuel Delivery Pipe with Sensor Assembly (for Low Pressure Side)
- C 22 Engine Oil Level Sensor
- C 23 Oil Pressure Switch Assembly
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 25 Water Inlet with Thermostat Sub-Assembly
- C 26 Air Fuel Ratio Sensor
- C 27 No. 2 Air Fuel Ratio Sensor
- C 28 Oxygen Sensor (Bank 1)
- C 29 No. 2 Oxygen Sensor (Bank 2)
- C 30 ECT Solenoid (Transmission Wire)
- C 31 Park/Neutral Position Switch Assembly
- C 32 ECM
- C 33 Generator Assembly
- C 34 Starter Assembly
- C 35 Compressor with Pulley Assembly
- C 36 Compressor with Pulley Assembly
- C 37 Power Steering ECU with Motor Assembly (Rack and Pinion Power Steering Gear Assembly)
- C 38 No. 5 Junction Connector
- C 39 Generator Assembly
- C 40 Starter Assembly
- C 41 Battery
- C 42 Battery


Position of Parts in Engine Compartment (2GR-FKS)

C1
Black

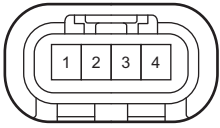


90980-12A37

C2
Black

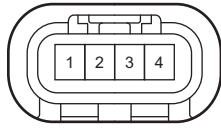


90980-12A37

C3
Black

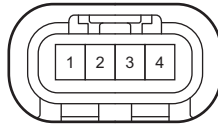


90980-12A37

C4
Black

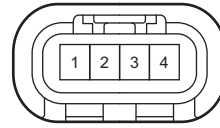


90980-12A37

C5
Black

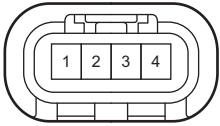


90980-12A37

C6
Black

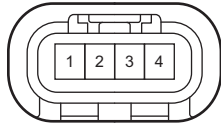


90980-12A37

C7
Black

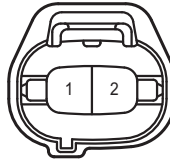

90980-11156

C8
Black

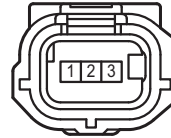

90980-12353

C9
Black



90980-12353

C10
Black



 
90980-12353

C11
Black




90980-12353

C12
Black




90980-11875

 C13
Black



90980-11875

 C14
Black




90980-11875

C15
Black




90980-11875

C16
Black

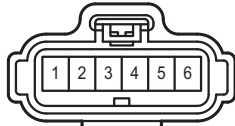

90980-11858

C17
Brown

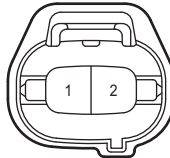


90980-11149

C18
Black



90980-12A85

C19
Black

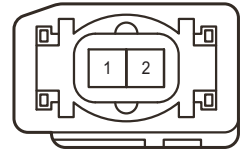

90980-12747

C20
Black




90980-11156

C21
Black



90980-12A19

C22
Black

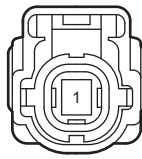

90980-12C20

C23
Gray



90980-11363

C24
Black



90980-12416

C25
Black



90980-12572

C26
Gray



90980-11178

C27
Gray



90980-10869

C28
Black



90980-11028


C29
Gray



90980-10869


Position of Parts in Engine Compartment (2GR-FKS)

C30
Gray

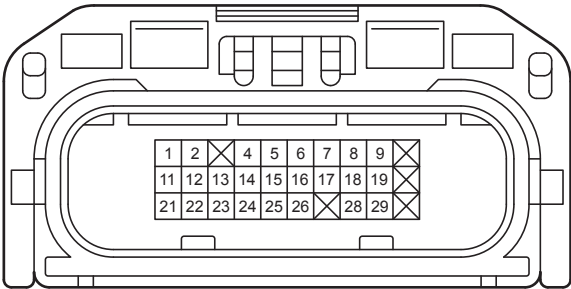


82824-33770

C31
Black

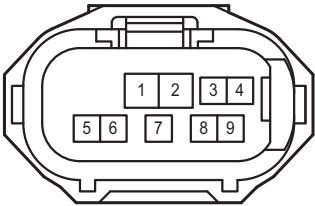

90980-12A23

C32
Black

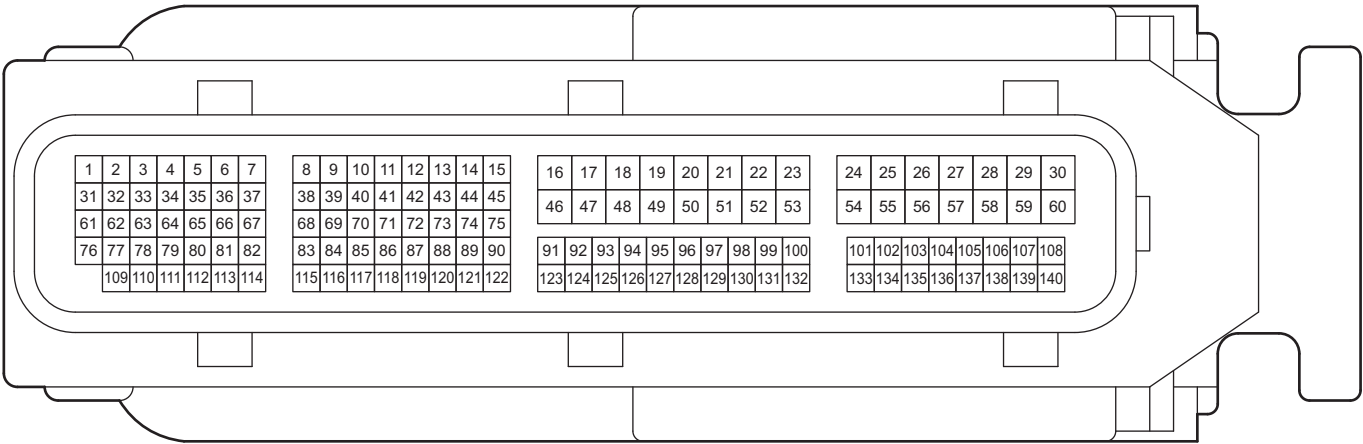

90980-12836

C33
Black



90980-12A88

C34
Black




90980-11400

C35
Black




90980-11156

C36
Gray

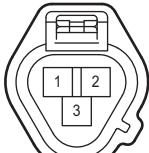


90980-11016

C37
Black

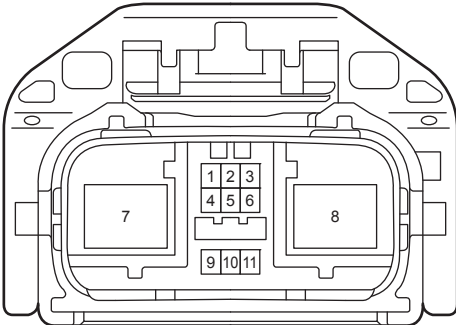

90980-12C57

C38
White

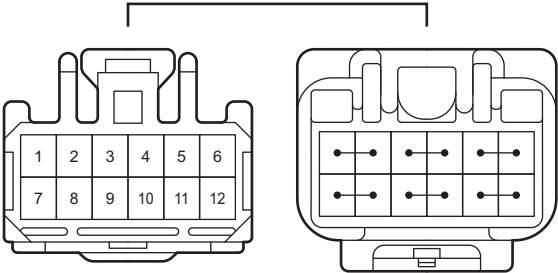

90980-11661

C39



C40



C41



C42

