



Position of Parts in Engine Compartment (2GR-FKS)

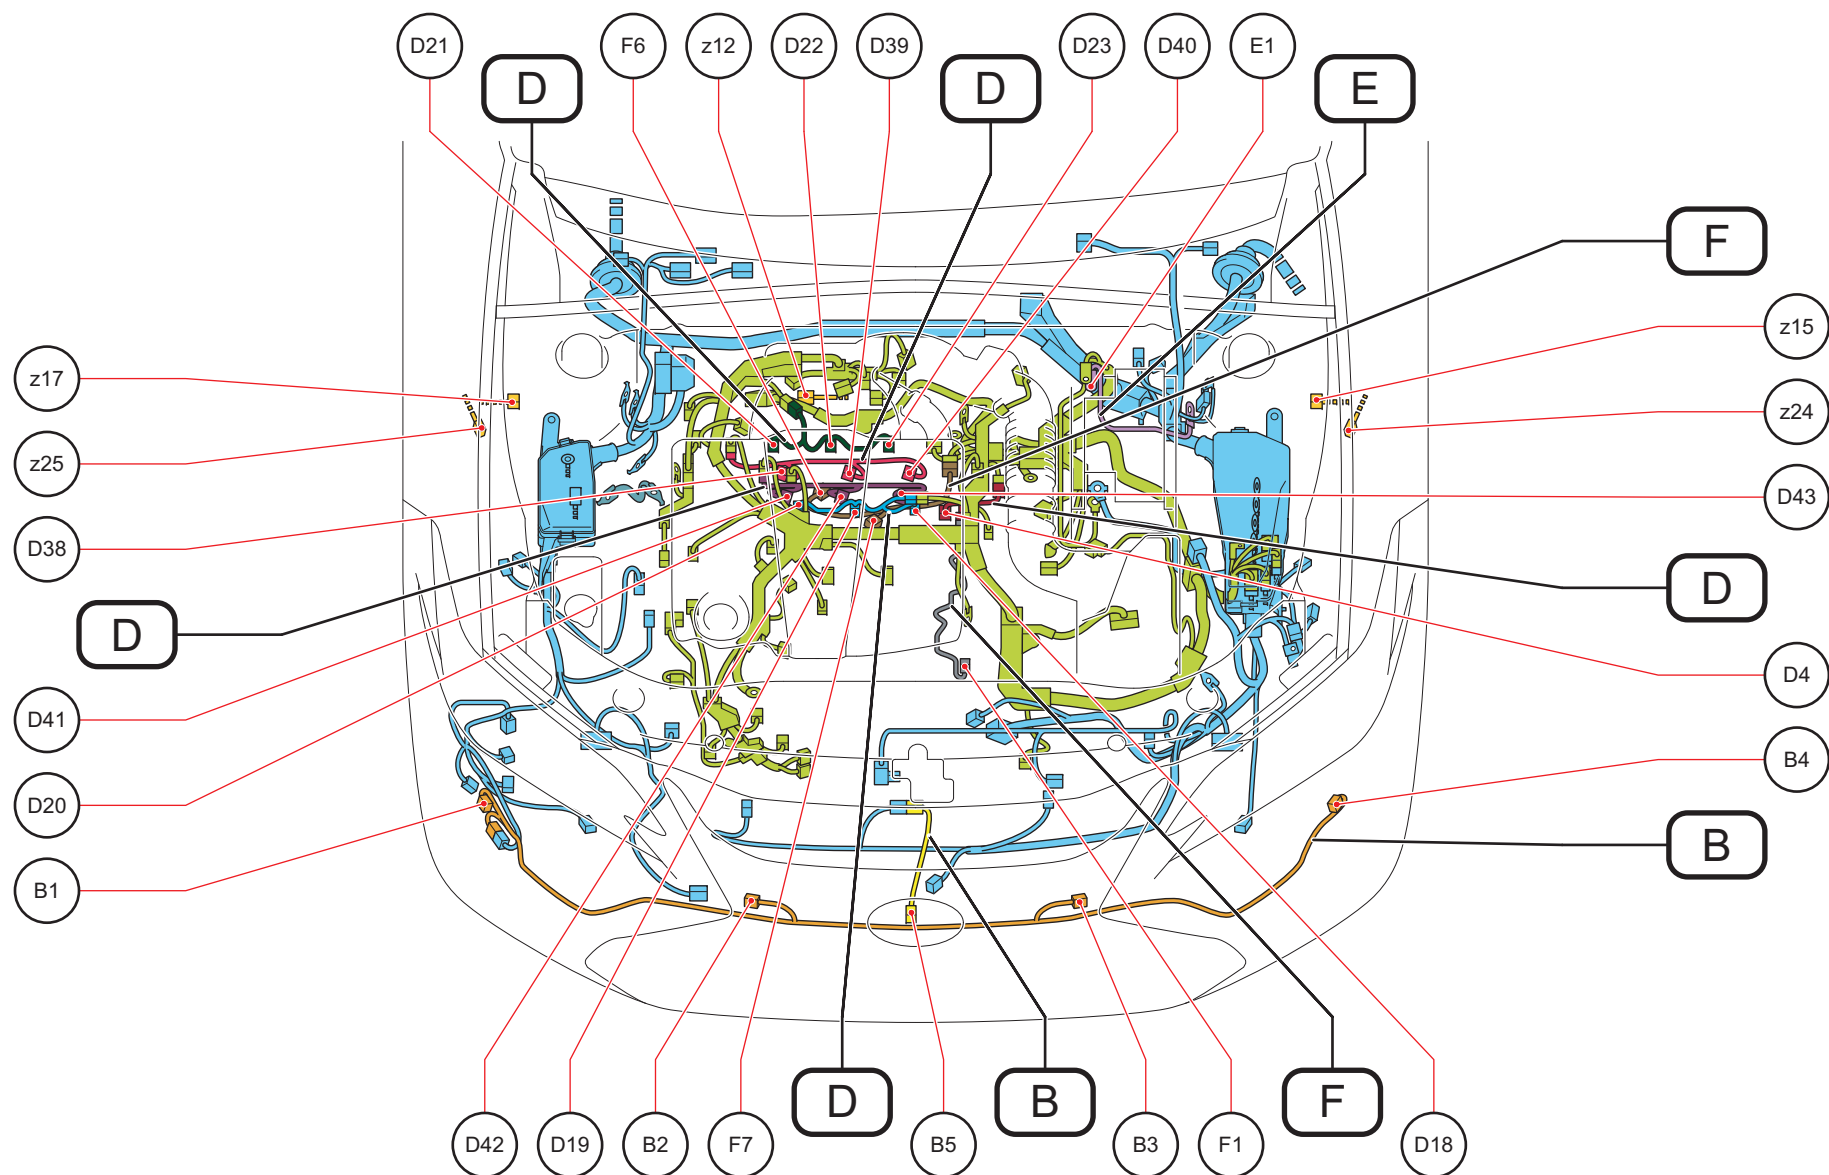

- B 1 Front Corner Ultrasonic Sensor RH
- B 2 Front Center Ultrasonic Sensor RH
- B 3 Front Center Ultrasonic Sensor LH
- B 4 Front Corner Ultrasonic Sensor LH
- B 5 Front Television Camera Assembly
- D 4 Fuel Delivery Pipe with Sensor Assembly LH (for High Pressure Side)
- D 18 No. 6 Port Fuel Injector Assembly
- D 19 No. 4 Port Fuel Injector Assembly
- D 20 No. 2 Port Fuel Injector Assembly
- D 21 No. 1 Port Fuel Injector Assembly
- D 22 No. 3 Port Fuel Injector Assembly
- D 23 No. 5 Port Fuel Injector Assembly
- D 38 No. 1 Direct Fuel Injector Assembly
- D 39 No. 3 Direct Fuel Injector Assembly
- D 40 No. 5 Direct Fuel Injector Assembly
- D 41 No. 2 Direct Fuel Injector Assembly
- D 42 No. 4 Direct Fuel Injector Assembly
- D 43 No. 6 Direct Fuel Injector Assembly
- E 1 Battery
- F 1 Crank Position Sensor
- F 6 Knock Control Sensor (Bank 1)
- F 7 Knock Control Sensor (Bank 2)
- z 12 Steering Torque Sensor Board Sub-Assembly (Rack and Pinion Power Steering Gear Assembly), Power Steering ECU with Motor Assembly (Rack and Pinion Power Steering Gear Assembly)
- z 15 Skid Control Sensor Wire with Suspension Control LH, Front Shock Absorber Assembly LH
- z 17 Skid Control Sensor Wire with Suspension Control RH, Front Shock Absorber Assembly RH
- z 24 Front Speed Sensor LH, Skid Control Sensor Wire with Suspension Control LH
- z 25 Front Speed Sensor RH, Skid Control Sensor Wire with Suspension Control RH

Position of Parts in Engine Compartment (2GR-FKS)

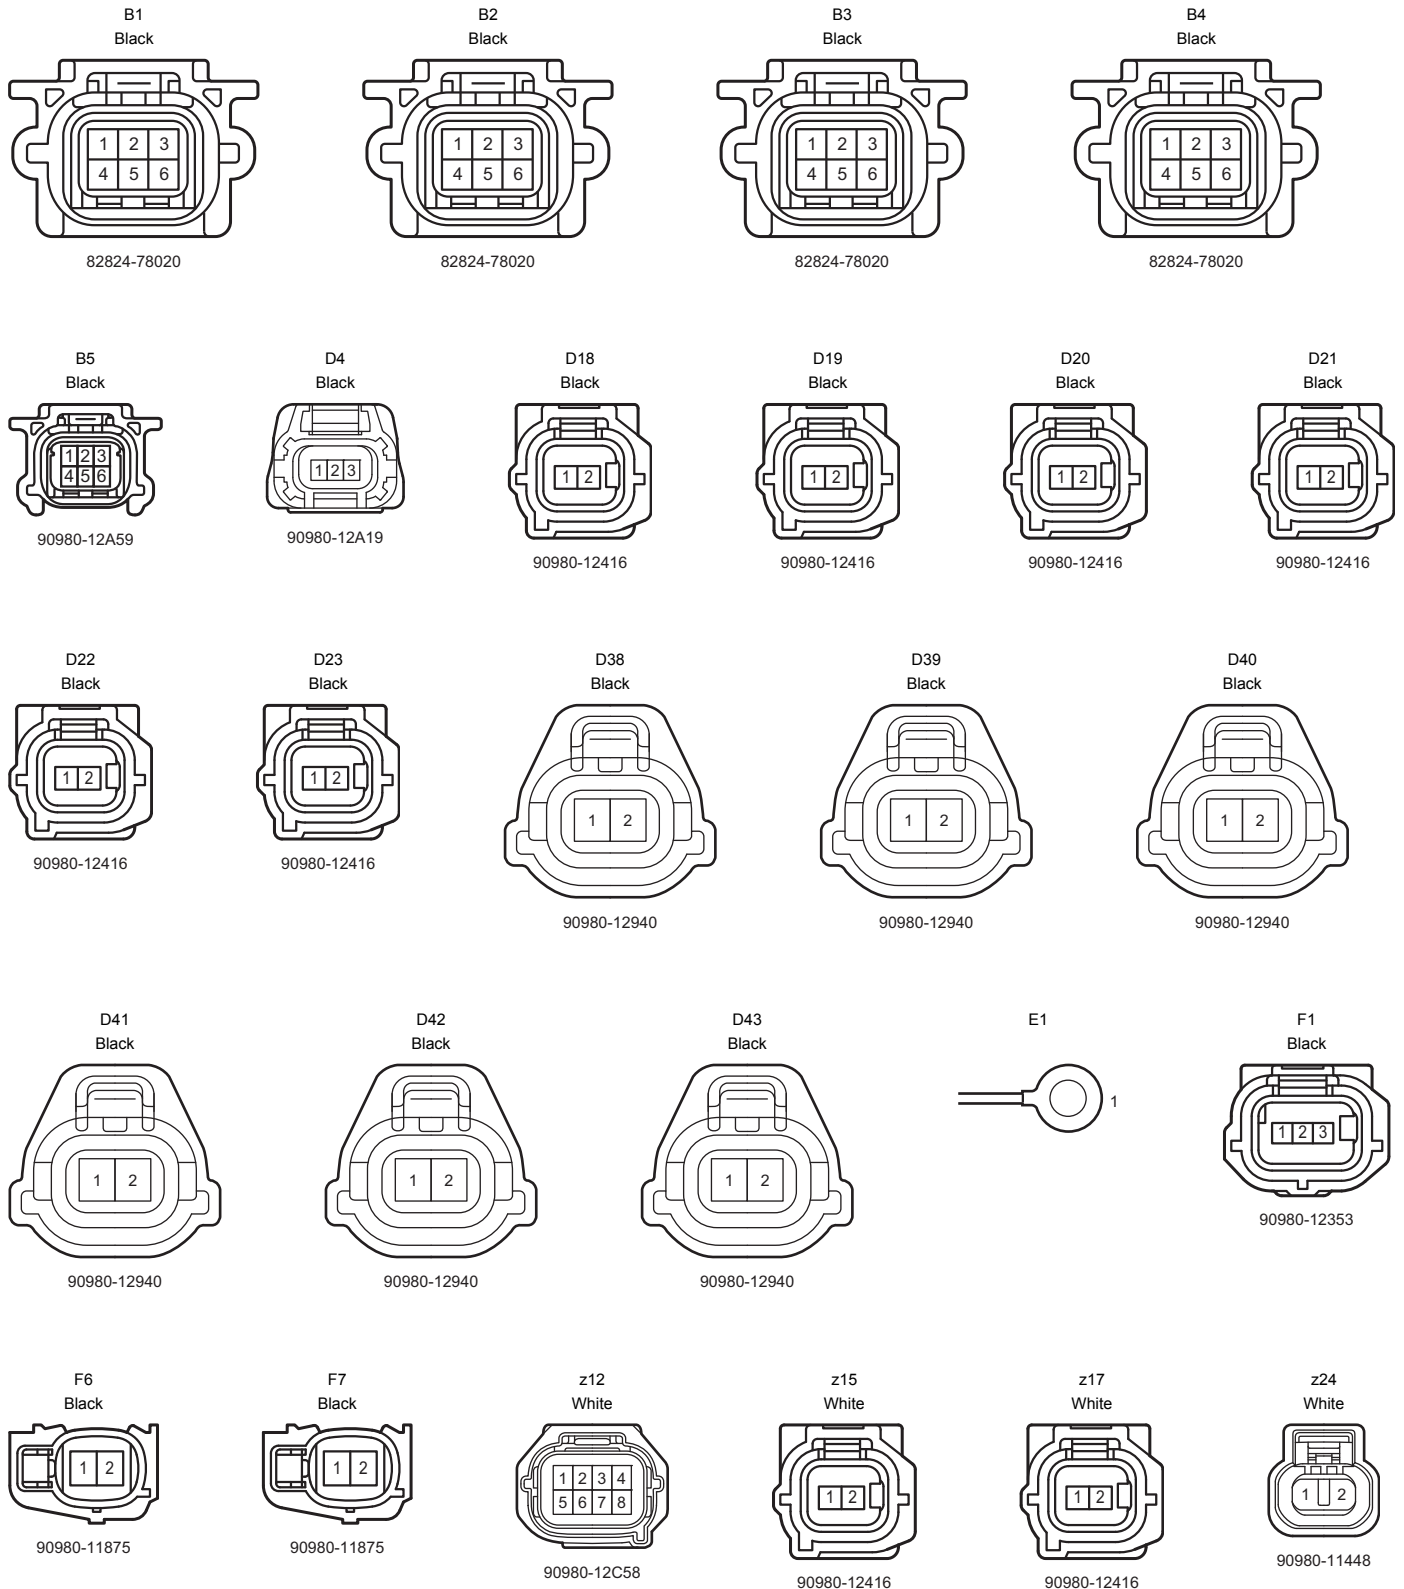

z25

White



90980-11448