



Position of Parts in Engine Compartment (6AR-FSE)

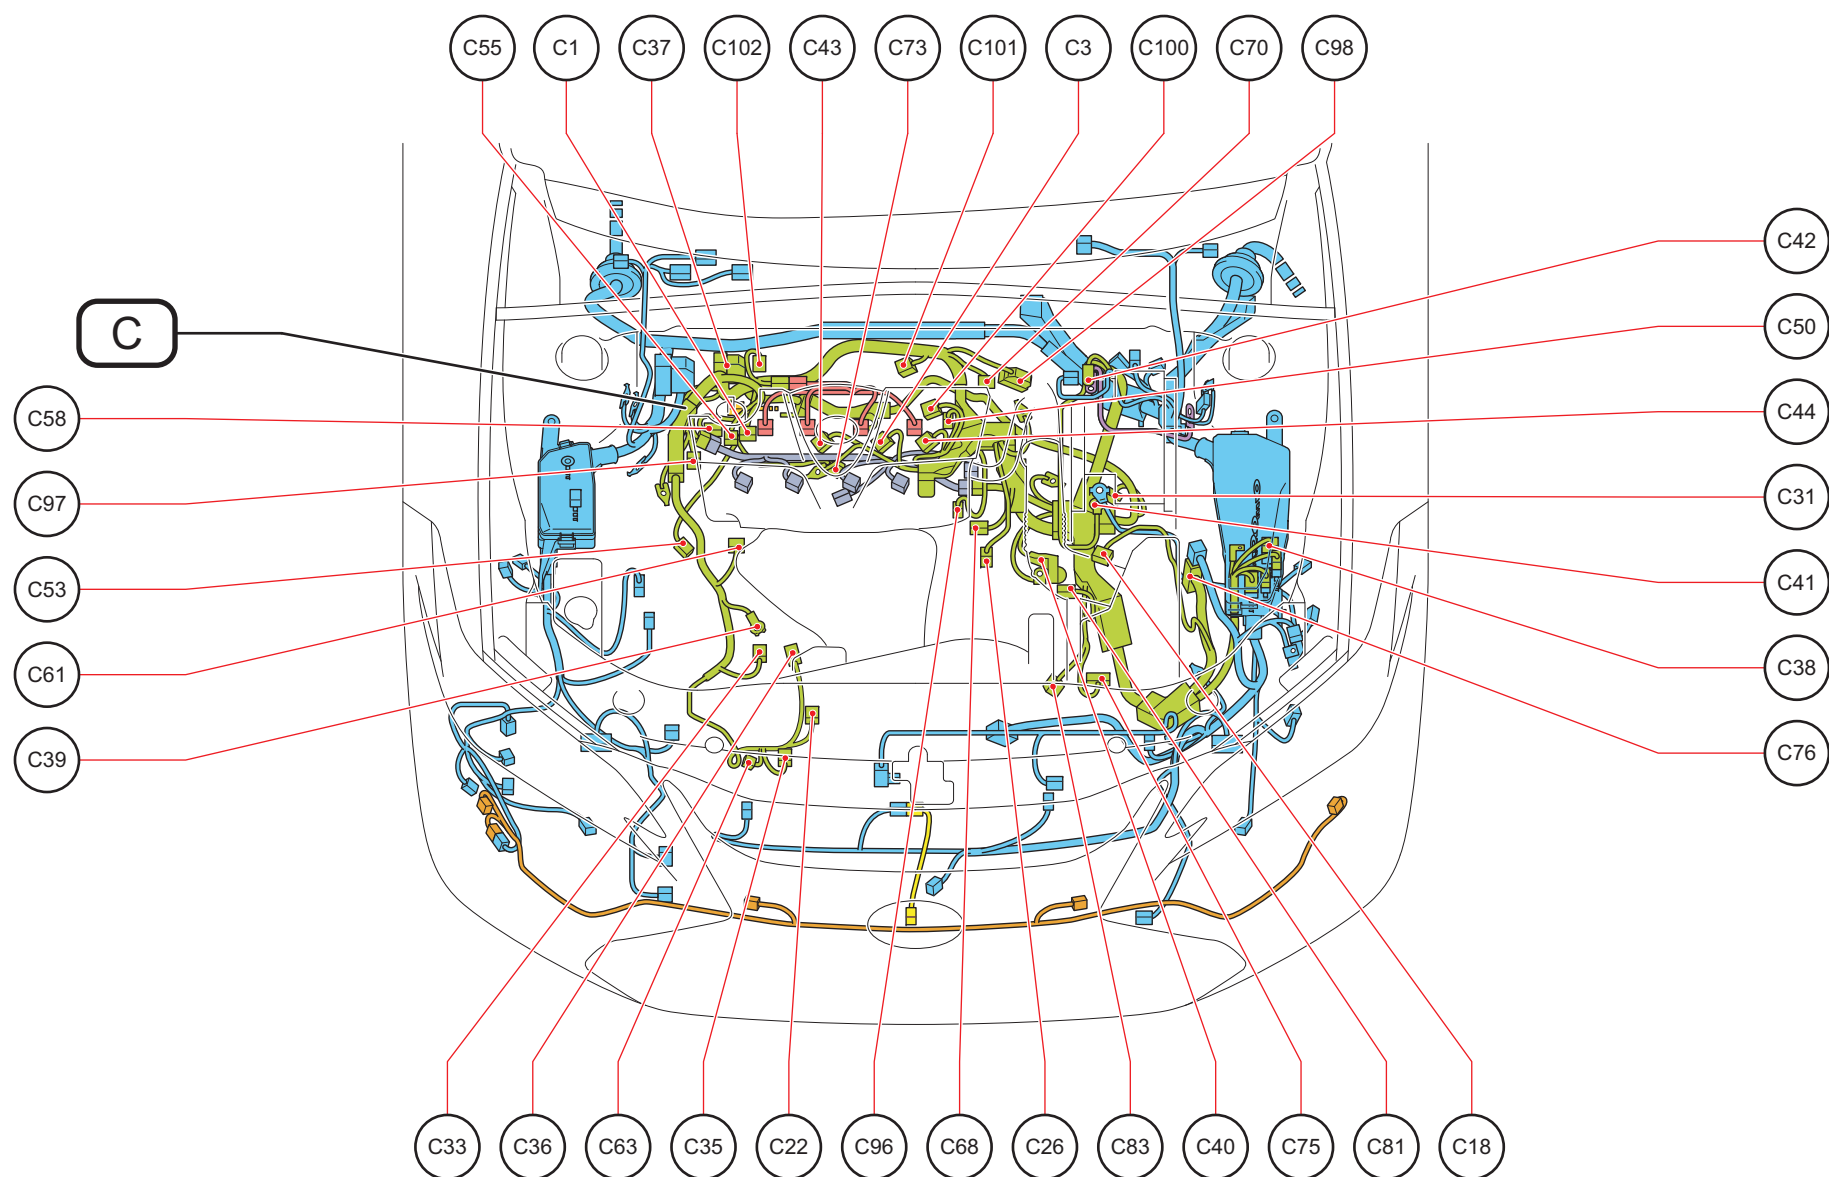

- C 1 No. 1 Ignition Coil Assembly
- C 3 No. 3 Ignition Coil Assembly
- C 18 Intake Mass Air Flow Meter Sub-Assembly
- C 22 Engine Oil Level Sensor
- C 26 Air Fuel Ratio Sensor
- C 31 Park/Neutral Position Switch Assembly
- C 33 Generator Assembly
- C 35 Compressor with Pulley Assembly
- C 36 Compressor with Pulley Assembly
- C 37 Power Steering ECU with Motor Assembly (Rack and Pinion Power Steering Gear Assembly)
- C 38 No. 5 Junction Connector
- C 39 Generator Assembly
- C 40 Starter Assembly
- C 41 Battery
- C 42 Battery
- C 43 No. 2 Ignition Coil Assembly
- C 44 No. 4 Ignition Coil Assembly
- C 50 Camshaft Position Sensor (for Intake Camshaft)
- C 53 Crank Position Sensor
- C 55 Camshaft Timing Oil Control Valve Assembly
- C 58 E.F.I. Vacuum Sensor Assembly
- C 61 Oil Pressure Sender Gage Assembly
- C 63 Temperature Sensor (for Engine Oil)
- C 68 E.F.I. Engine Coolant Temperature Sensor
- C 70 EGR Valve Assembly
- C 73 Oxygen Sensor
- C 75 ECT Solenoid (Transmission Wire)
- C 76 ECM
- C 81 Starter Assembly
- C 83 Oil Pump with Motor Assembly
- C 96 Camshaft Position Sensor (for Exhaust Camshaft)
- C 97 Cam Timing Oil Control Solenoid Assembly
- C 98 Throttle Body with Motor Assembly
- C100 Fuel Pump with Seal Sub-Assembly (for High Pressure Side)
- C101 No. 1 Vacuum Switching Valve Assembly
- C102 No. 2 Fuel Pressure Sensor (for Low Pressure Side)

Position of Parts in Engine Compartment (6AR-FSE)

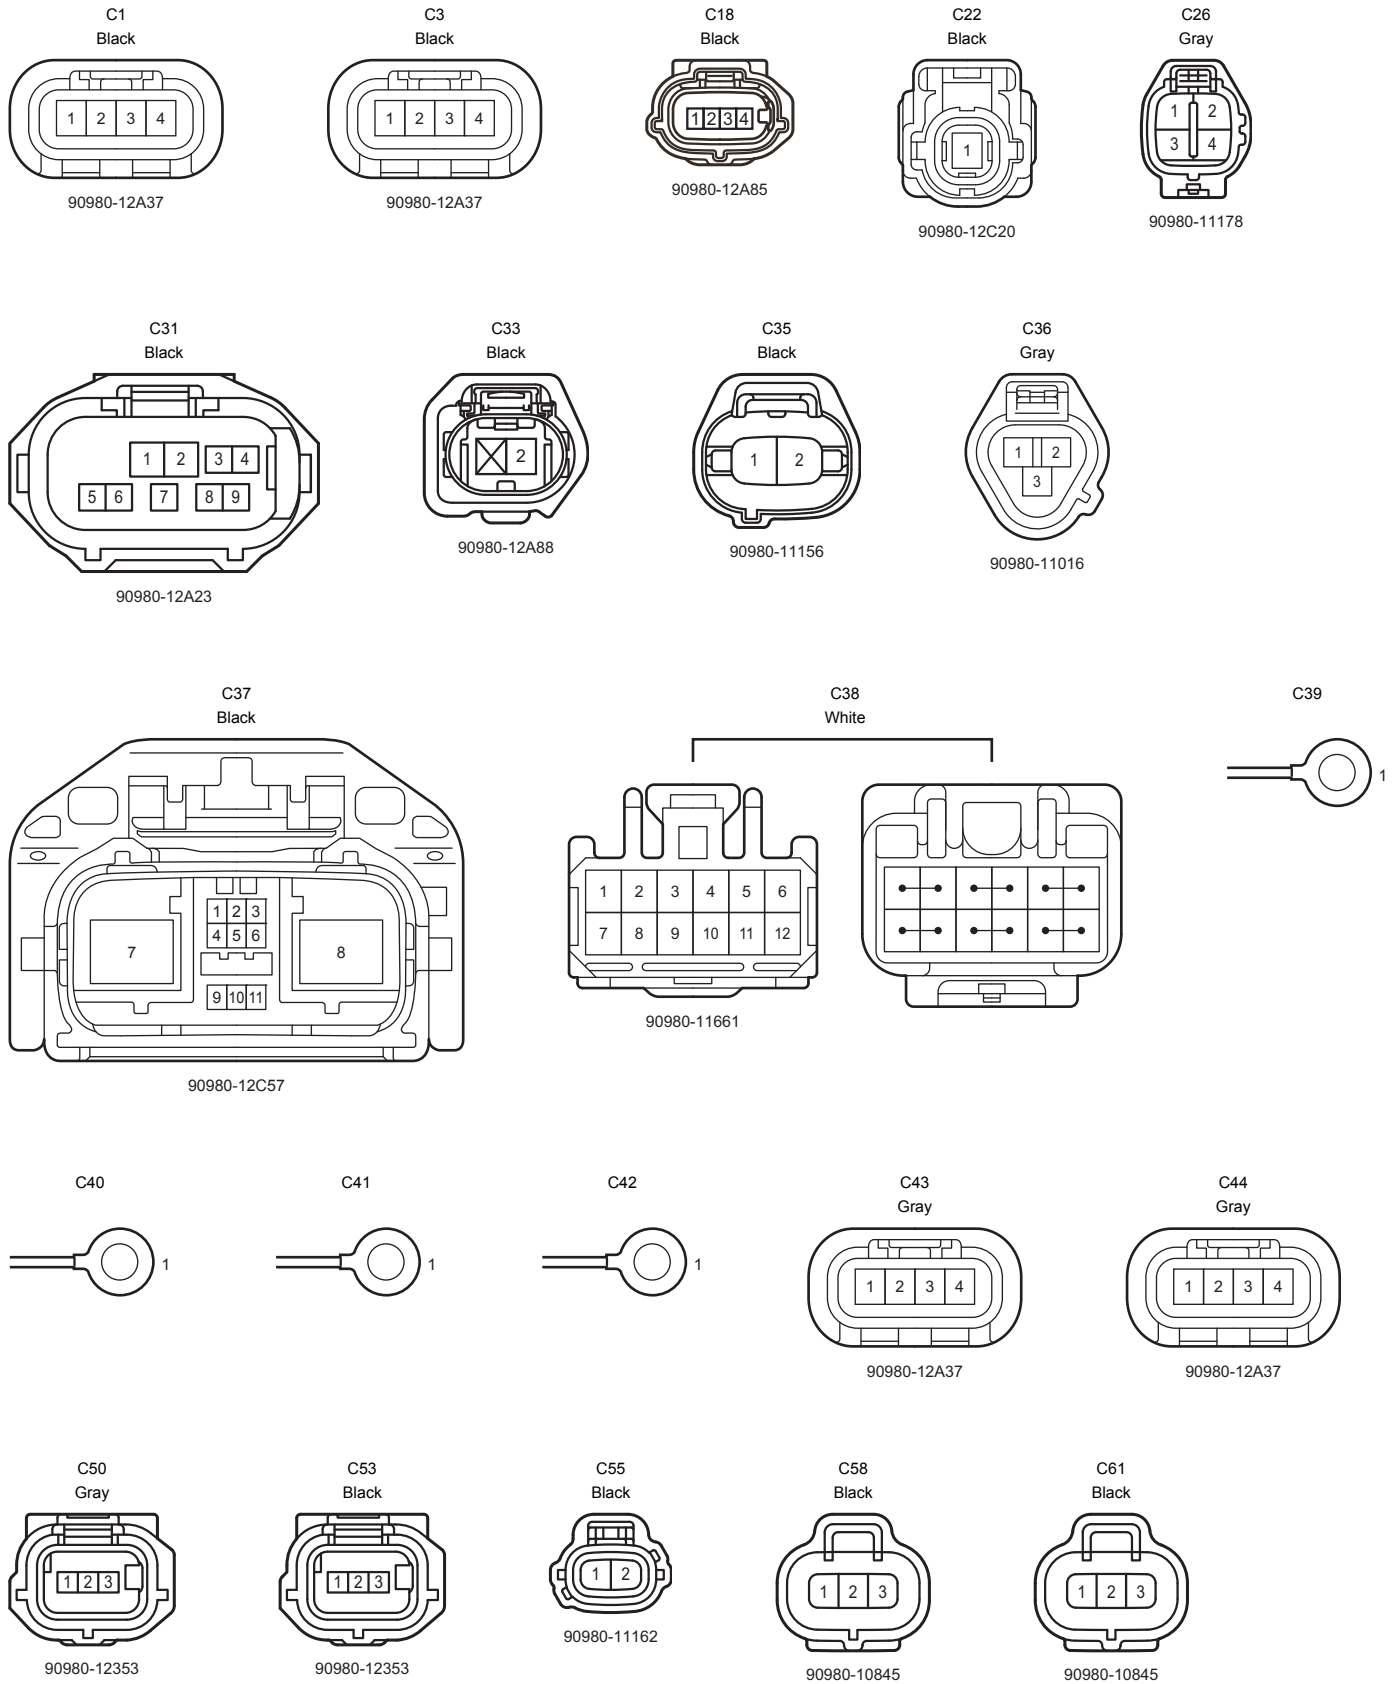

Position of Parts in Engine Compartment (6AR-FSE)

