

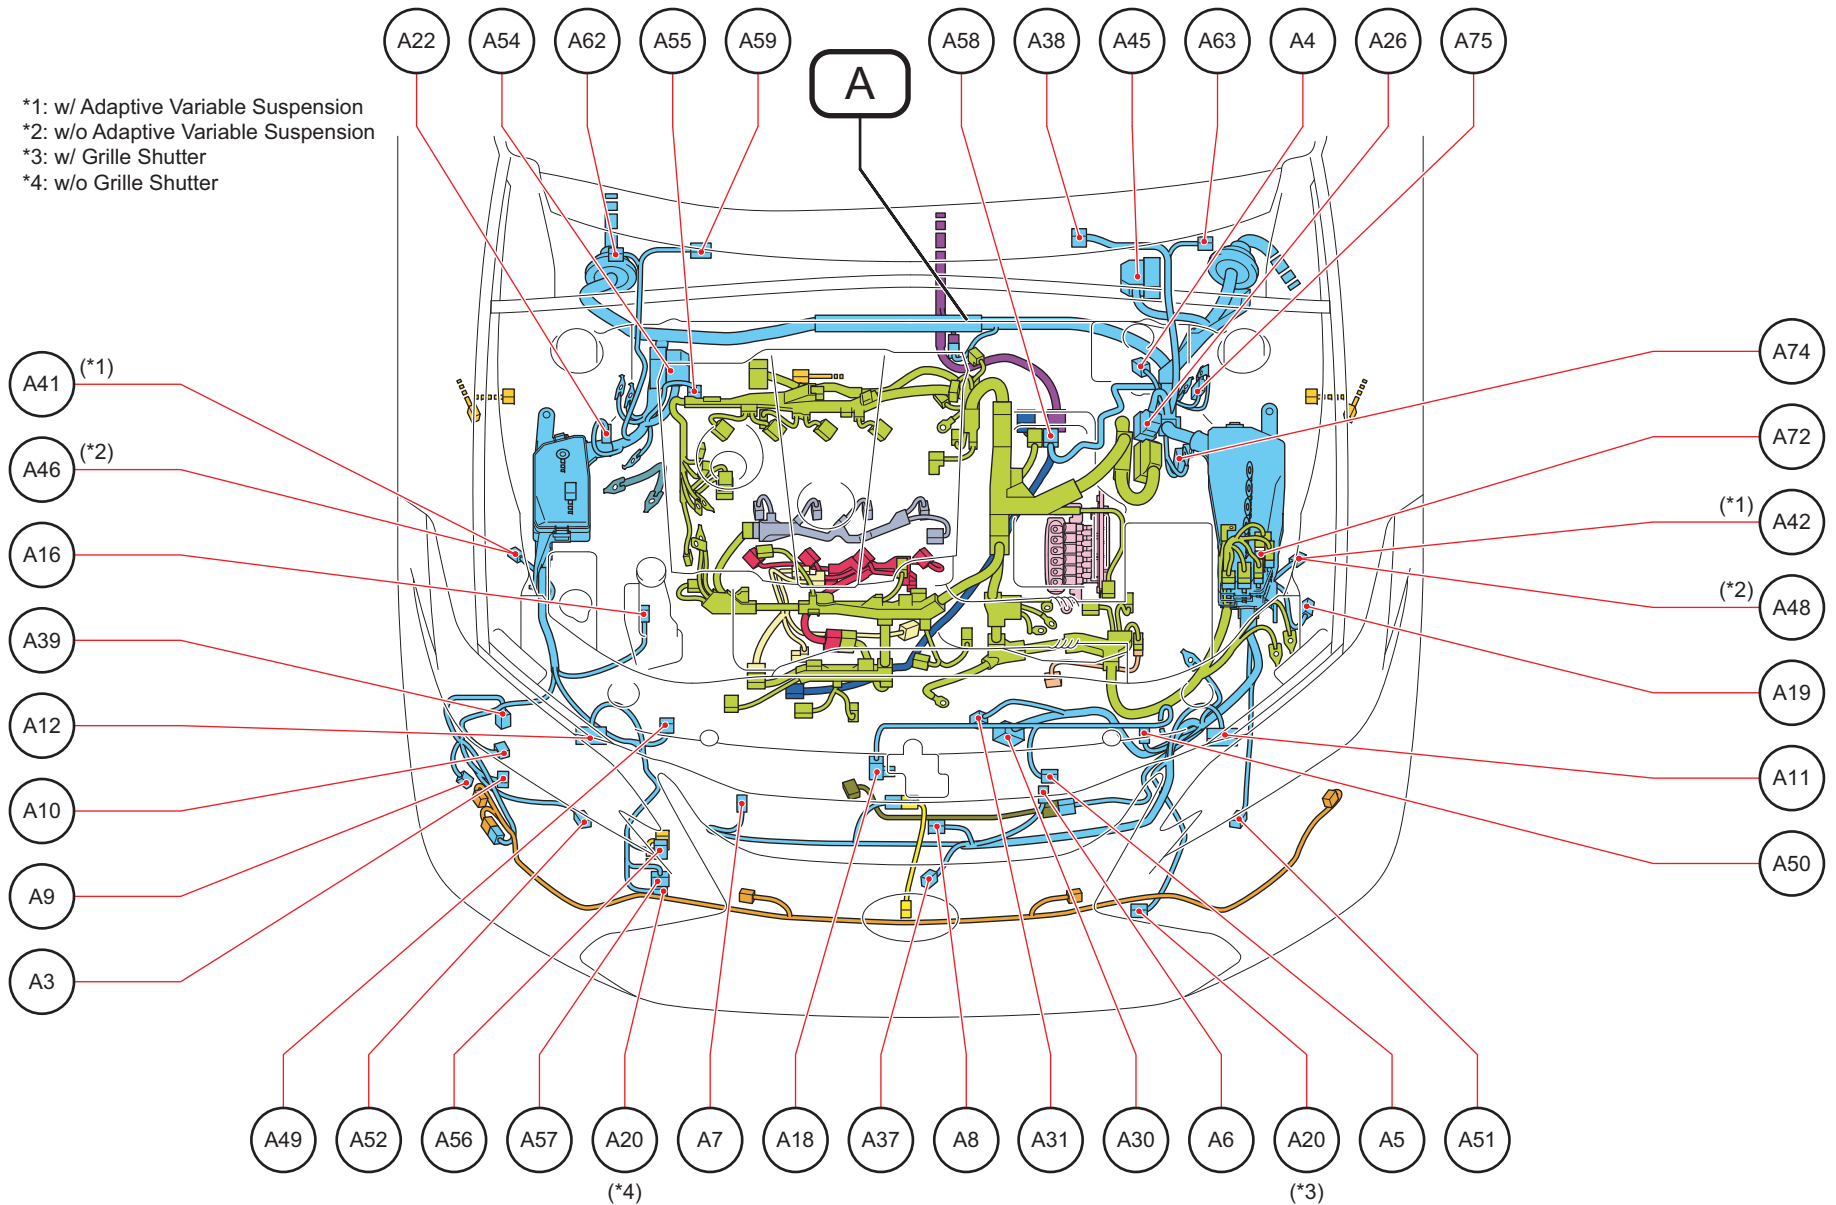
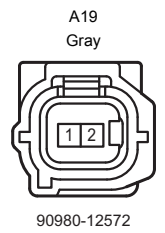
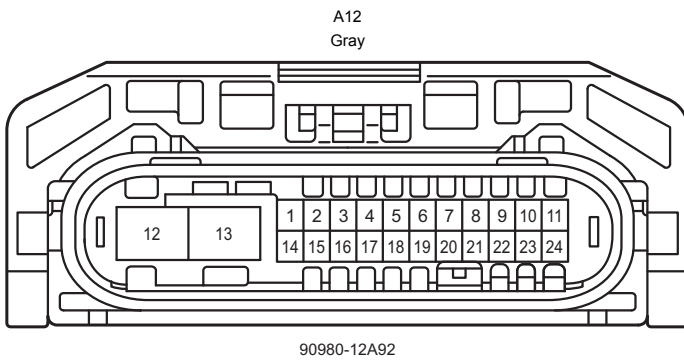
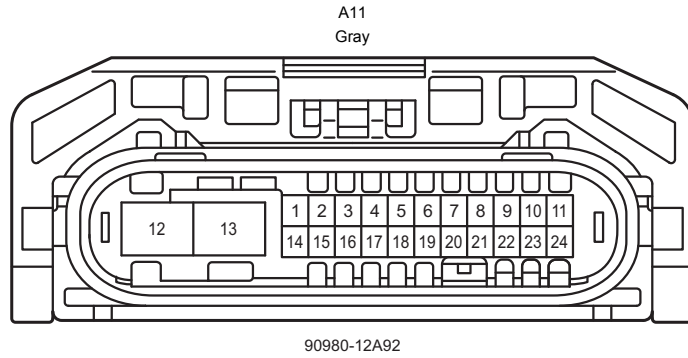
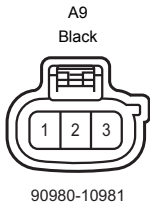











Position of Parts in Engine Compartment (LHD/A25A-FXS)

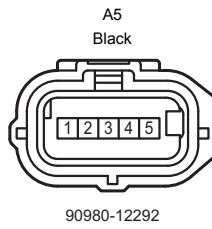

- A 3 Level Warning Switch Assembly
- A 4 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 5 Smog Ventilation Sensor
- A 6 Low Pitched Horn Assembly
- A 7 High Pitched Horn Assembly
- A 8 Vehicle Approaching Speaker Assembly
- A 9 Headlight Cleaner Motor and Pump Assembly
- A 10 Headlight Cleaner Control Relay
- A 11 Headlight ECU Sub-Assembly LH (Headlight Assembly LH)
- A 12 Headlight ECU Sub-Assembly RH (Headlight Assembly RH)
- A 16 Security Horn Assembly
- A 18 Engine Hood Courtesy Switch (Hood Lock Assembly)
- A 19 Wireless Door Lock Buzzer
- A 20 Ambient Temperature Sensor (Thermistor Assembly)
- A 22 Air Conditioner Pressure Sensor
- A 26 ECM
- A 30 Fan with Motor Assembly
- A 31 Fan with Motor Assembly
- A 37 Millimeter Wave Radar Sensor Assembly
- A 38 Windshield Wiper Motor Assembly
- A 39 Windshield Washer Motor and Pump Assembly
- A 41 Skid Control Sensor Wire with Suspension Control RH
- A 42 Skid Control Sensor Wire with Suspension Control LH
- A 45 Brake Booster with Master Cylinder Assembly
- A 46 Front Speed Sensor RH
- A 48 Front Speed Sensor LH
- A 49 Front Airbag Sensor RH
- A 50 Front Airbag Sensor LH
- A 51 Pedestrian Protection Sensor LH (Pedestrian Detection Chamber Assembly)
- A 52 Pedestrian Protection Sensor RH (Pedestrian Detection Chamber Assembly)
- A 54 Brake Actuator Assembly
- A 55 Brake Booster Pump Assembly
- A 56 Swing Grille Actuator Assembly
- A 57 Radiator Shutter Sub-Assembly
- A 58 Inverter with Converter Assembly
- A 59 Front Window Defogger Wire (Windshield Glass)
- A 62 Pop Up Hood Lifter Assembly RH
- A 63 Pop Up Hood Lifter Assembly LH
- A 72 No. 5 Junction Connector
- A 74 No. 1 Ground Junction Connector
- A 75 No. 2 Ground Junction Connector


Position of Parts in Engine Compartment (LHD/A25A-FXS)

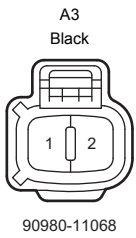

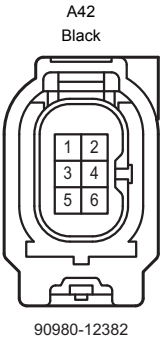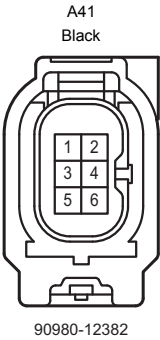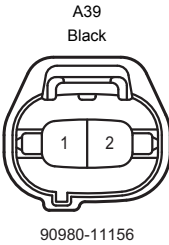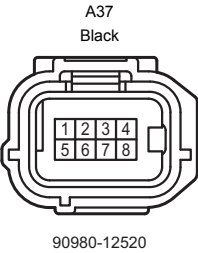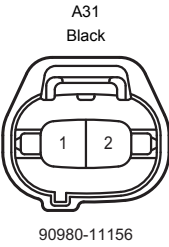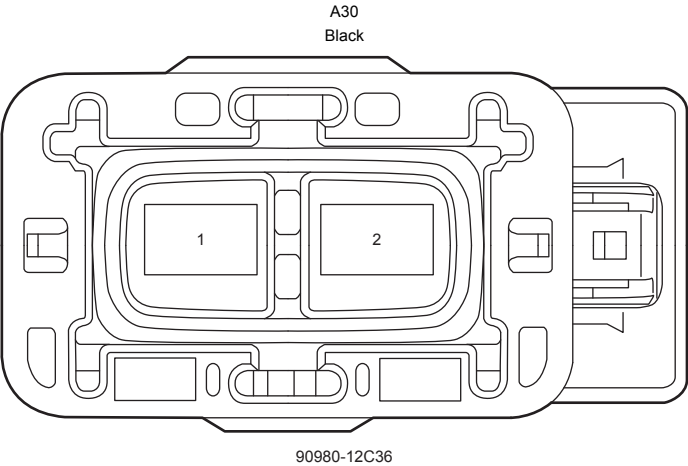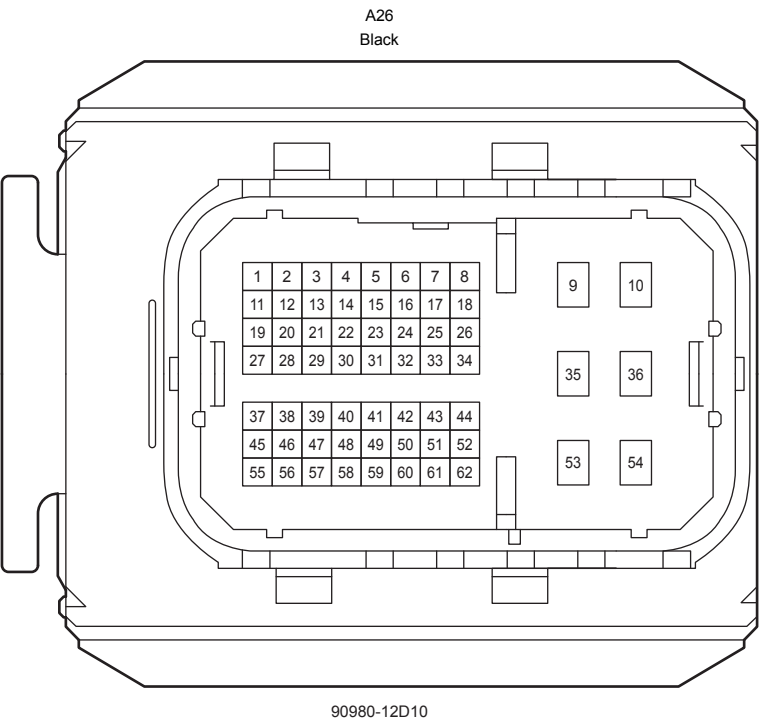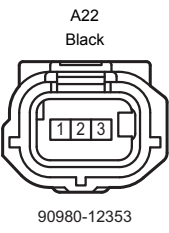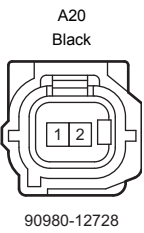

Position of Parts in Engine Compartment (LHD/A25A-FXS)

A45
Black

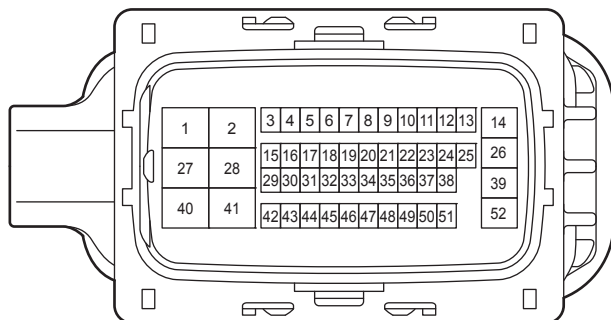

90980-12B87

A46
Black



90980-12627

A48
Black



90980-12627

A49
Yellow



90980-12490

A50
Yellow



90980-12490

A51
Yellow




90980-12490

A52
Yellow




90980-12490

A54
Black

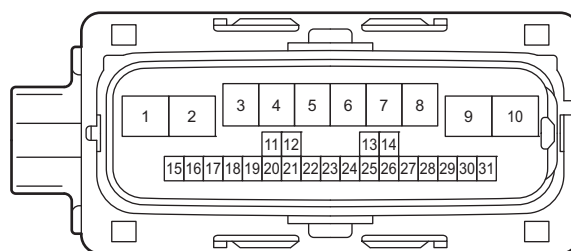


90980-12D29

A55
Black

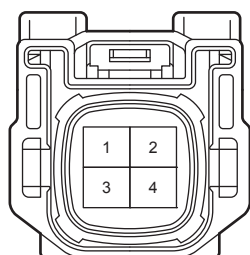

90980-12B91

A56
Black

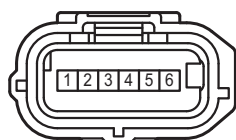


90980-12303

A57
Black



90980-11028

A58
Black

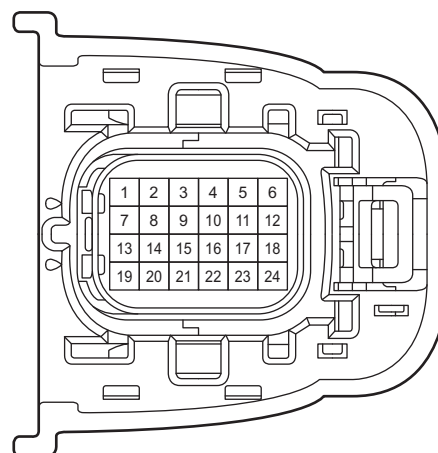

90980-12B86

A59
Black



90980-11155

A62
Yellow




90980-12698

A63
Yellow



90980-12698

A72
White

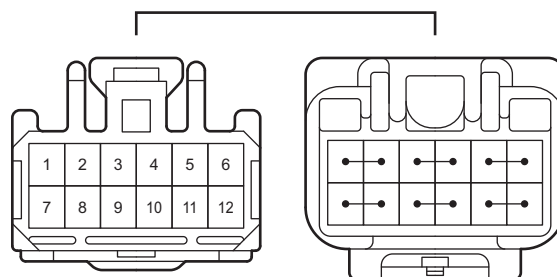

90980-11661

