



Position of Parts in Engine Compartment (LHD/A25A-FXS)

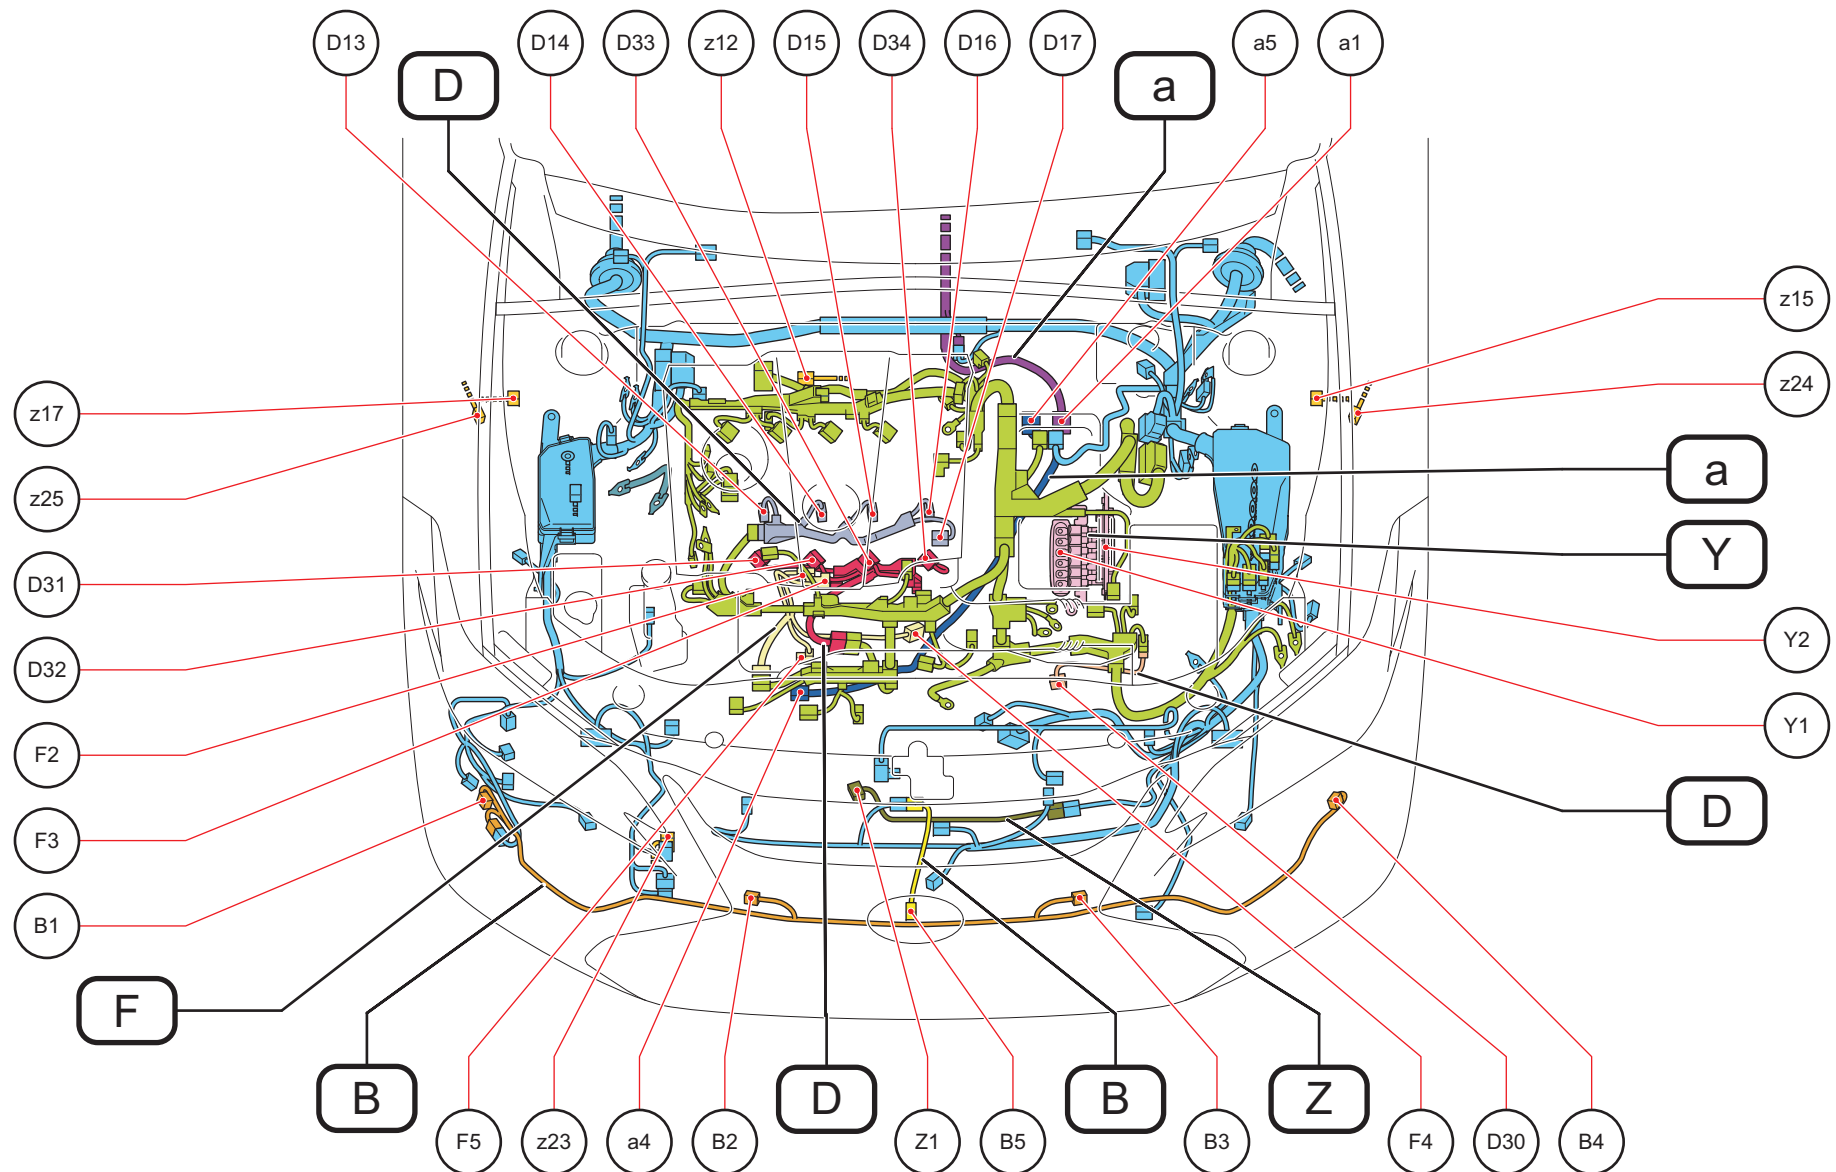

- B 1 Front Corner Ultrasonic Sensor RH
- B 2 Front Center Ultrasonic Sensor RH
- B 3 Front Center Ultrasonic Sensor LH
- B 4 Front Corner Ultrasonic Sensor LH
- B 5 Front Television Camera Assembly
- D 13 No. 1 Port Fuel Injector Assembly
- D 14 No. 2 Port Fuel Injector Assembly
- D 15 No. 3 Port Fuel Injector Assembly
- D 16 No. 4 Port Fuel Injector Assembly
- D 17 No. 2 Fuel Pressure Sensor (for Low Pressure Side)
- D 30 Shift Lever Position Sensor
- D 31 No. 1 Direct Fuel Injector Assembly
- D 32 No. 2 Direct Fuel Injector Assembly
- D 33 No. 3 Direct Fuel Injector Assembly
- D 34 No. 4 Direct Fuel Injector Assembly
- F 2 Fuel Pressure Sensor (for High Pressure Side)
- F 3 Knock Control Sensor
- F 4 Crank Position Sensor
- F 5 Water Inlet with Thermostat Sub-Assembly
- Y 1 Hybrid Vehicle Transaxle Assembly
- Y 2 Inverter with Converter Assembly
- Z 1 Inverter Water Pump with Motor Assembly
- a 1 Inverter with Converter Assembly
- a 4 Compressor with Motor Assembly
- a 5 Inverter with Converter Assembly
- z 12 Steering Torque Sensor Board Sub-Assembly (Rack and Pinion Power Steering Gear Assembly), Power Steering ECU with Motor Assembly (Rack and Pinion Power Steering Gear Assembly)
- z 15 Skid Control Sensor Wire with Suspension Control LH, Front Shock Absorber Assembly LH
- z 17 Skid Control Sensor Wire with Suspension Control RH, Front Shock Absorber Assembly RH
- z 23 Radiator Shutter Sub-Assembly, Swing Grille Actuator Assembly
- z 24 Front Speed Sensor LH, Skid Control Sensor Wire with Suspension Control LH
- z 25 Front Speed Sensor RH, Skid Control Sensor Wire with Suspension Control RH


Position of Parts in Engine Compartment (LHD/A25A-FXS)

B1
Black

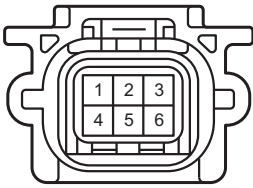


82824-78020

B2
Black

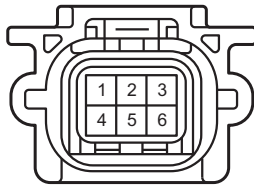


82824-78020

B3
Black

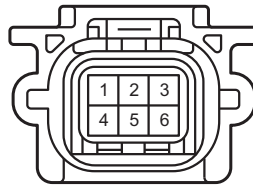

82824-78020

B4
Black

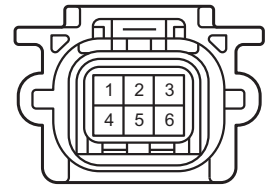


82824-78020

B5
Black




90980-12A59

D13
Black

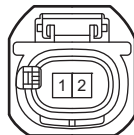

90980-12D16

D14
Black

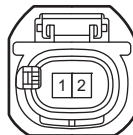

90980-12D16

D15
Black



90980-12D16

D16
Black




90980-12D16

D17
Black



90980-12A19

D30
Black

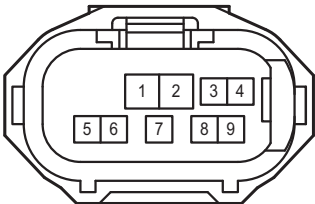


90980-12A23

D31
Black




90980-12D14

D32
Black

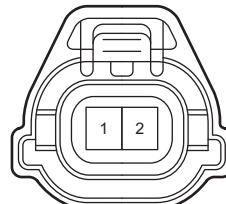


90980-12D14

D33
Black

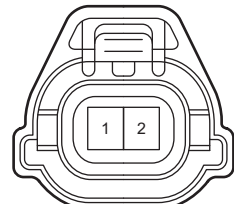

90980-12D14

D34
Black

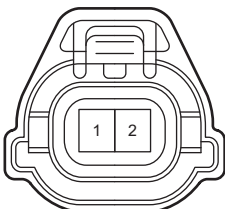


90980-12D14

F2
Black



90980-12A19

 F3
Gray




82824-30290

F4
Black




90980-12D13

F5
Black

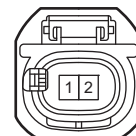

90980-12D16

Y1
Black

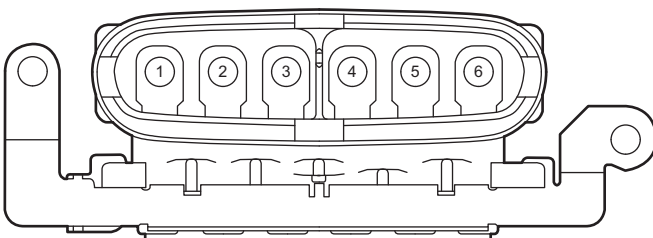

82824-33420

Position of Parts in Engine Compartment (LHD/A25A-FXS)

