



Position of Parts in Seat (RHD/Front Seat)

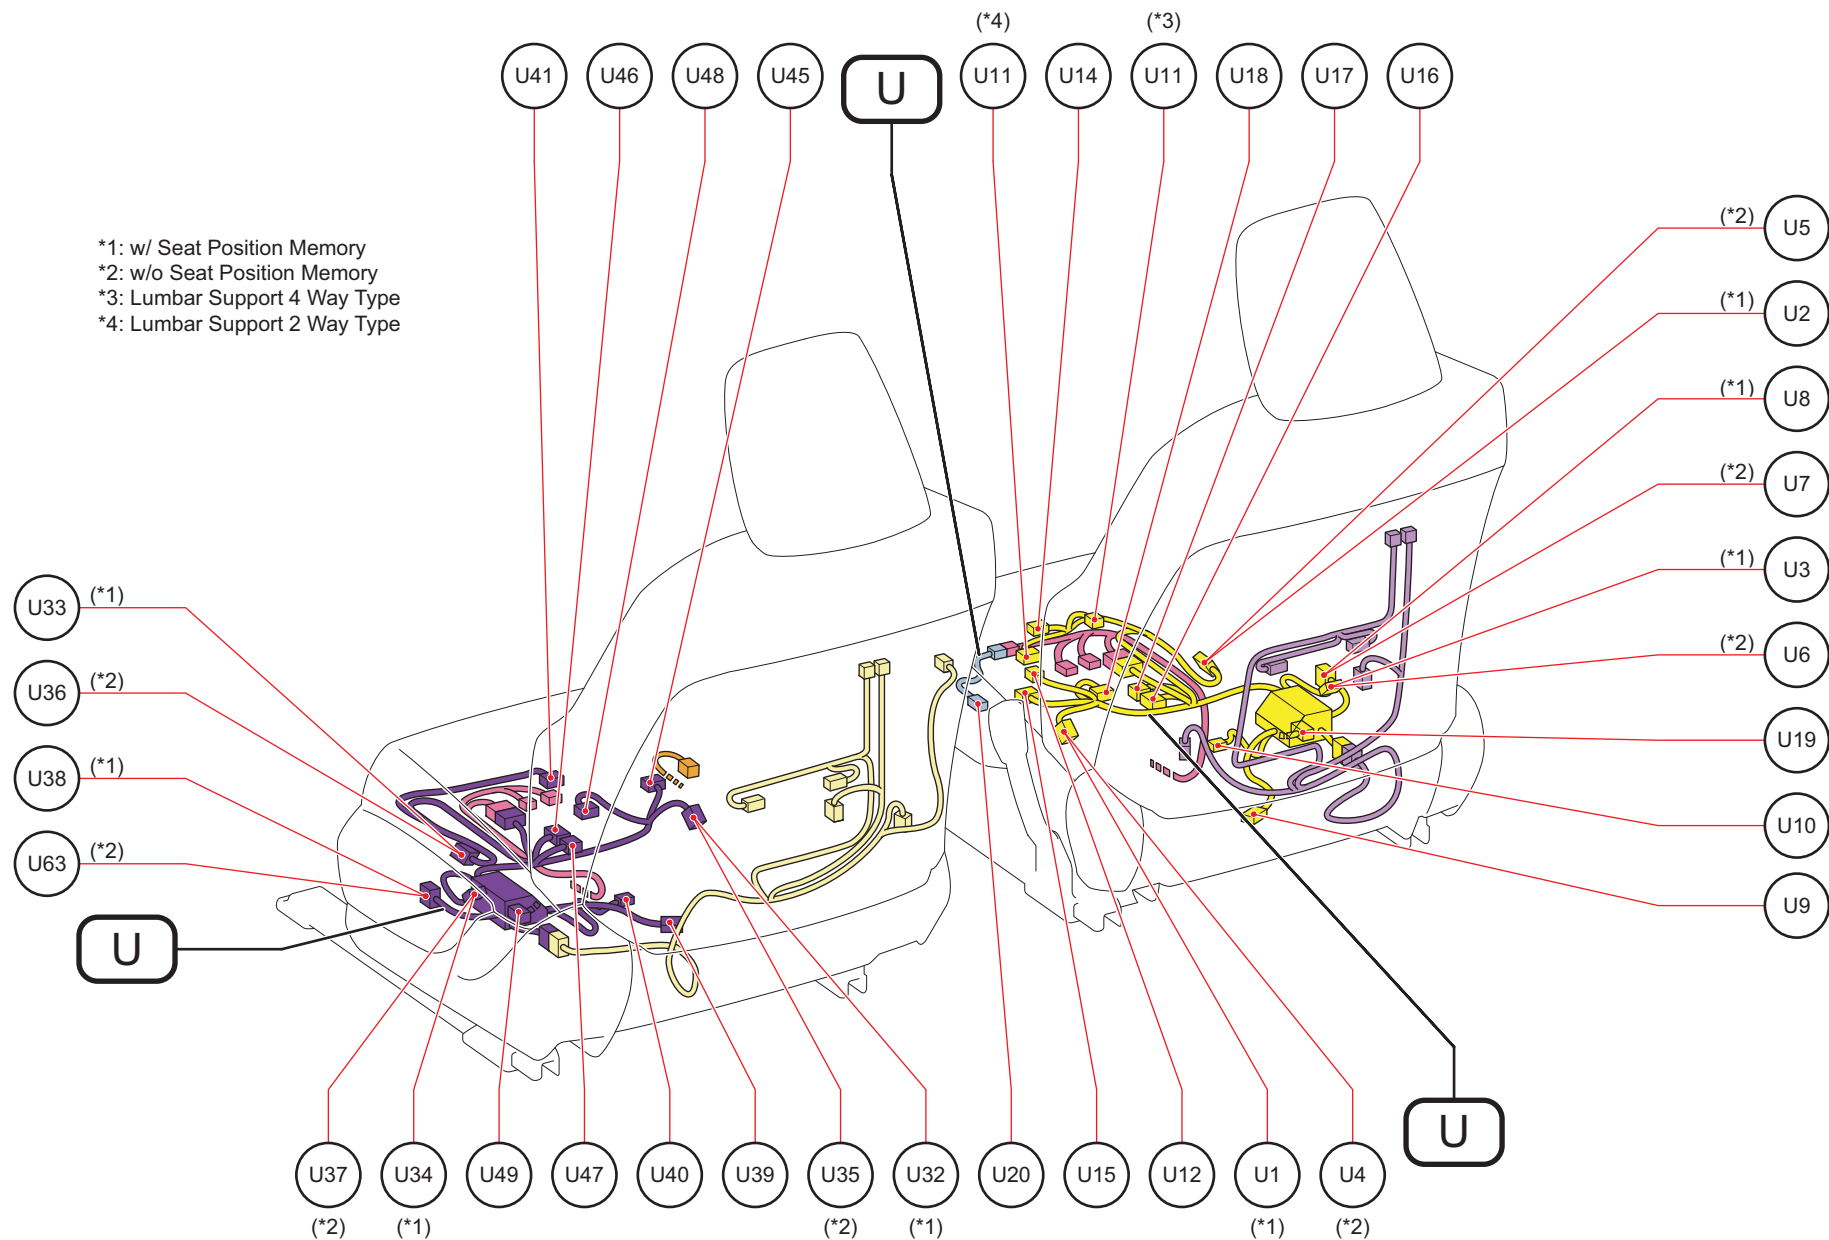


- U 1 Slide Motor (Front Seat Adjuster Assembly RH)
- U 2 Power Seat Tilt Motor Assembly RH (Front Seat Adjuster Assembly RH)
- U 3 Power Seat Lifter Motor Assembly RH (Front Seat Adjuster Assembly RH)
- U 4 Slide Motor (Front Seat Adjuster Assembly RH)
- U 5 Power Seat Tilt Motor Assembly RH (Front Seat Adjuster Assembly RH)
- U 6 Power Seat Lifter Motor Assembly RH (Front Seat Adjuster Assembly RH)
- U 7 Front Power Seat Switch Assembly RH
- U 8 Front Power Seat Switch Assembly RH
- U 9 Front Seat Cushion Heater Assembly RH
- U 10 Rear Footwell Light (No. 1 Interior Illumination Light Assembly RH)
- U 11 Seat Climate Control Blower RH
- U 12 Front Seat Inner Belt Assembly RH
- U 14 Cushion Motor (Front Seat Adjuster Assembly RH)
- U 15 Seat Heater Control Sub-Assembly RH
- U 16 Position Control ECU Assembly RH
- U 17 Position Control ECU Assembly RH
- U 18 Position Control ECU Assembly RH
- U 19 No. 32 Junction Connector
- U 20 Seat Position Air Bag Sensor
- U 32 Slide Motor (Front Seat Adjuster Assembly LH)
- U 33 Power Seat Tilt Motor Assembly LH (Front Seat Adjuster Assembly LH)
- U 34 Power Seat Lifter Motor Assembly LH (Front Seat Adjuster Assembly LH)
- U 35 Slide Motor (Front Seat Adjuster Assembly LH)
- U 36 Power Seat Tilt Motor Assembly LH (Front Seat Adjuster Assembly LH)
- U 37 Power Seat Lifter Motor Assembly LH (Front Seat Adjuster Assembly LH)
- U 38 Front Power Seat Switch Assembly LH
- U 39 Front Seat Cushion Heater Assembly LH
- U 40 Rear Footwell Light (No. 1 Interior Illumination Light Assembly LH)
- U 41 Seat Climate Control Blower LH
- U 45 Seat Heater Control Sub-Assembly LH
- U 46 Position Control ECU Assembly LH
- U 47 Position Control ECU Assembly LH
- U 48 Position Control ECU Assembly LH
- U 49 No. 33 Junction Connector
- U 63 Front Power Seat Switch Assembly LH


Position of Parts in Seat (RHD/Front Seat)

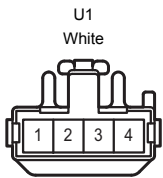


90980-12335

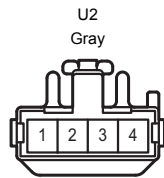


90980-12335

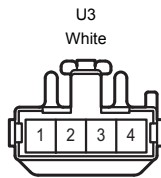


90980-12335

 


90980-12341

 


90980-12341

 


90980-12341

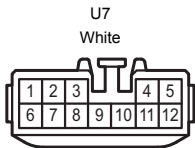


90980-10803

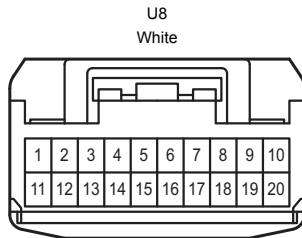


90980-12460

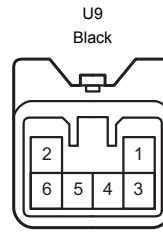


90980-10796

 


90980-11918

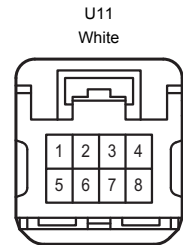


90980-12735

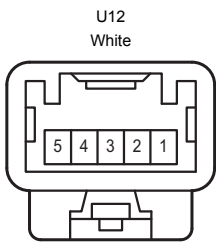


90980-12365

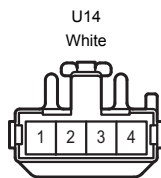


90980-12335

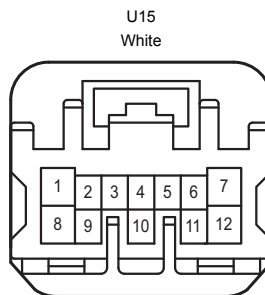


90980-12812

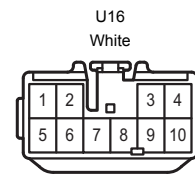


90980-10997

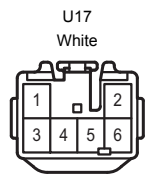


90980-10996

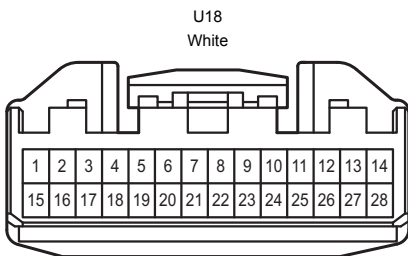


90980-12555

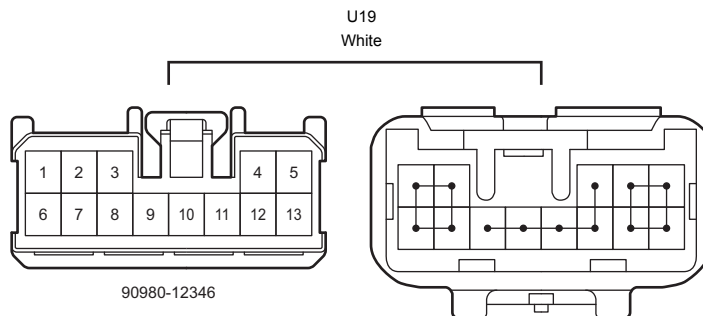


90980-12346

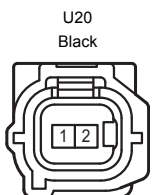


90980-12416

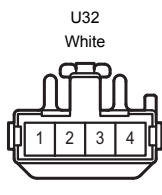


90980-12335

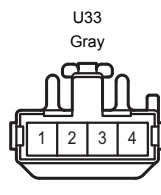


90980-12335

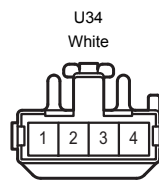

90980-12335

 

90980-12341

 

90980-12341

Position of Parts in Seat (RHD/Front Seat)

