

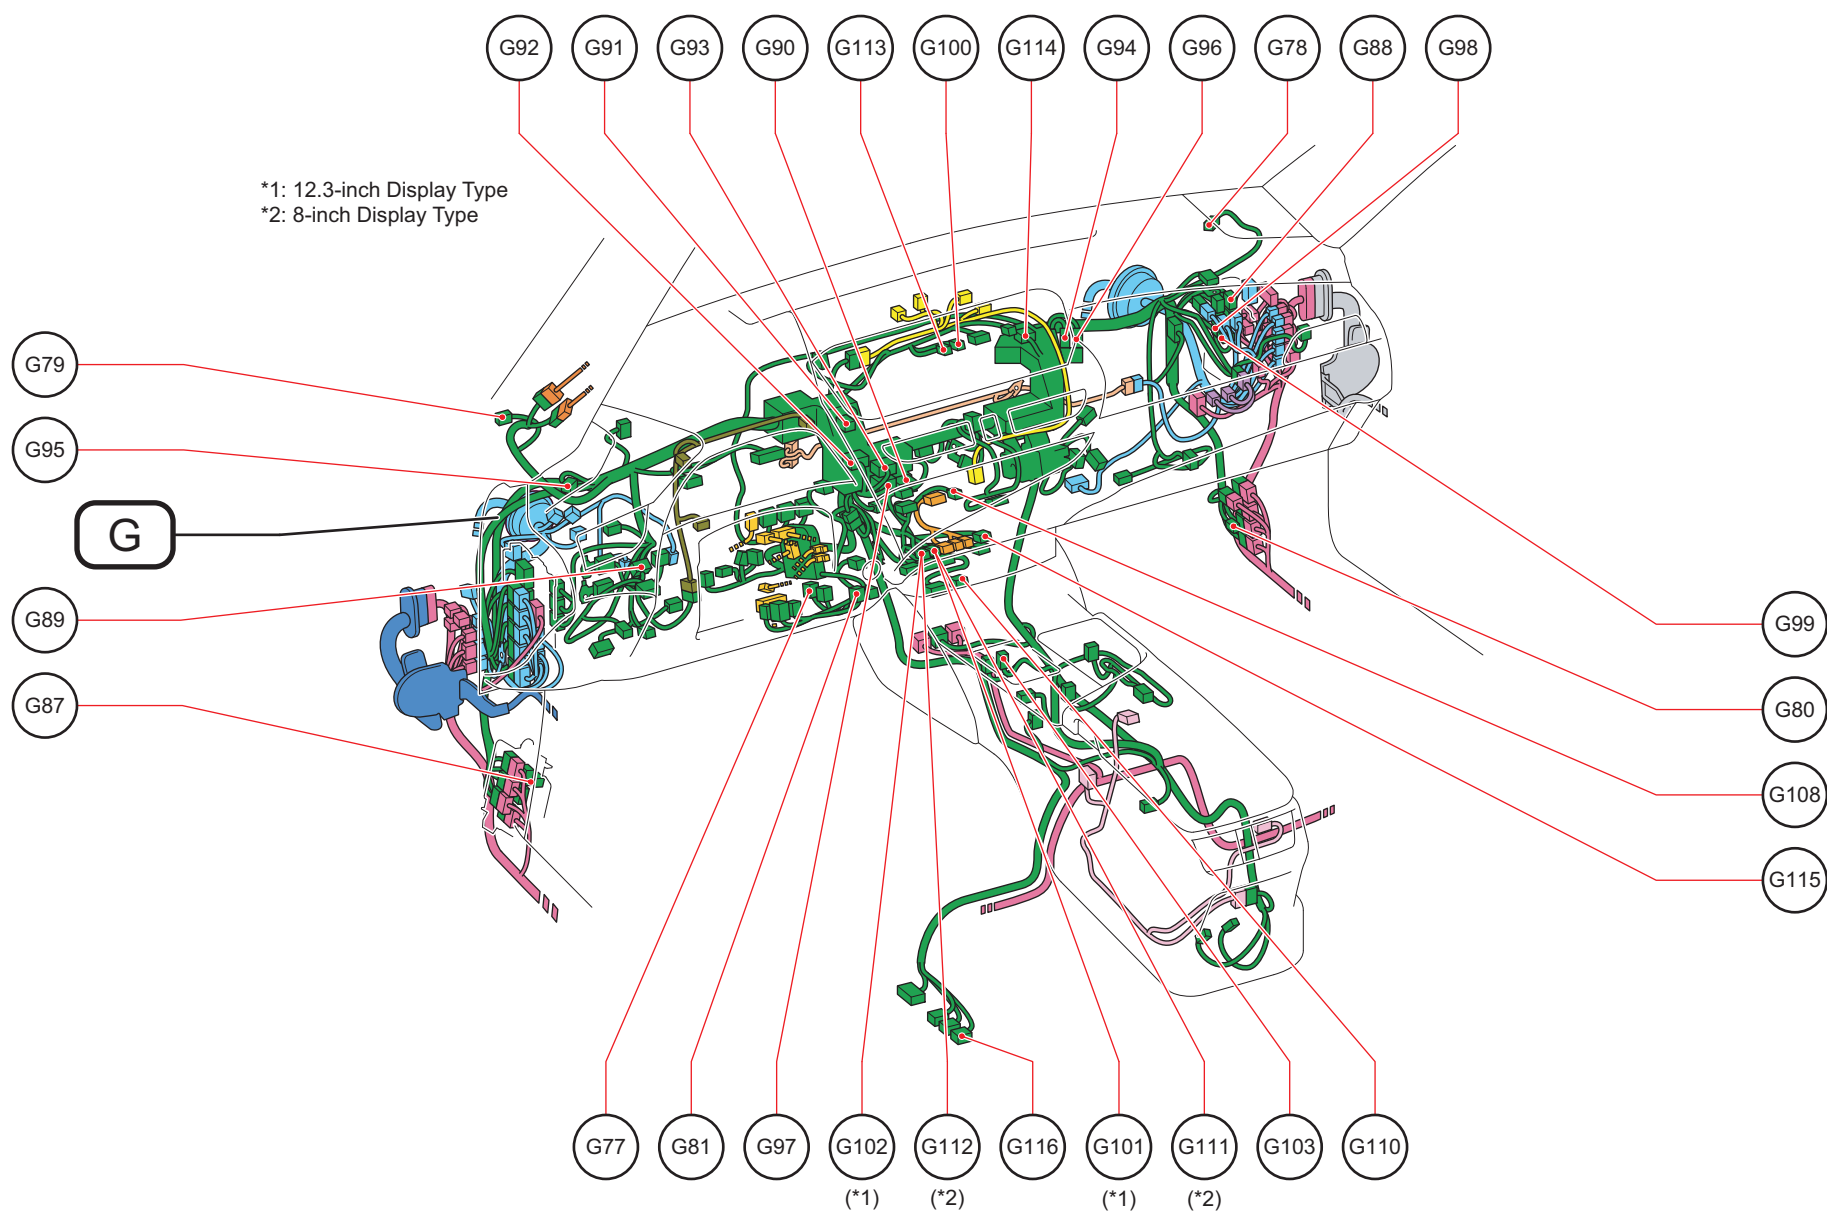
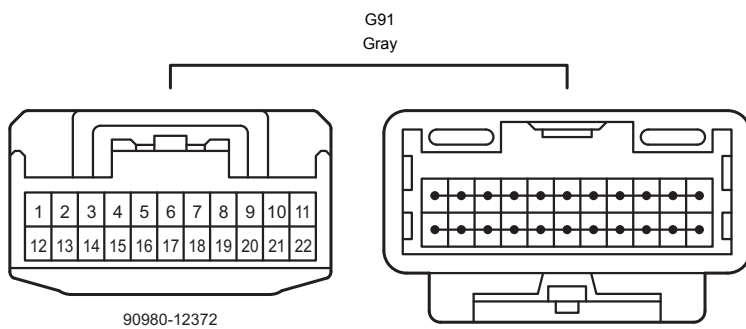
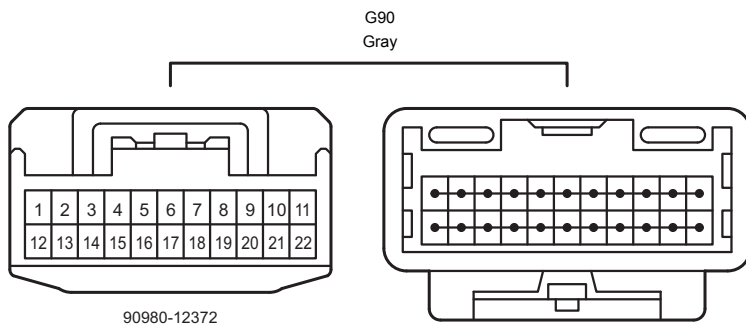
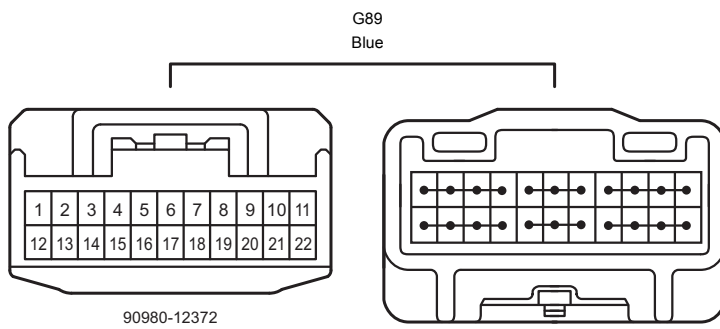
 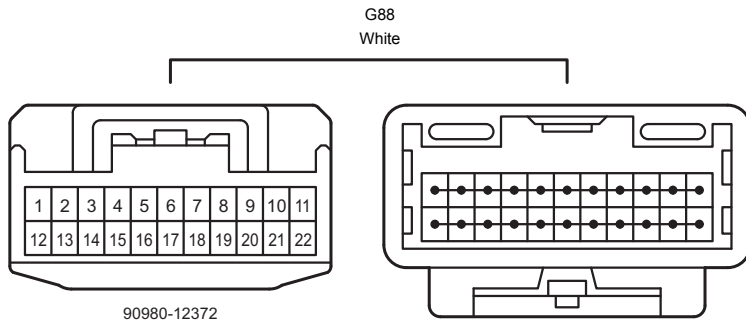
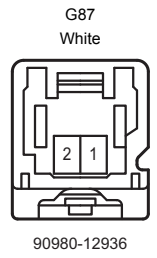

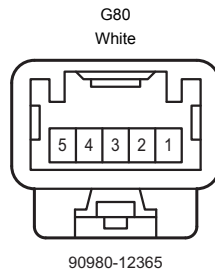



Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

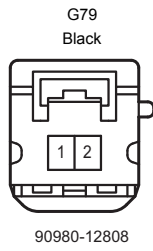


G 77	Steering Column Assembly
G 78	Front No. 2 Speaker Assembly RH
G 79	Front No. 2 Speaker Assembly LH
G 80	Option Connector (Remote Start)
G 81	Spiral Cable Sub-Assembly
G 87	Option Connector
G 88	No. 8 Junction Connector
G 89	No. 9 Junction Connector
G 90	No. 10 Junction Connector
G 91	No. 11 Junction Connector
G 92	No. 12 Junction Connector
G 93	No. 13 Junction Connector
G 94	No. 14 Junction Connector
G 95	No. 16 Junction Connector
G 96	No. 17 Junction Connector
G 97	No. 5 CAN Junction Connector
G 98	No. 4 CAN Junction Connector
G 99	No. 4 CAN Junction Connector
G100	Multi-Display Assembly
G101	Radio Receiver Assembly
G102	Radio Receiver Assembly
G103	No. 1 Stereo Jack Adapter Assembly
G108	Navigation ECU
G110	Telematics Transceiver
G111	Radio Receiver Assembly
G112	Radio Receiver Assembly
G113	Multi-Display Assembly
G114	No. 15 Junction Connector
G115	Radio Receiver Assembly
G116	Stereo Component Amplifier Assembly

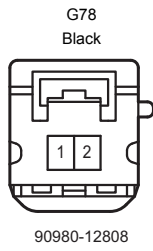


G92
Gray

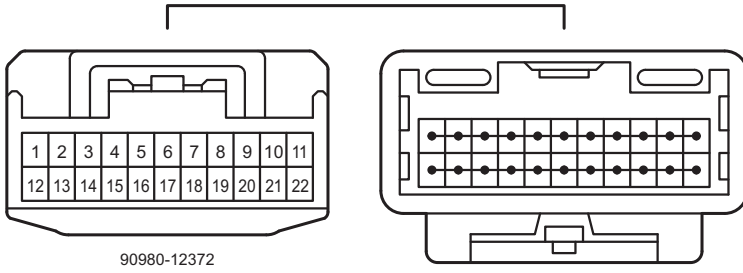


G93
Gray

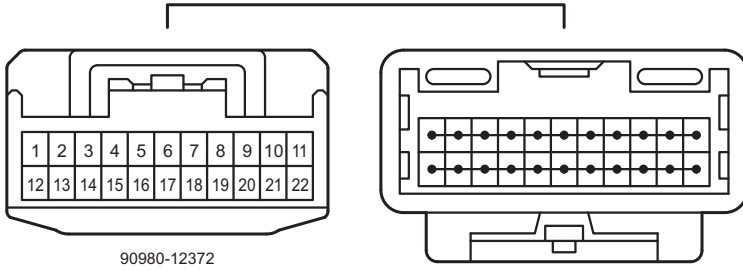

G94
Gray

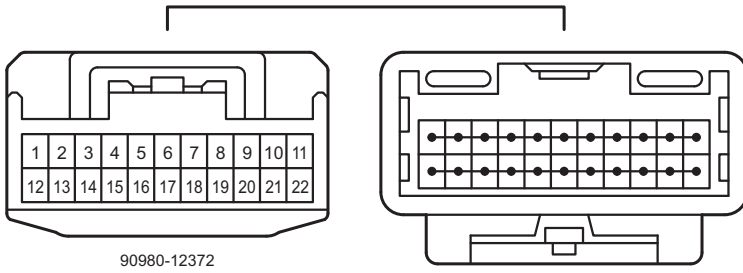


G95
White

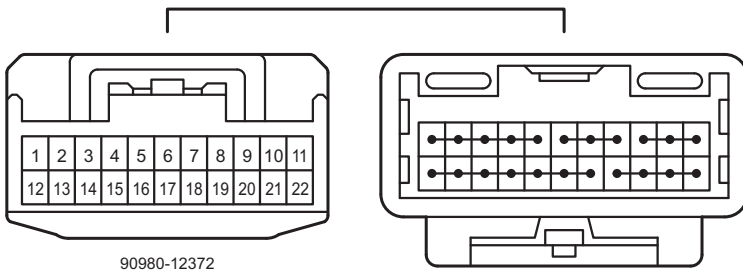


Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)


G96
White

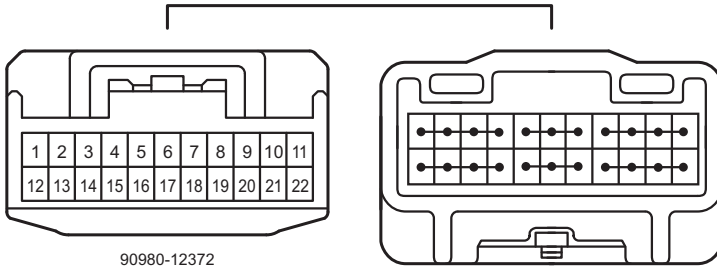


G97
Blue

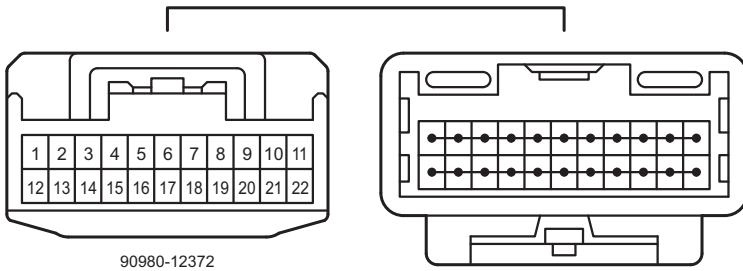

G98
White

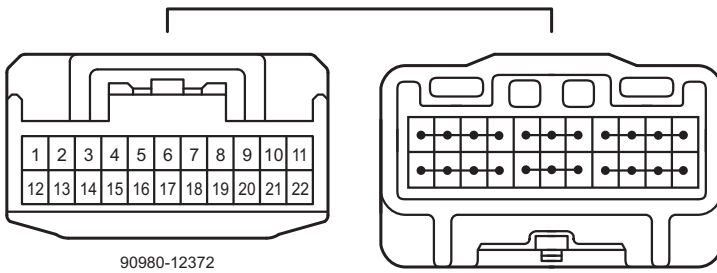


G99
White

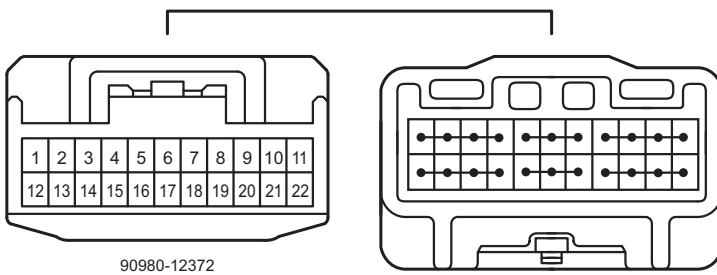

G100
Black



G101
Light Blue

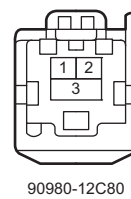

G102
Gray




G103
Brown




G108
White



G110
White

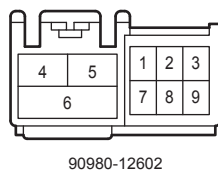


G111
Light Blue

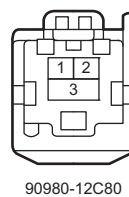

G112
Gray



G113
Light Blue

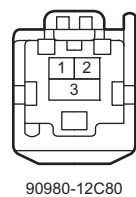

Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

