



Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

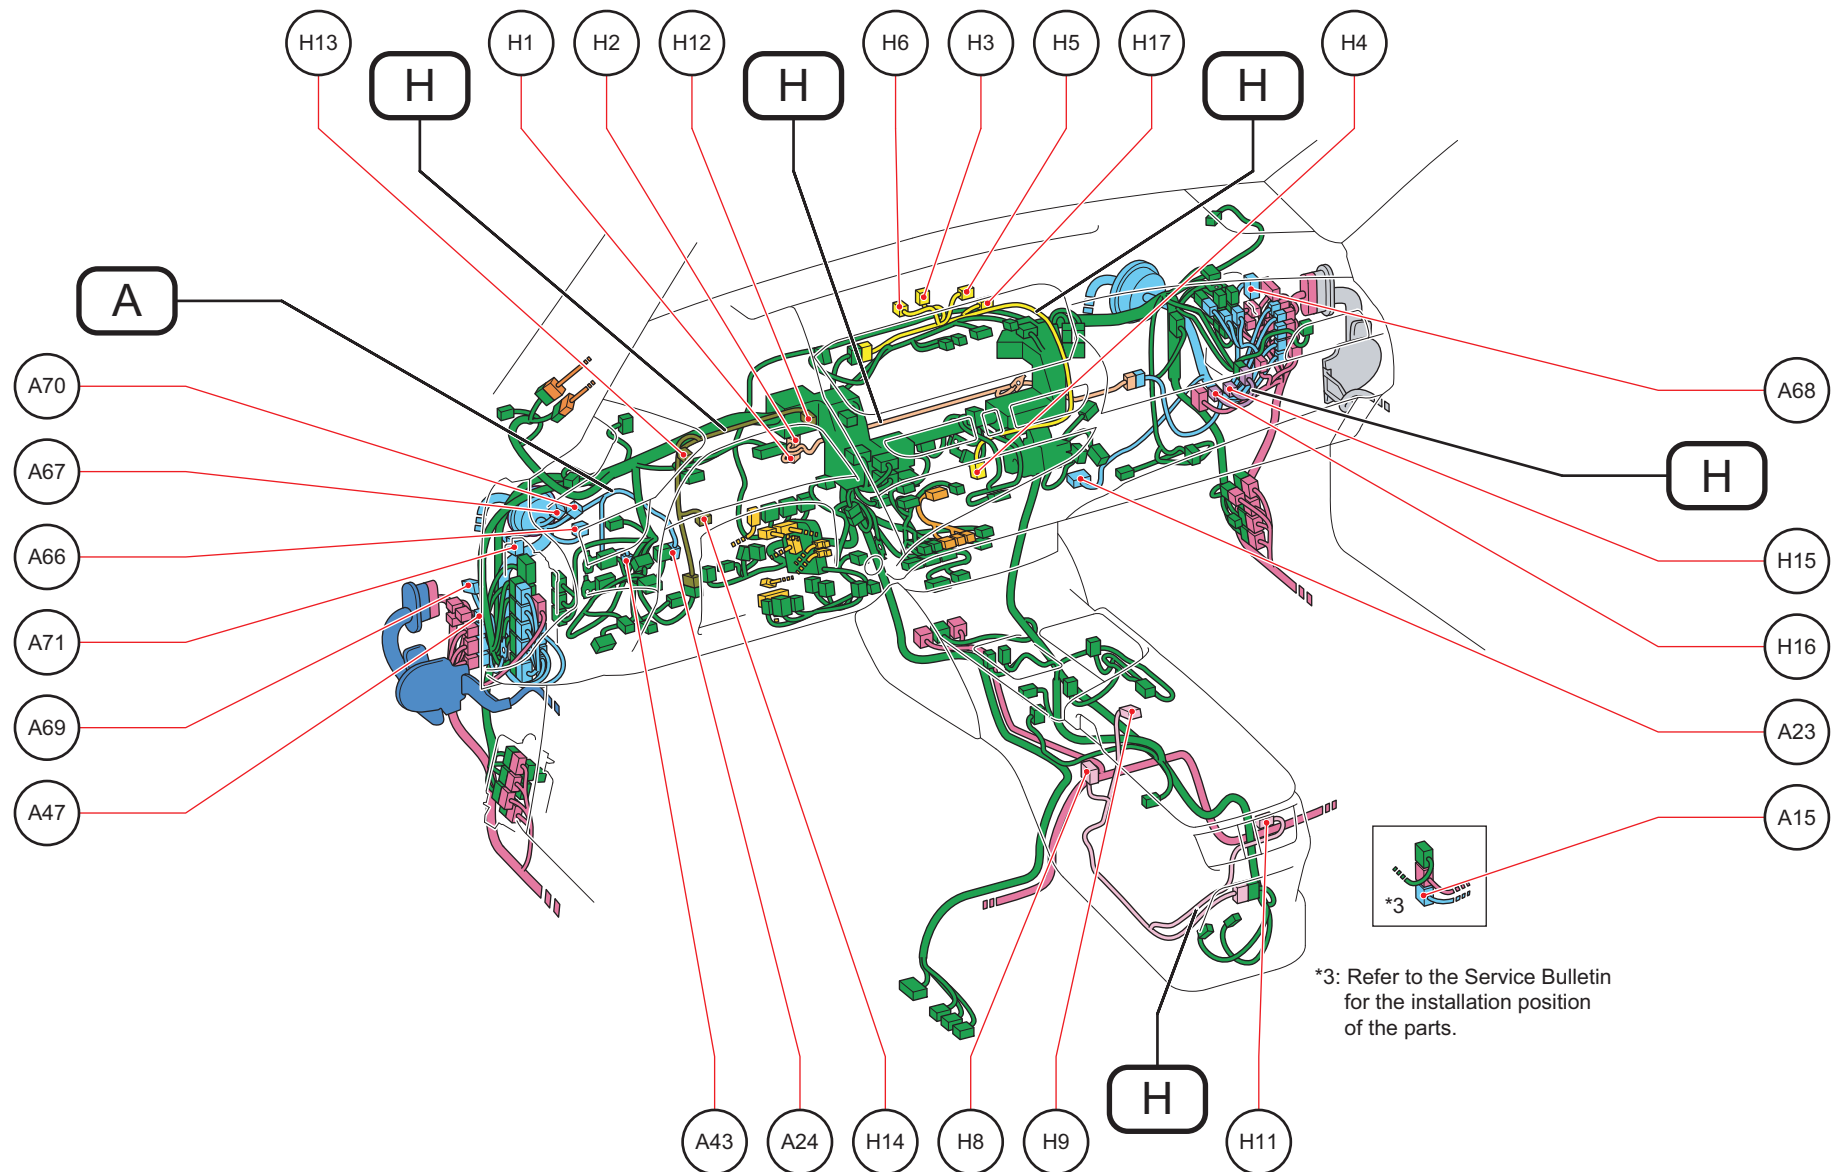


- A 15 Certification ECU (Smart Key ECU Assembly)
- A 23 Blower with Fan Motor Sub-Assembly
- A 24 Accelerator Pedal Sensor Assembly
- A 43 Stop Light Switch Assembly
- A 47 Diode (Park/Neutral Position Switch Assembly)
- A 66 Acceleration Sensor Assembly LH
- A 67 No. 3 Junction Connector
- A 68 No. 1 CAN Junction Connector
- A 69 No. 2 CAN Junction Connector
- A 70 No. 4 Junction Connector
- A 71 No. 2 Junction Connector
- H 1 Quick Heater Assembly
- H 2 Quick Heater Assembly
- H 3 Automatic Light Control Sensor
- H 4 Ion Generator Sub-Assembly
- H 5 No. 1 Instrument Panel Light Sub-Assembly (Front Passenger Side)
- H 6 Front No. 3 Speaker Assembly
- H 8 Mobile Wireless Charger Cradle Assembly
- H 9 No.2 Power Outlet Socket Assembly
- H 11 Console Box Illumination Light Assembly
- H 12 Combination Switch Assembly
- H 13 VSC Off Switch
- H 14 Trip Switch
- H 15 Instrument Panel Passenger Airbag without Door Assembly
- H 16 Instrument Panel Passenger Airbag without Door Assembly
- H 17 Short Pin (Wiring Harness Connector)

A15
White

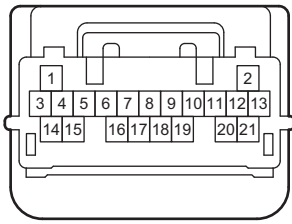


90980-12B76

A23
White

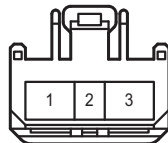


90980-11667

A24
Black

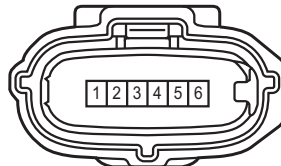


90980-12831

A43
Black

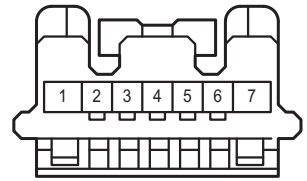

90980-12092

 A47
White




90980-11071

A66
Black




90980-10845

A67
Black

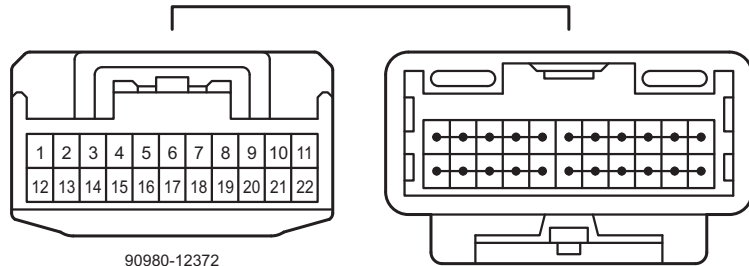


90980-12372

A68
White

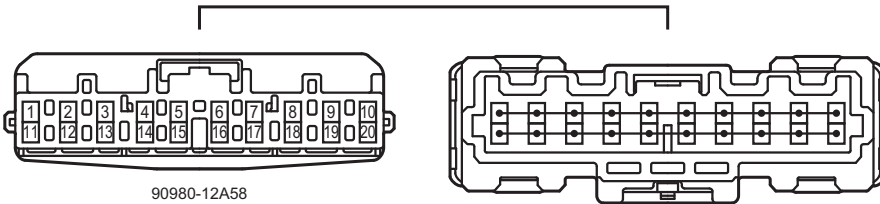


90980-12A58

A69
White

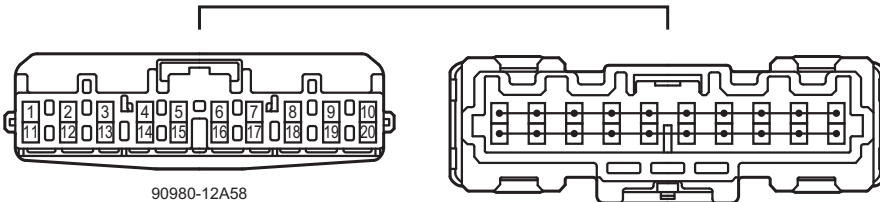

90980-12A58

A70
Blue

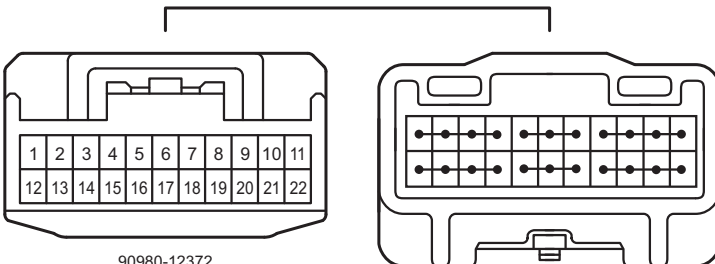

90980-12372

Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

