 
 



NOTICE :When inspecting or repairing the SRS, perform service in accordance with the following precautionary instructions and the procedure, and precautions in the Repair Manual applicable for the model year.


- * Malfunction symptoms of the SRS are difficult to confirm, so the DTCs become the most important source of information when troubleshooting. When troubleshooting the SRS, always inspect the DTCs before disconnecting the battery.
- * Work must be started more than 90 seconds after the engine switch is pushed to the "OFF" position (Engine switch type) or the power switch is pushed to the "OFF" position (Power switch type) and the negative (-) terminal cable is disconnected from the battery. (The SRS is equipped with a back-up power source so that if work is started within 90 seconds from disconnecting the negative (-) terminal cable of the battery, the SRS may deploy.)
- * When the negative (-) terminal cable is disconnected from the battery, the memory of the clock and audio system will be cleared. So before starting work, make a record of the contents in the audio memory system. When work is finished, reset the audio systems as they were before and adjust the clock. Some vehicles have power tilt steering, power telescopic steering, power seat and power outside rear view mirror which are all equipped with memory function. However, it is not possible to make a record of these memory contents. So when the work is finished, it will be necessary to explain it to your customer, and ask the customer to adjust the features and reset the memory. To avoid erasing the memory in each system, never use a back-up power supply from outside the vehicle.
- * Before repair, remove the airbag sensor if shocks are likely to be applied to the sensor during repair.
- * Do not expose the following parts directly to hot air or flame;
- * Even in cases of a minor collision where the SRS does not deploy, the following parts should be inspected;
- * Never use SRS parts from another vehicle. When replacing parts, replace with new parts.
- * For the purpose of reuse, never disassemble and repair the following parts.
- * If the following parts have been dropped, or have cracks, dents and other defects in their case, bracket, and connector, replace with new one.
- * Use a volt/ohmmeter with high impedance (10 kohm/V minimum) for troubleshooting electrical circuits of the system.
- * Information labels are attached to the periphery of the SRS components. Follow the instructions of the notice.
- * After work on the SRS is completed, check the SRS warning light.
- * If the vehicle is equipped with a mobile communication system, refer to the precaution in the IN section of the Repair Manual.

   
- * Steering wheel pad
- * Front passenger airbag assembly
- * Side airbag assembly
- * Curtain shield airbag assembly
- * Knee airbag assembly
- * Rear seat airbag assembly
- * Seat belt pretensioner
- * Seat cushion airbag
- * Center airbag sensor assembly
- * Front airbag sensor assembly
- * Door side airbag sensor assembly
- * Side airbag sensor assembly
- * Pedestrian protection sensor
- * Pop up hood lifter assembly

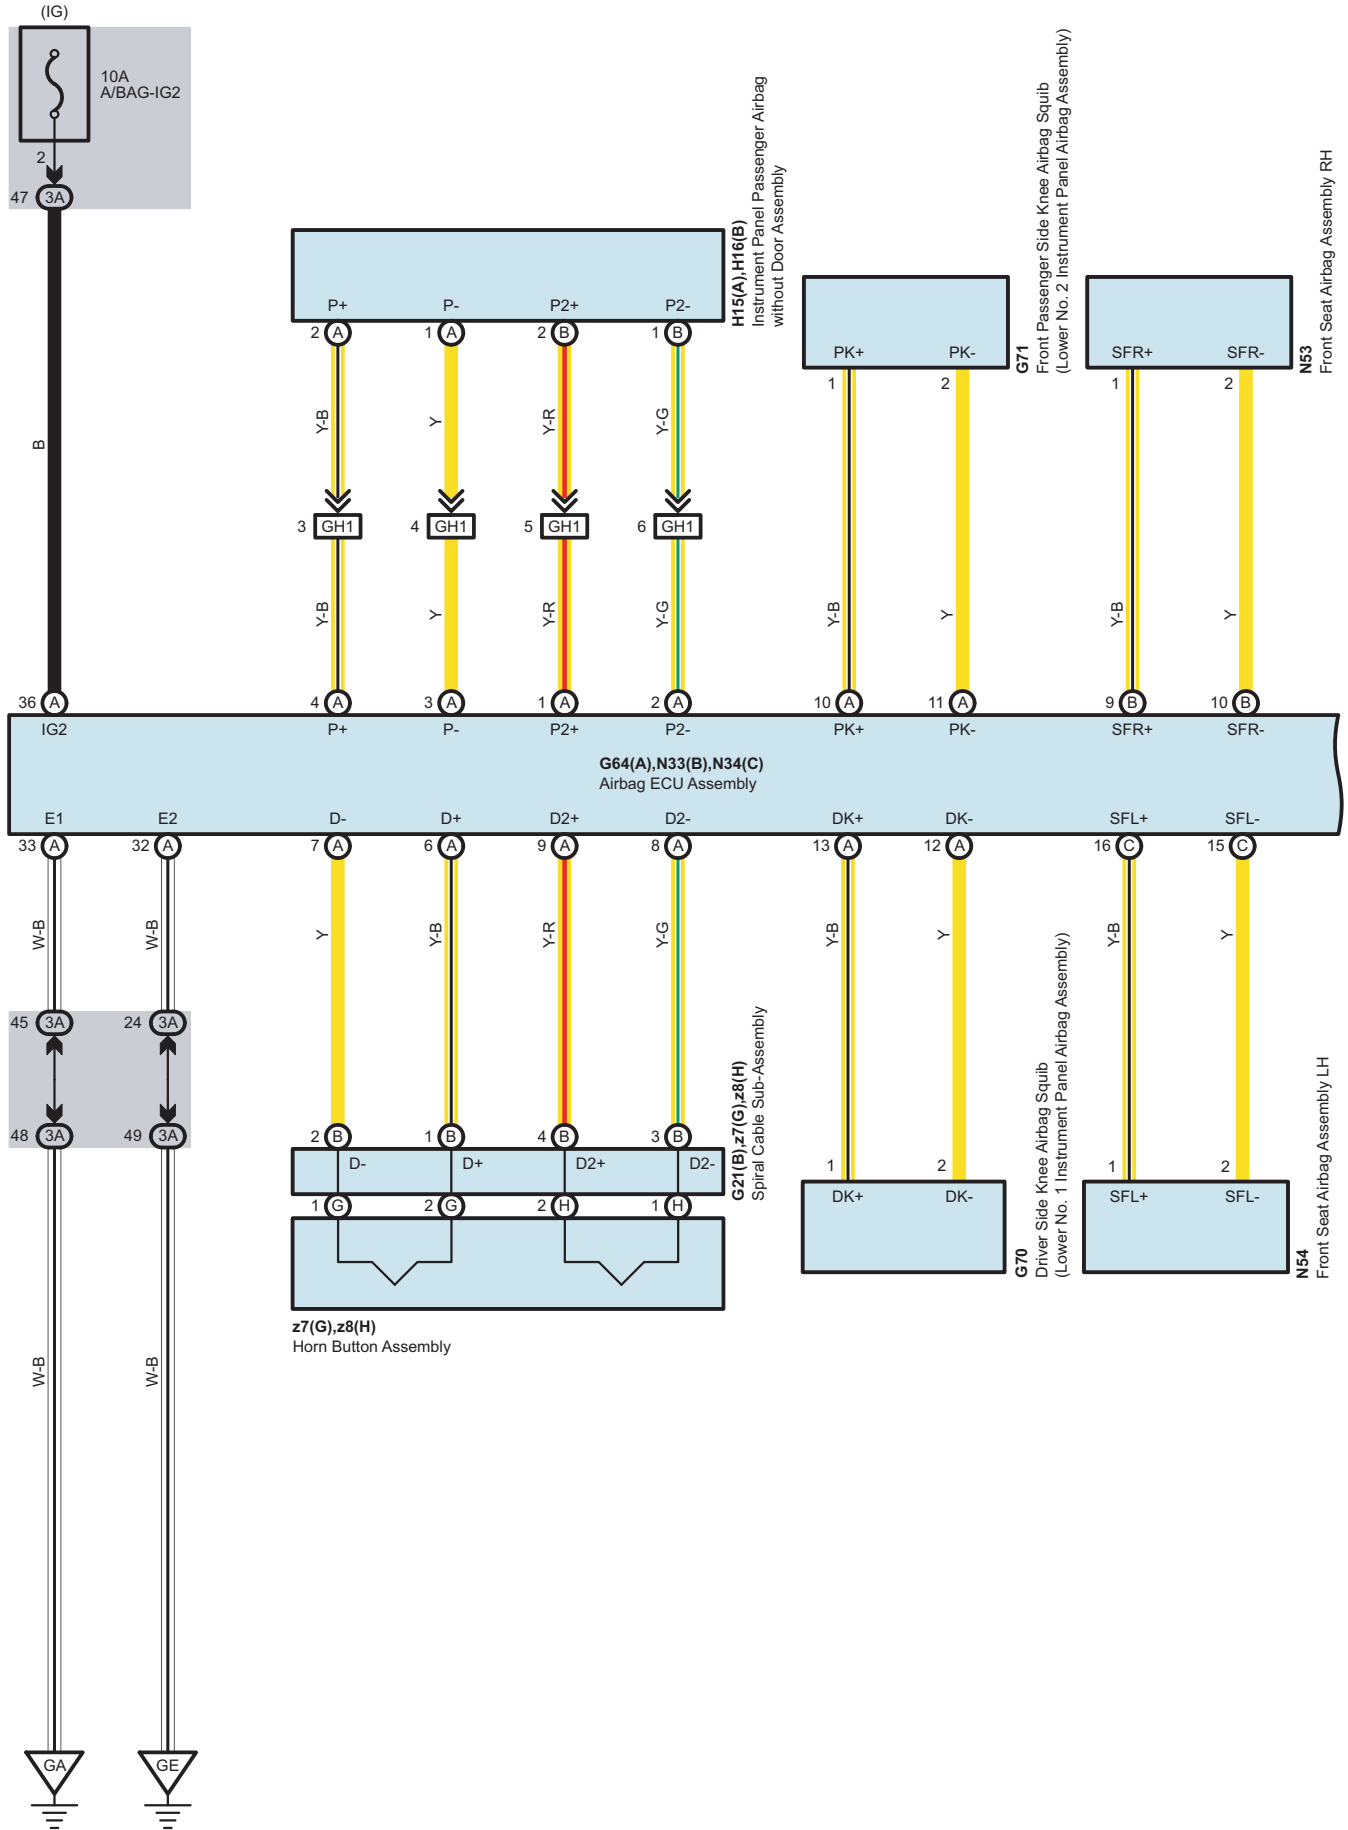 


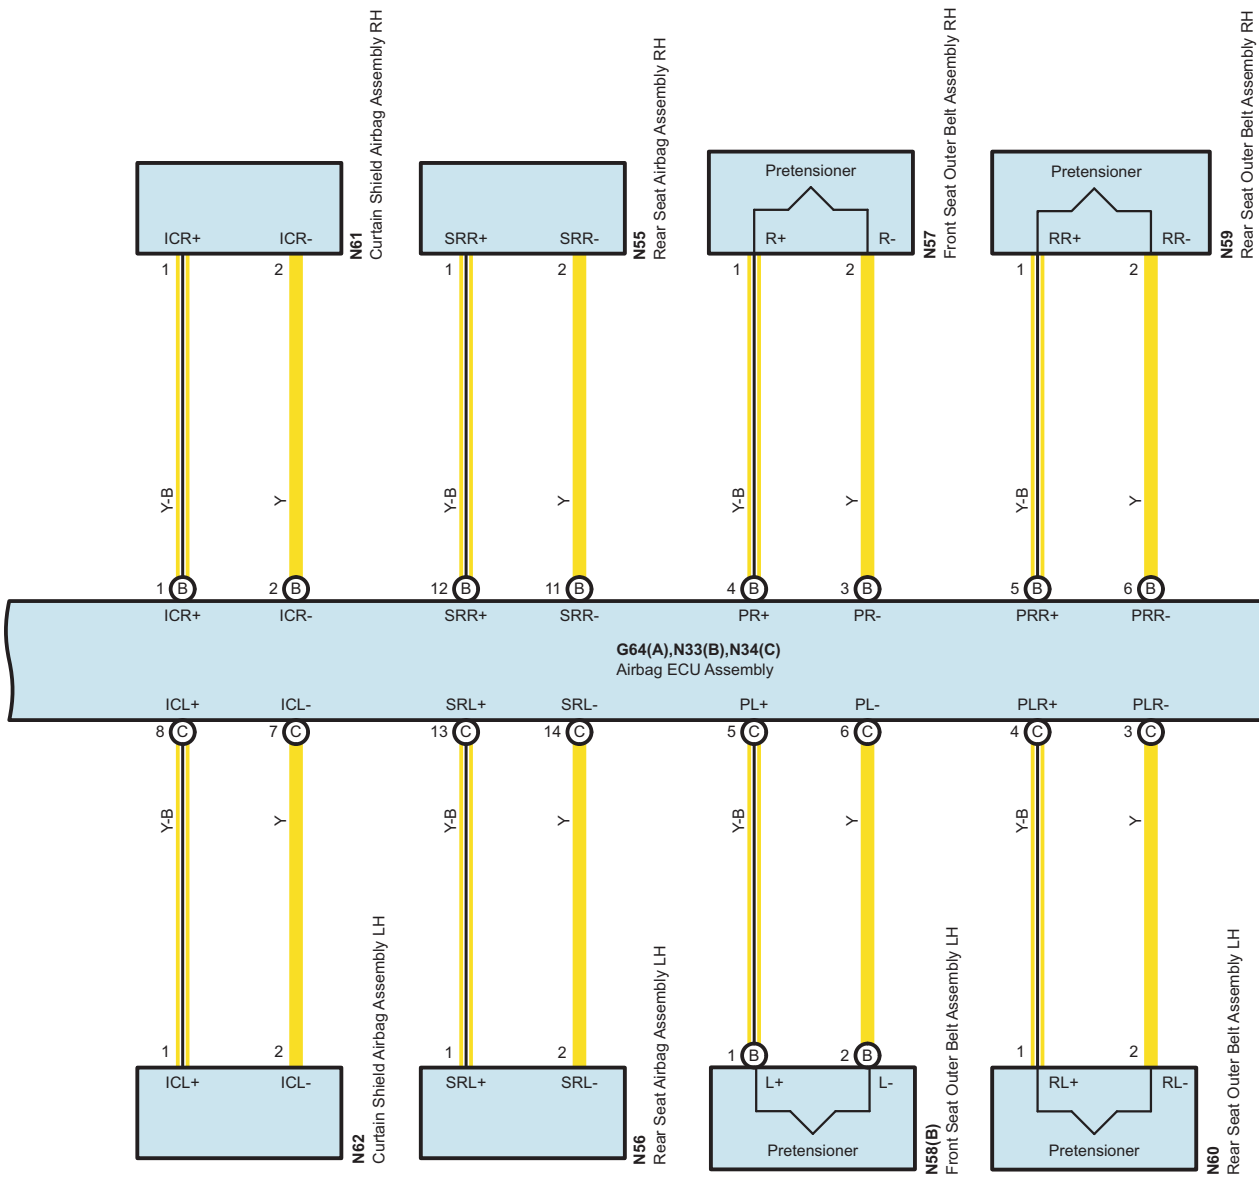 


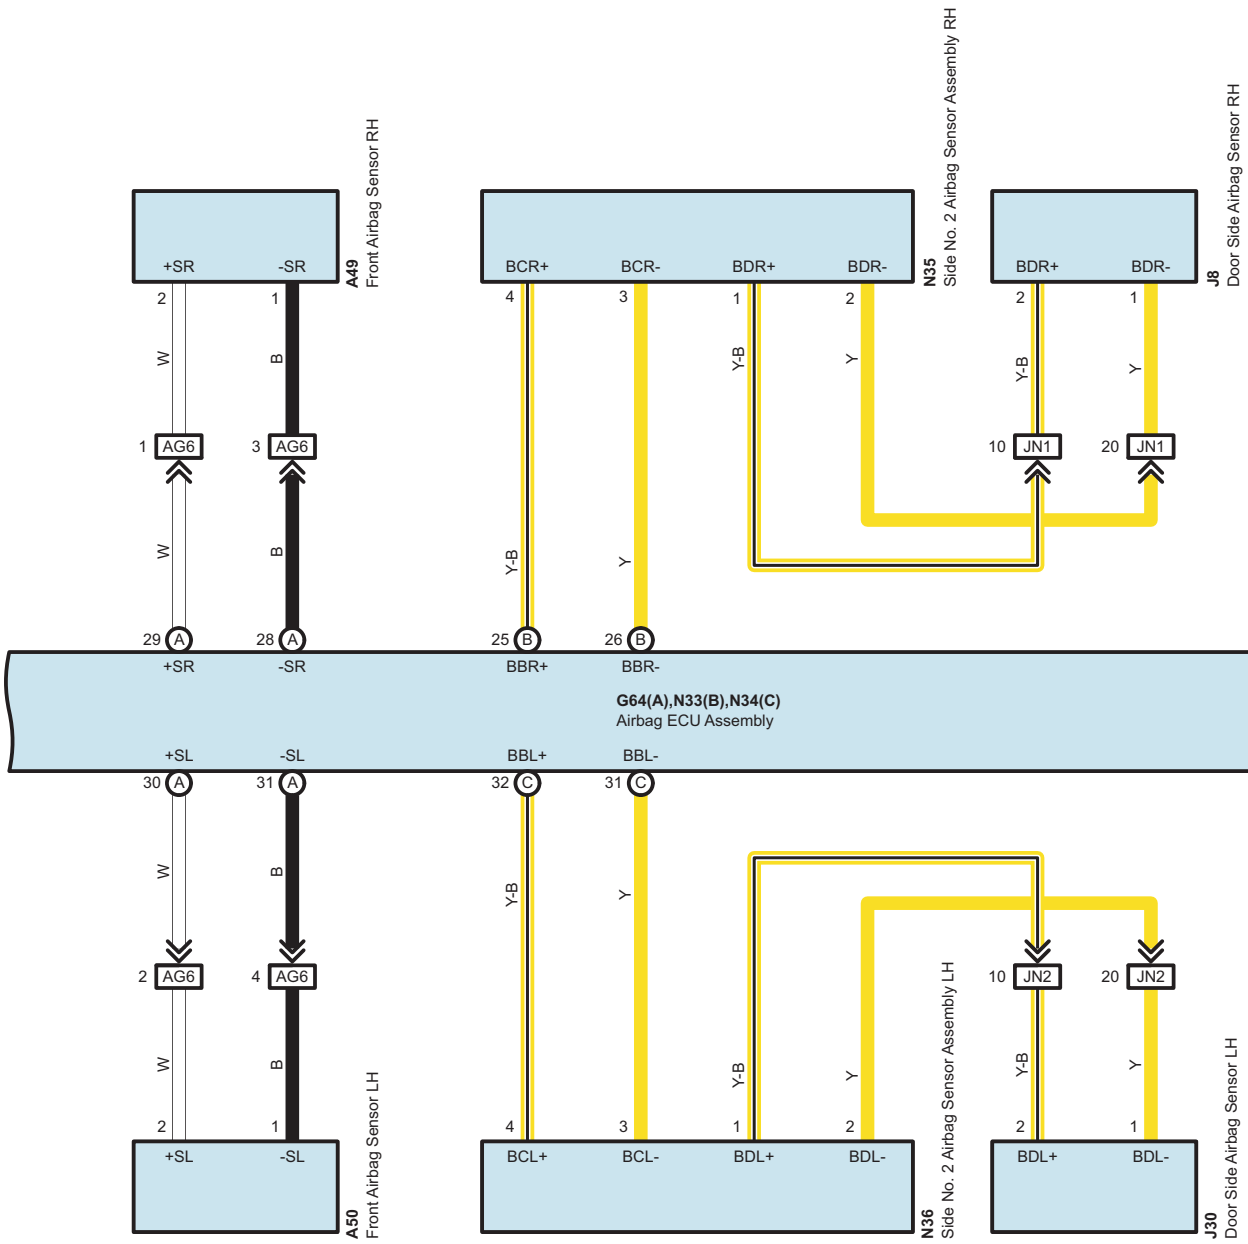 


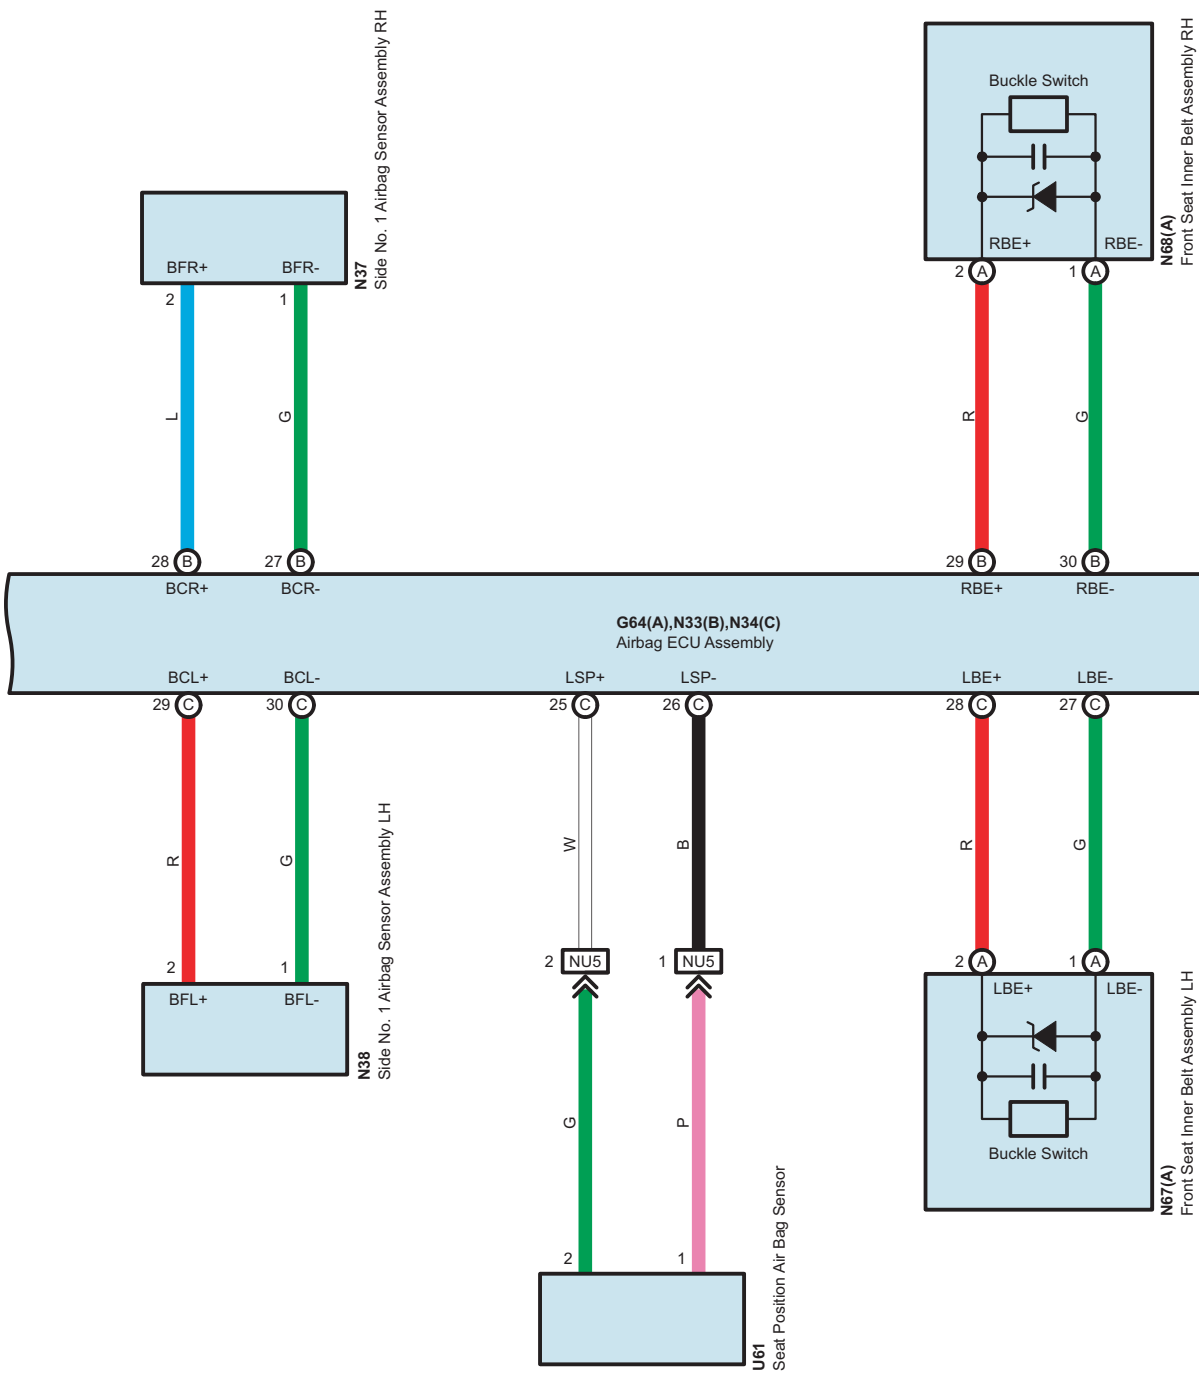




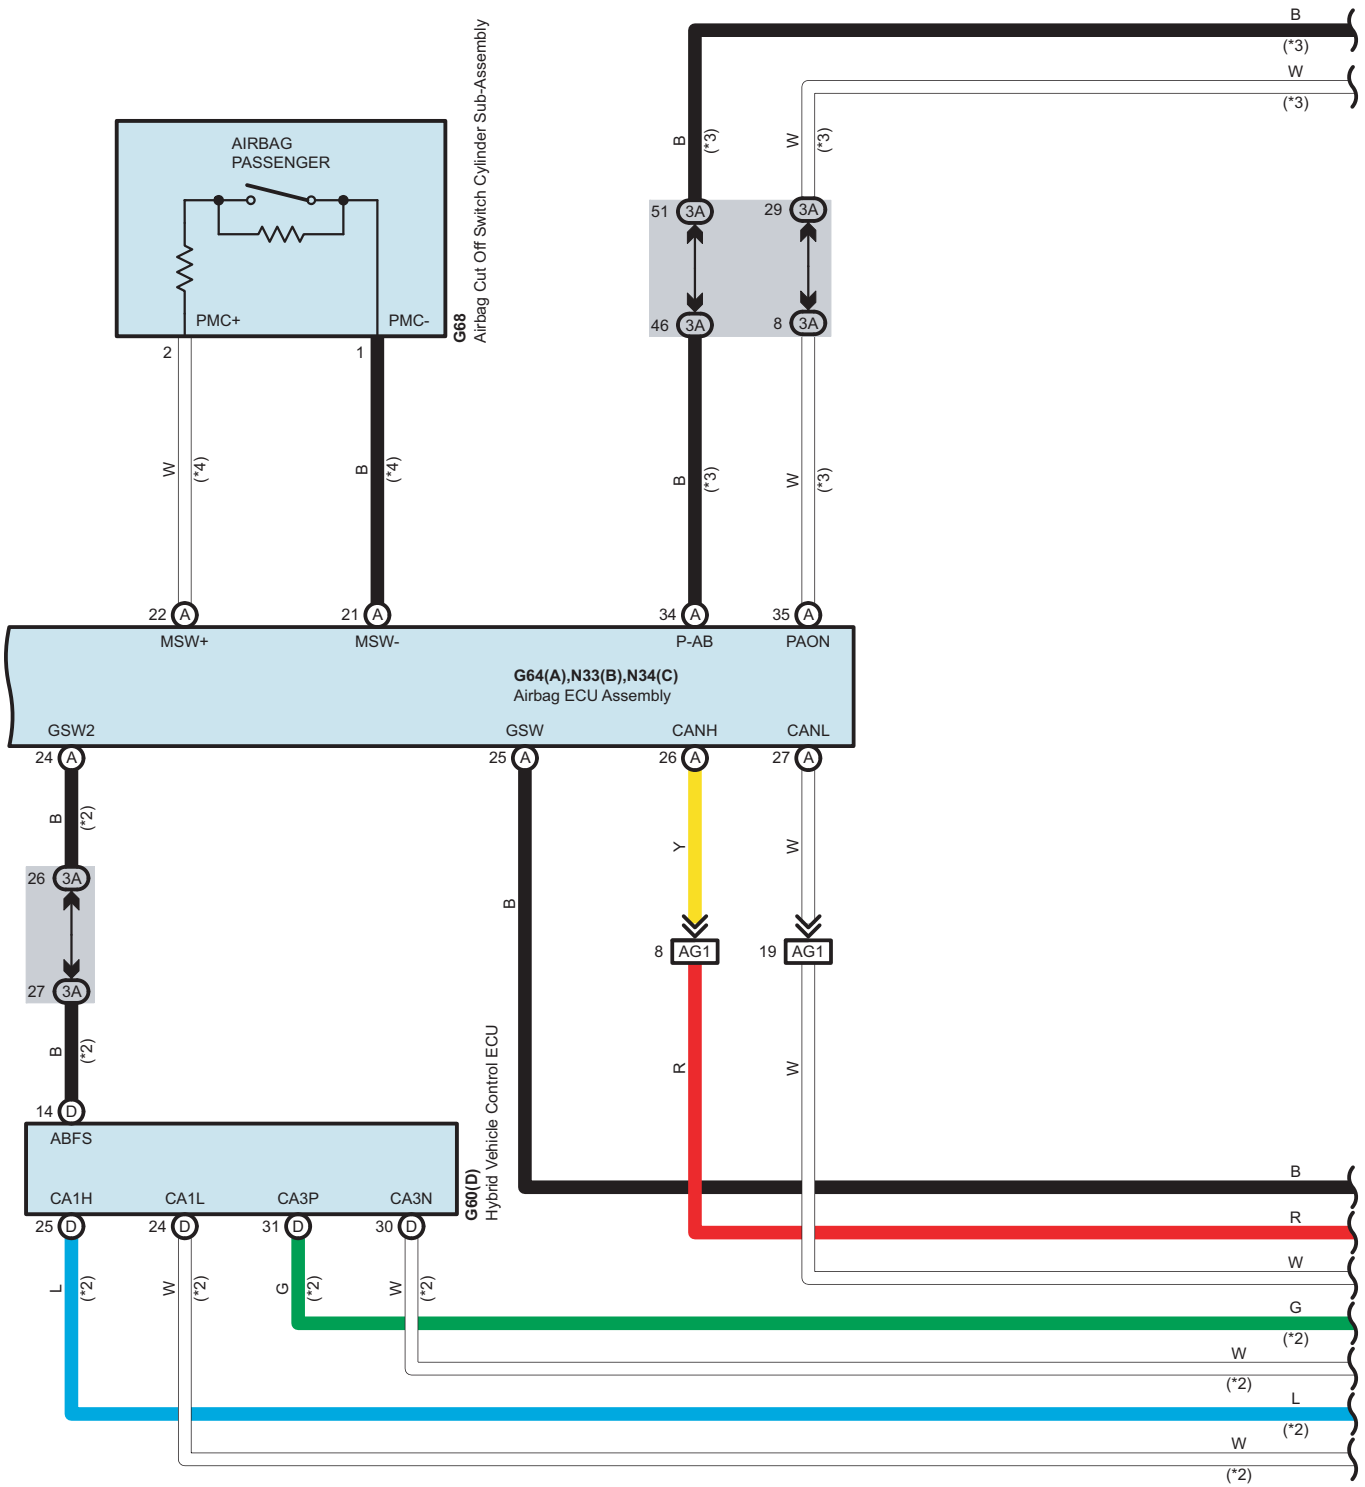


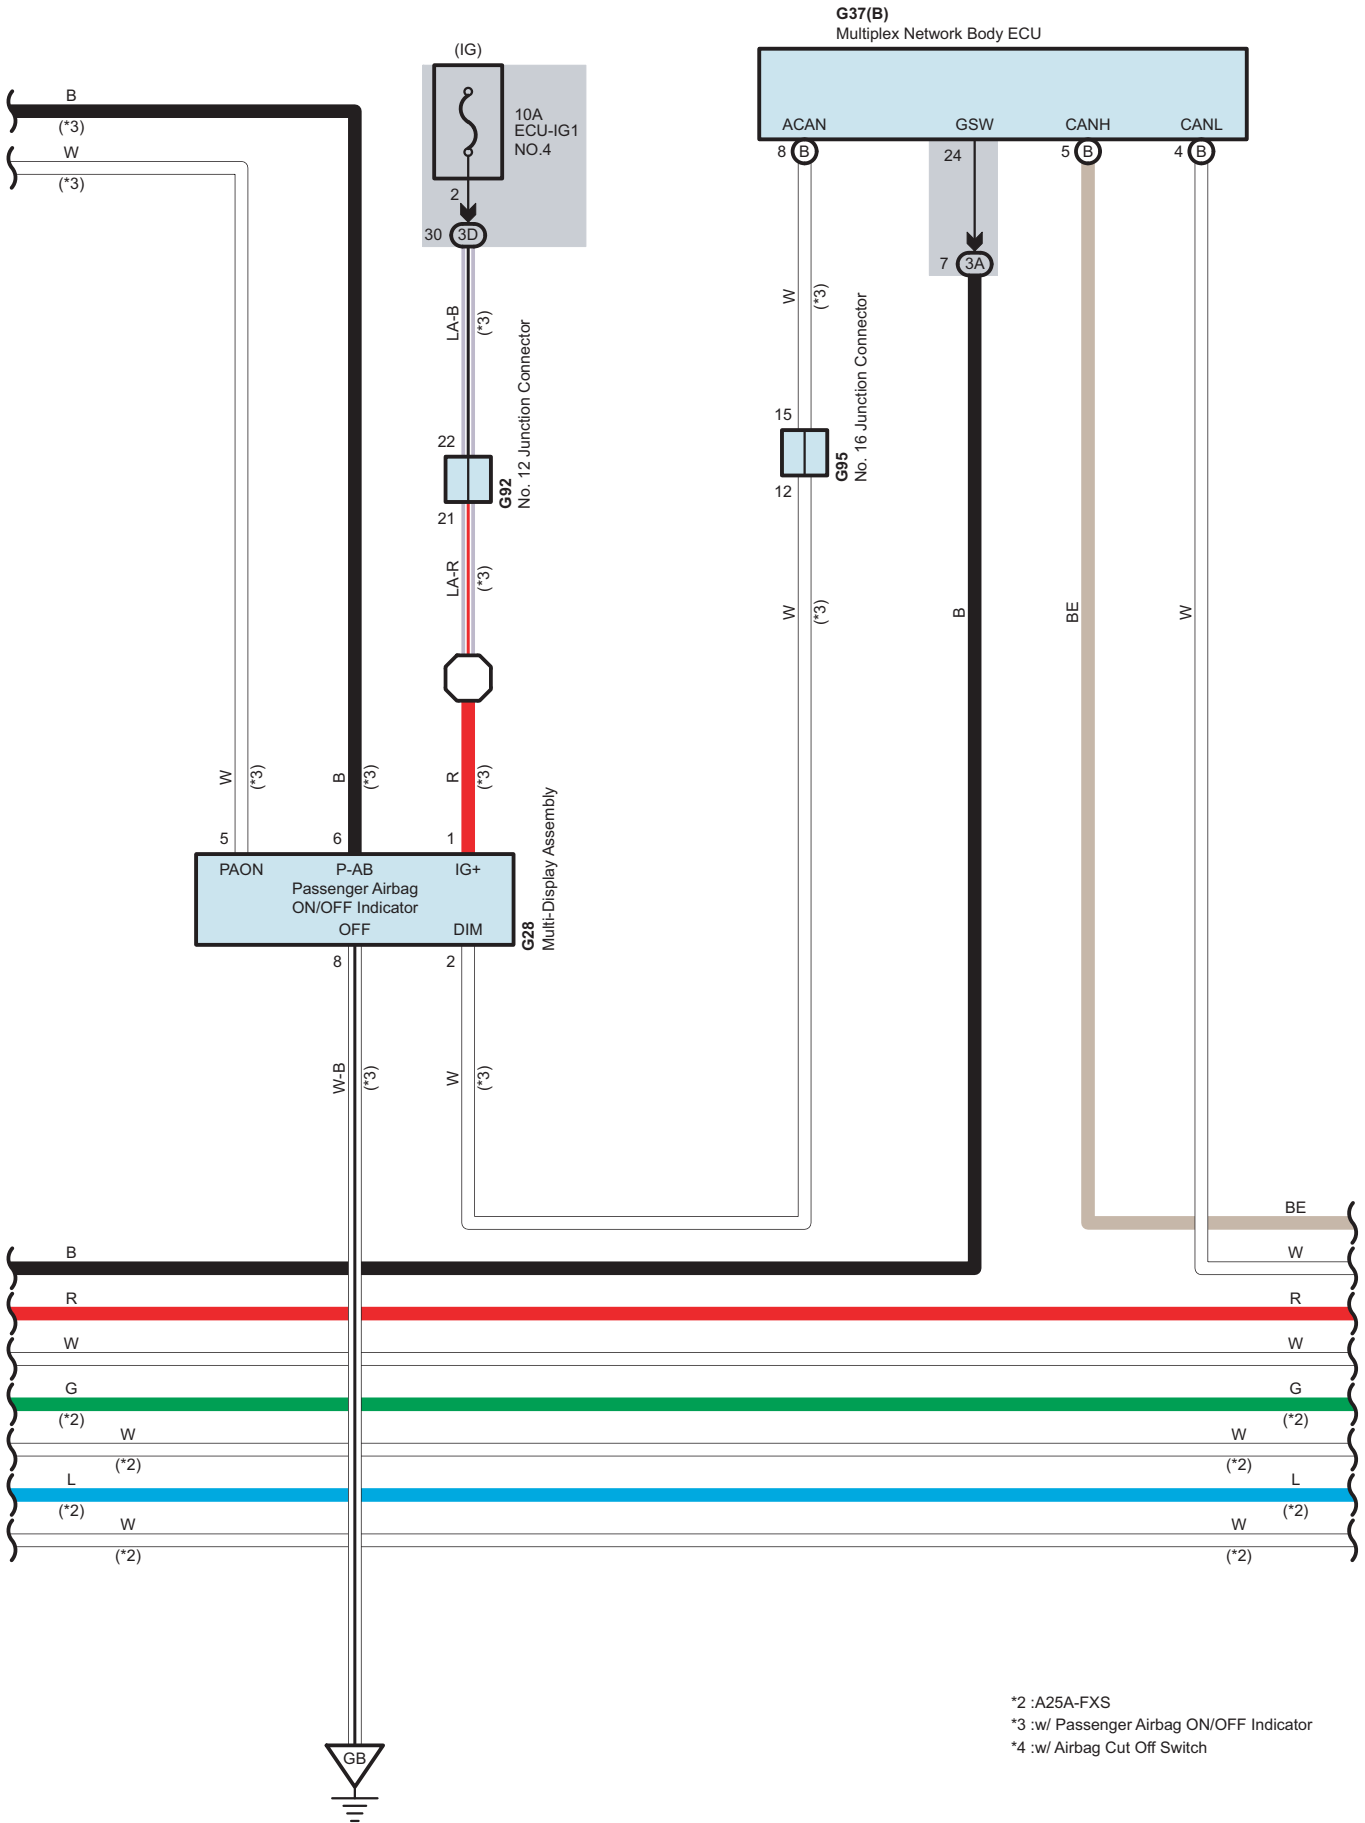


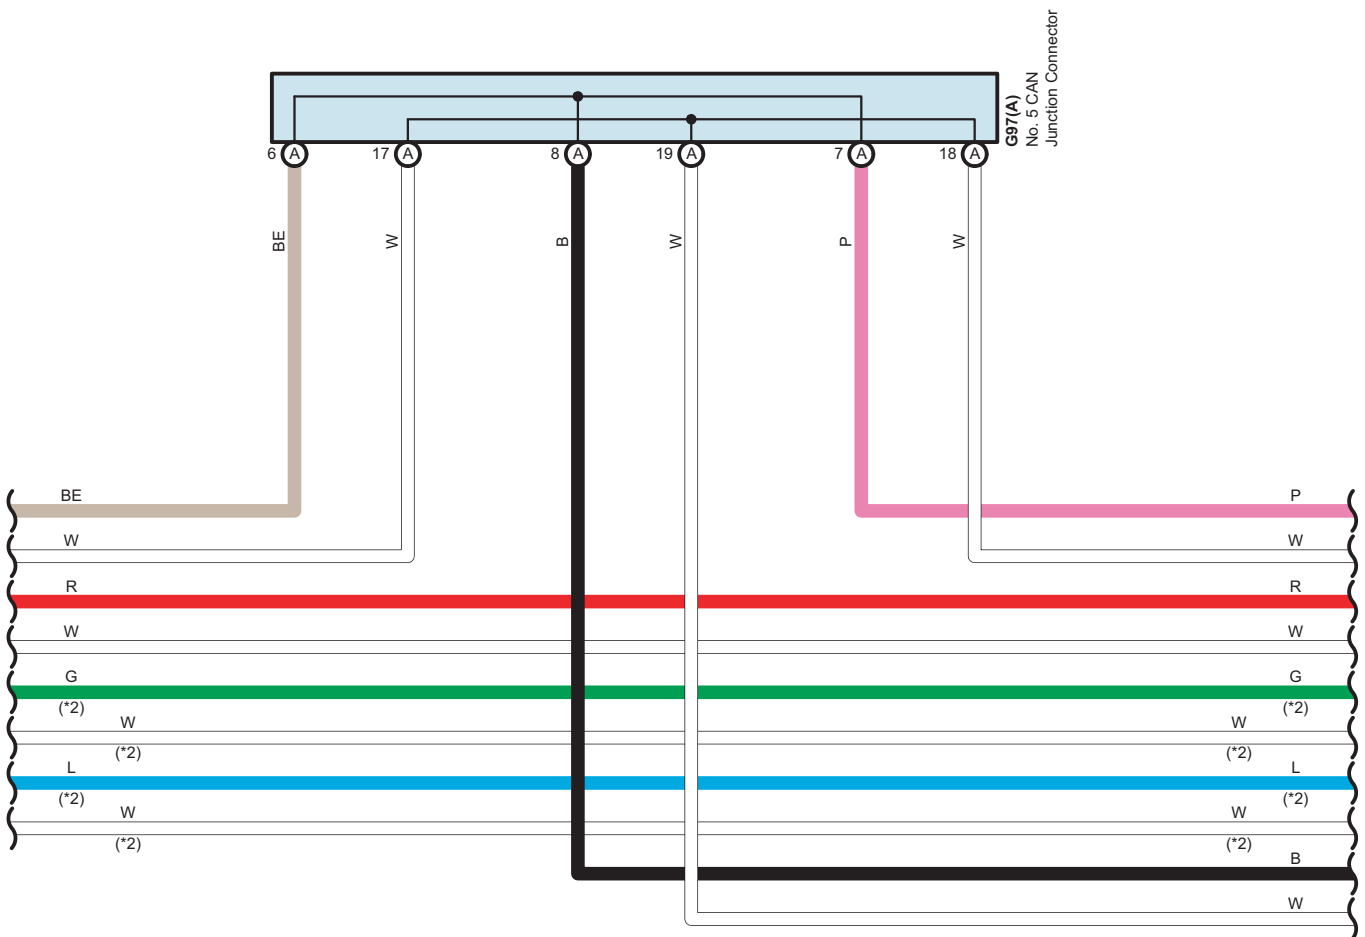



*2 :A25A-FXS

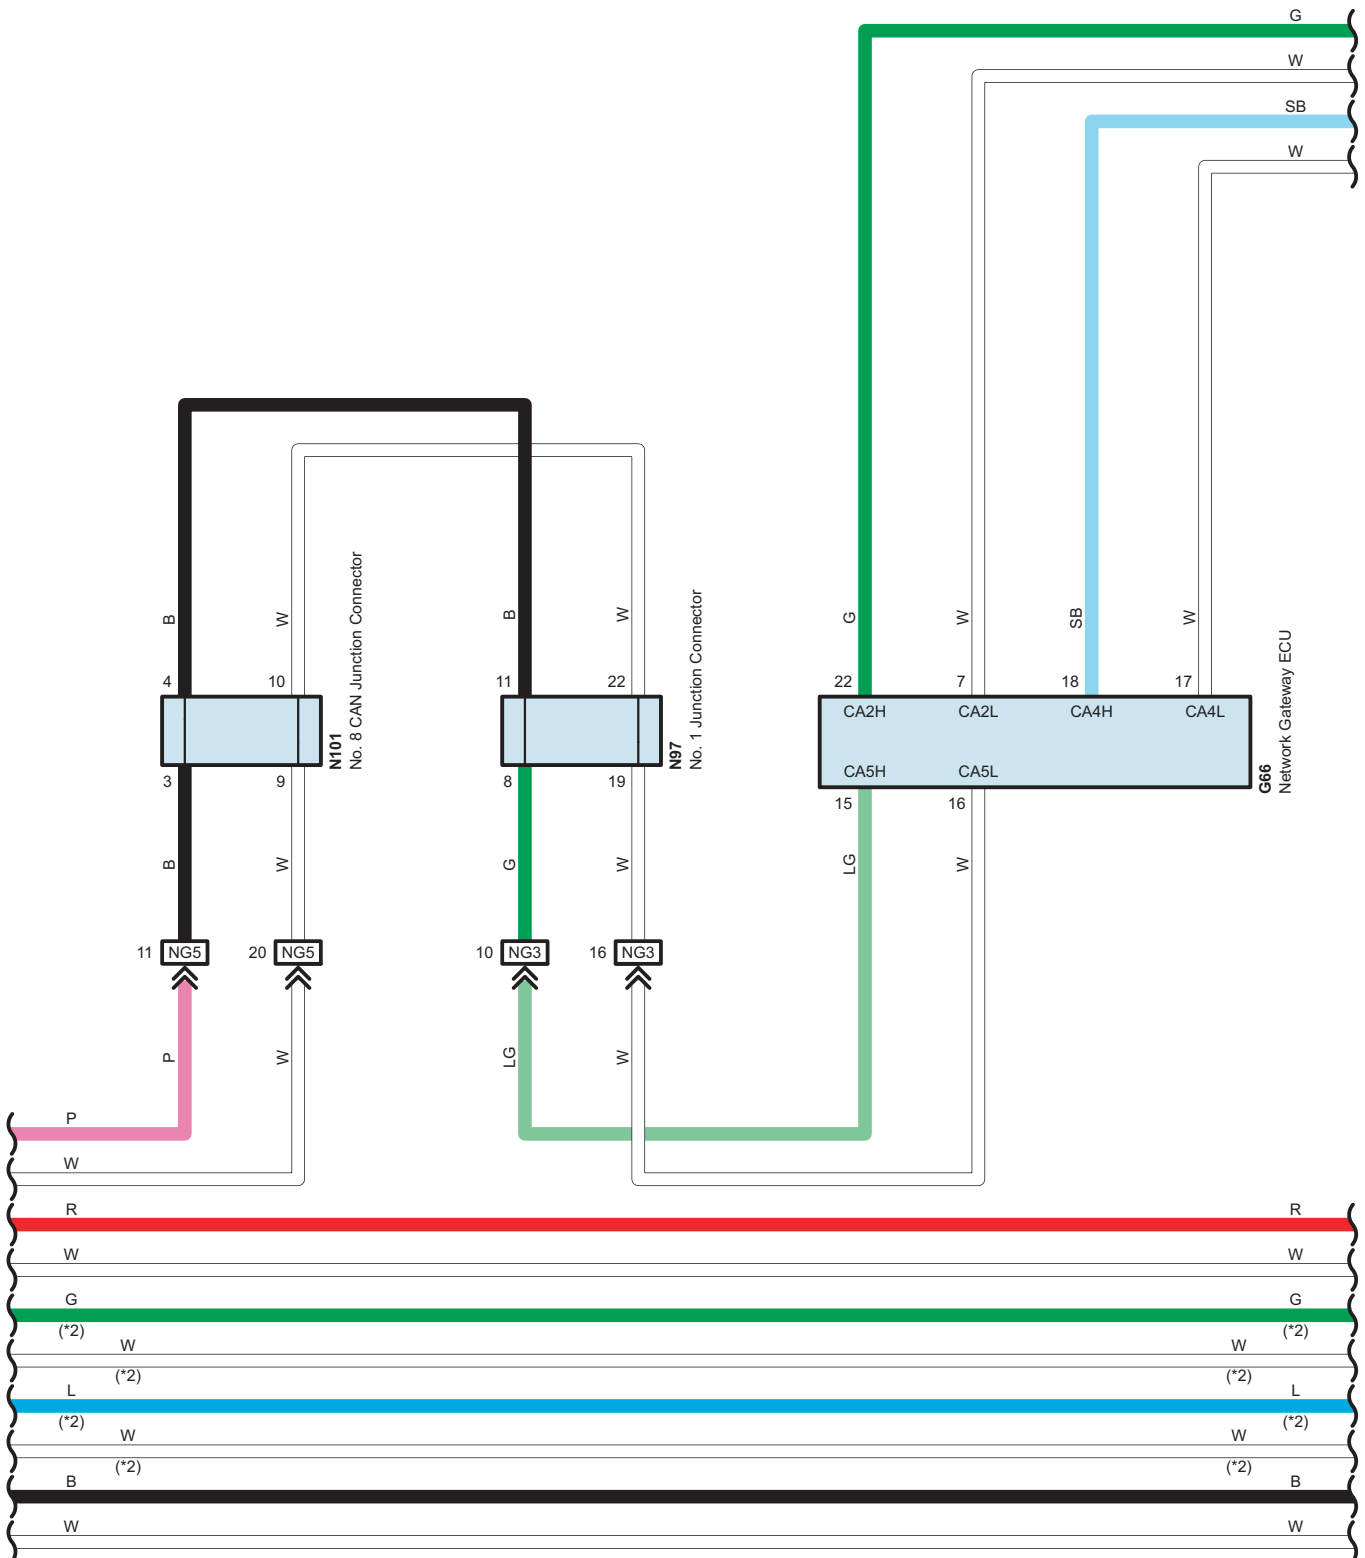 

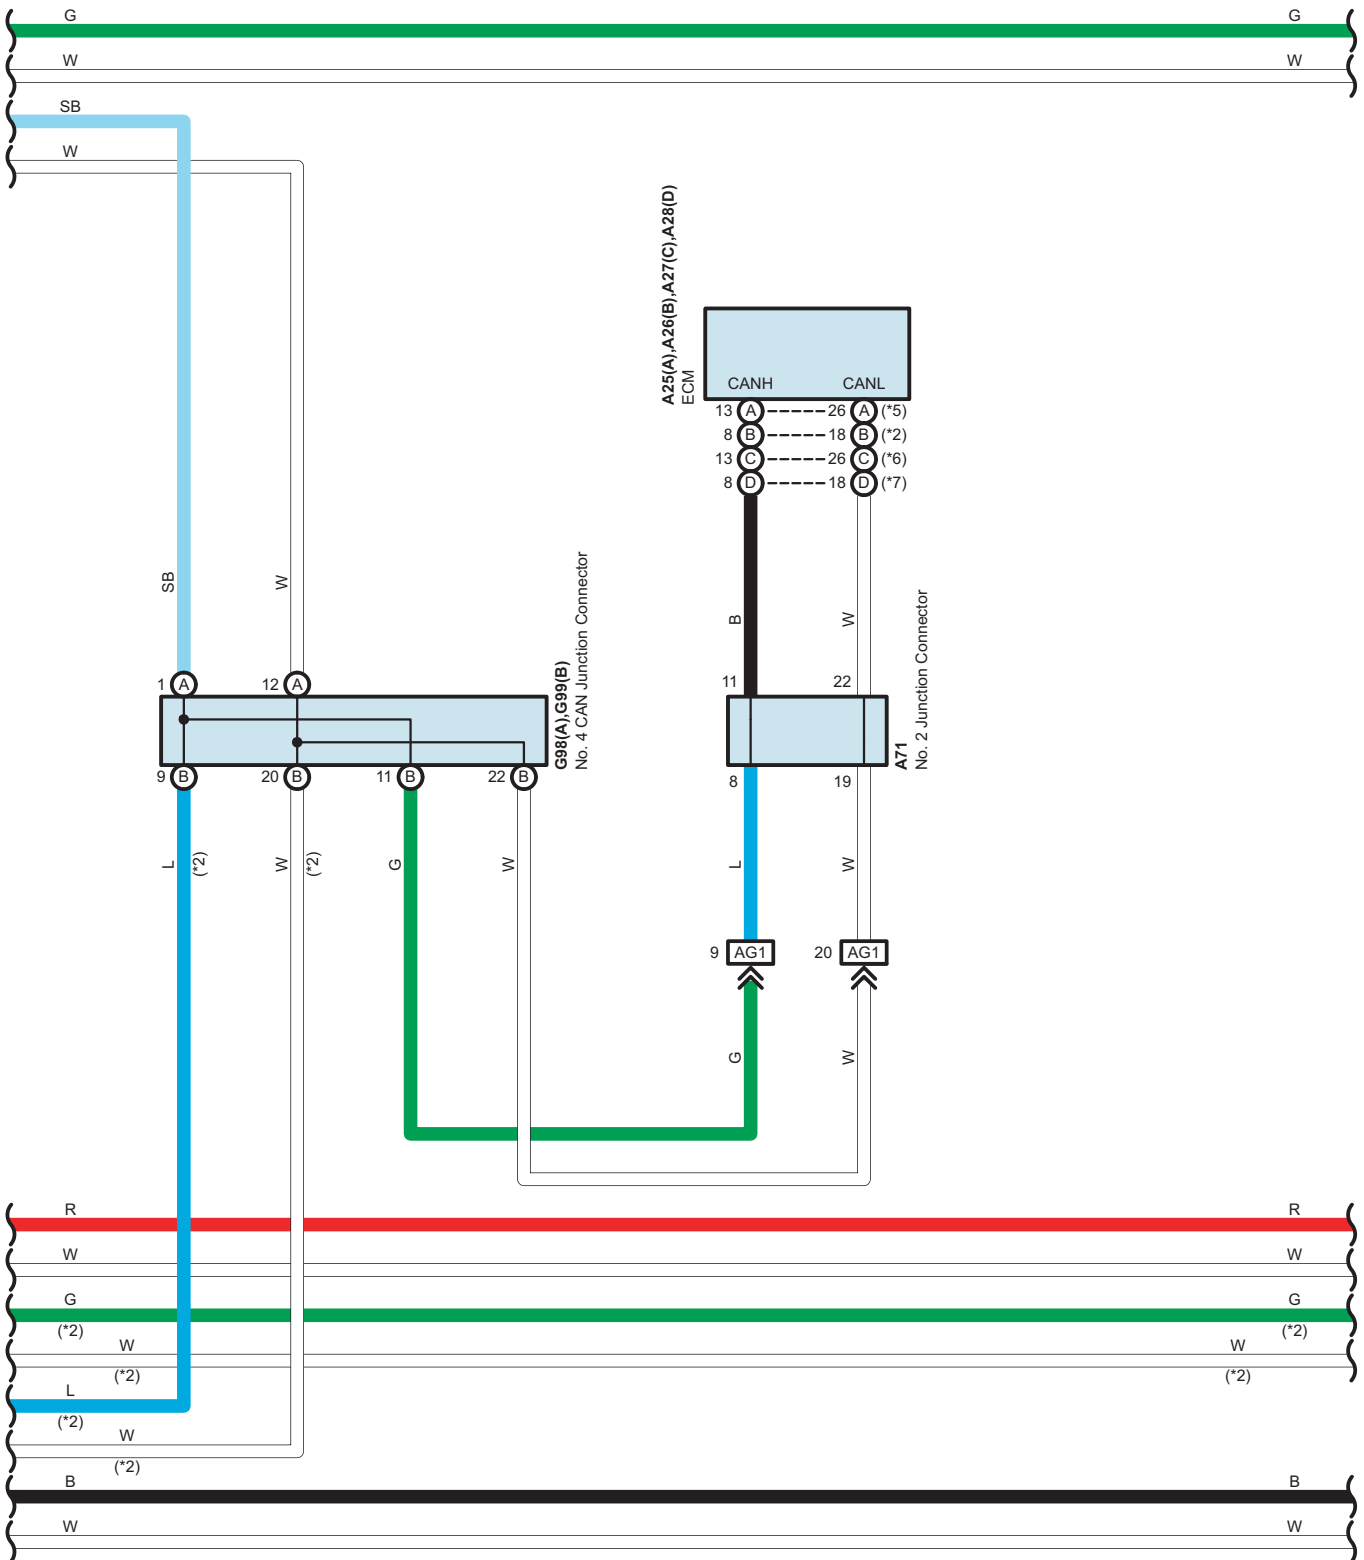 


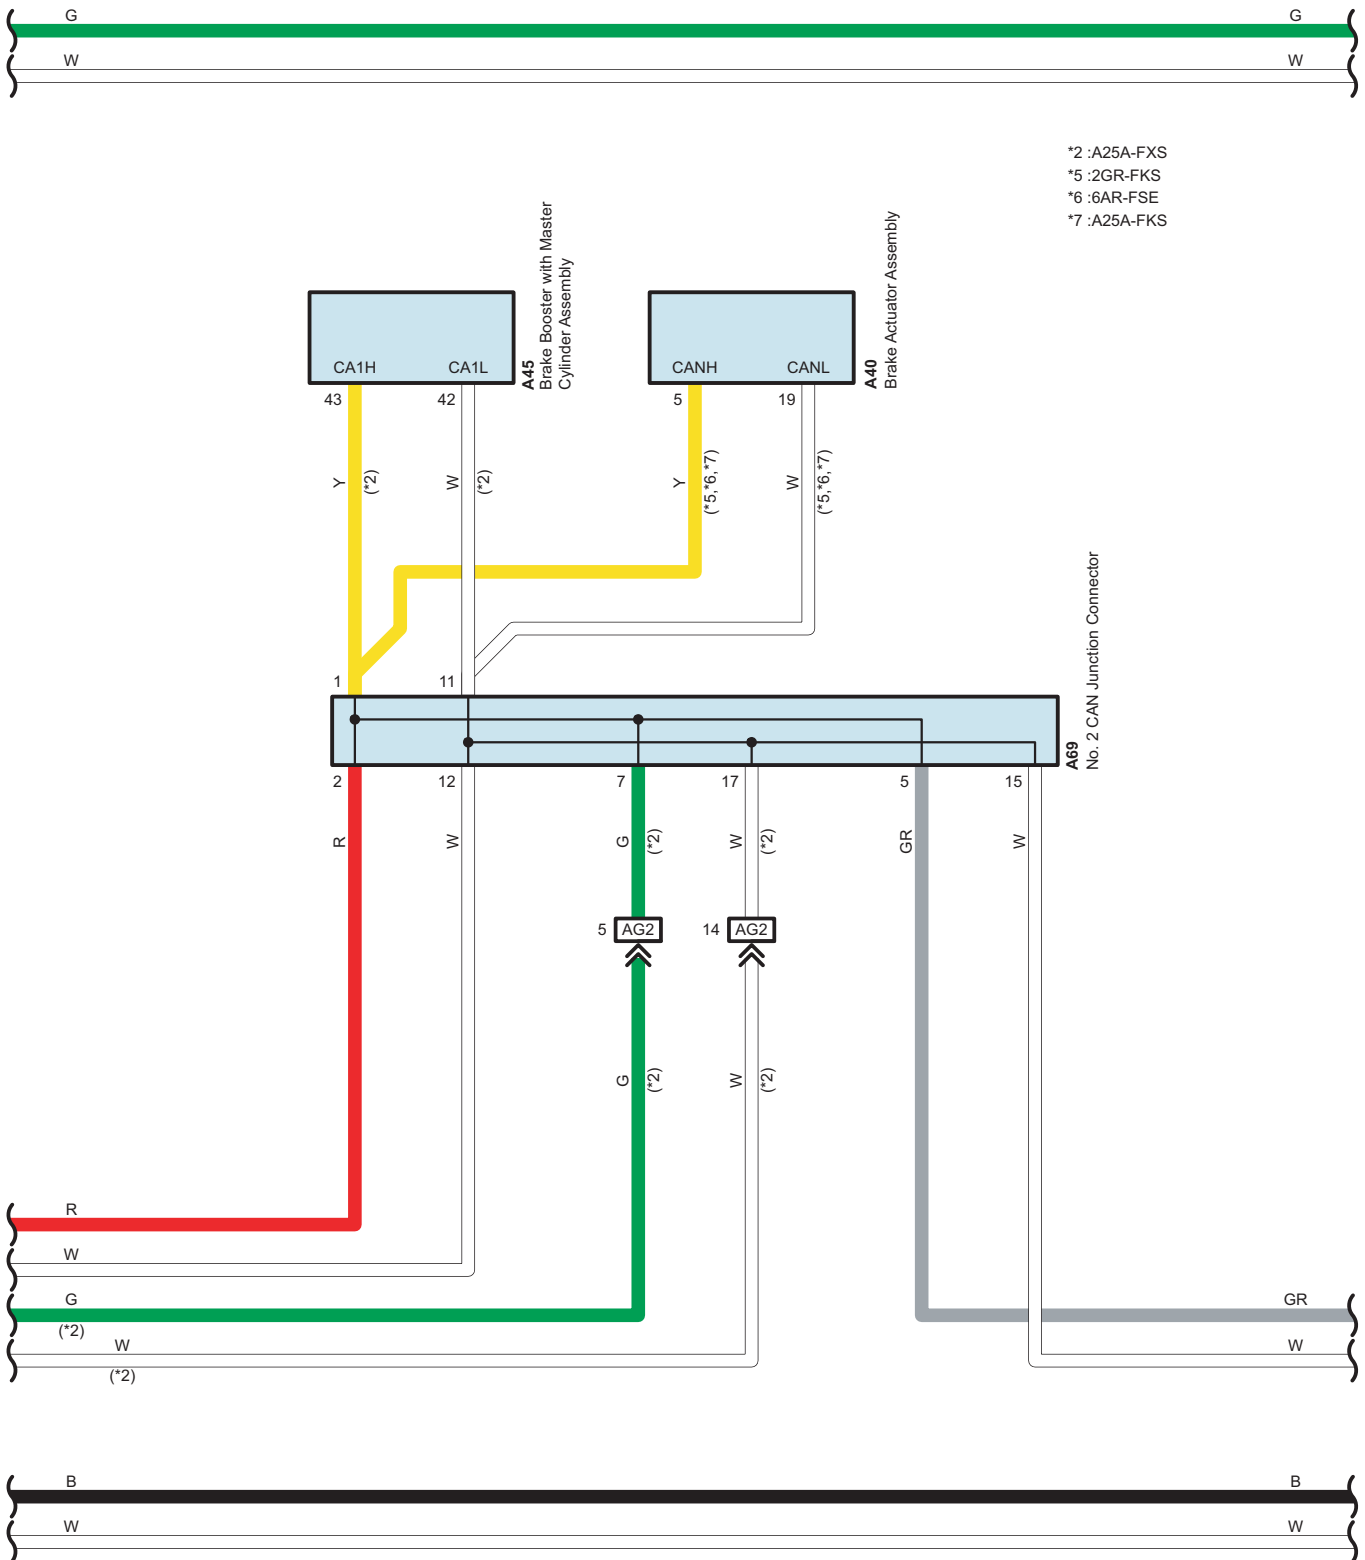 

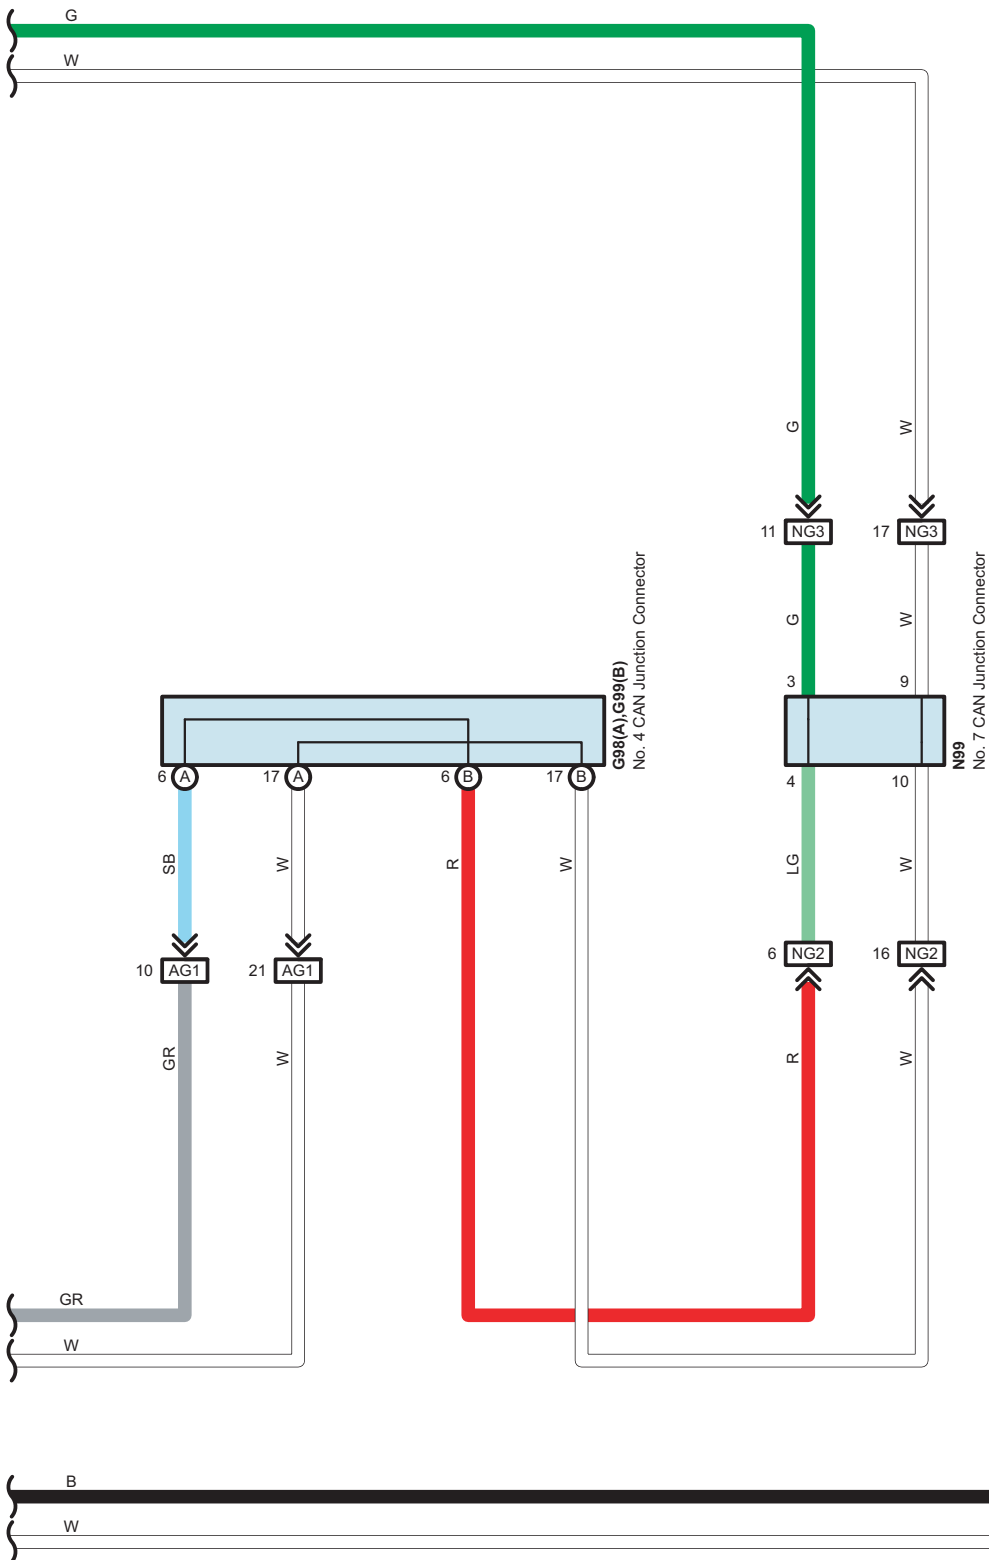 

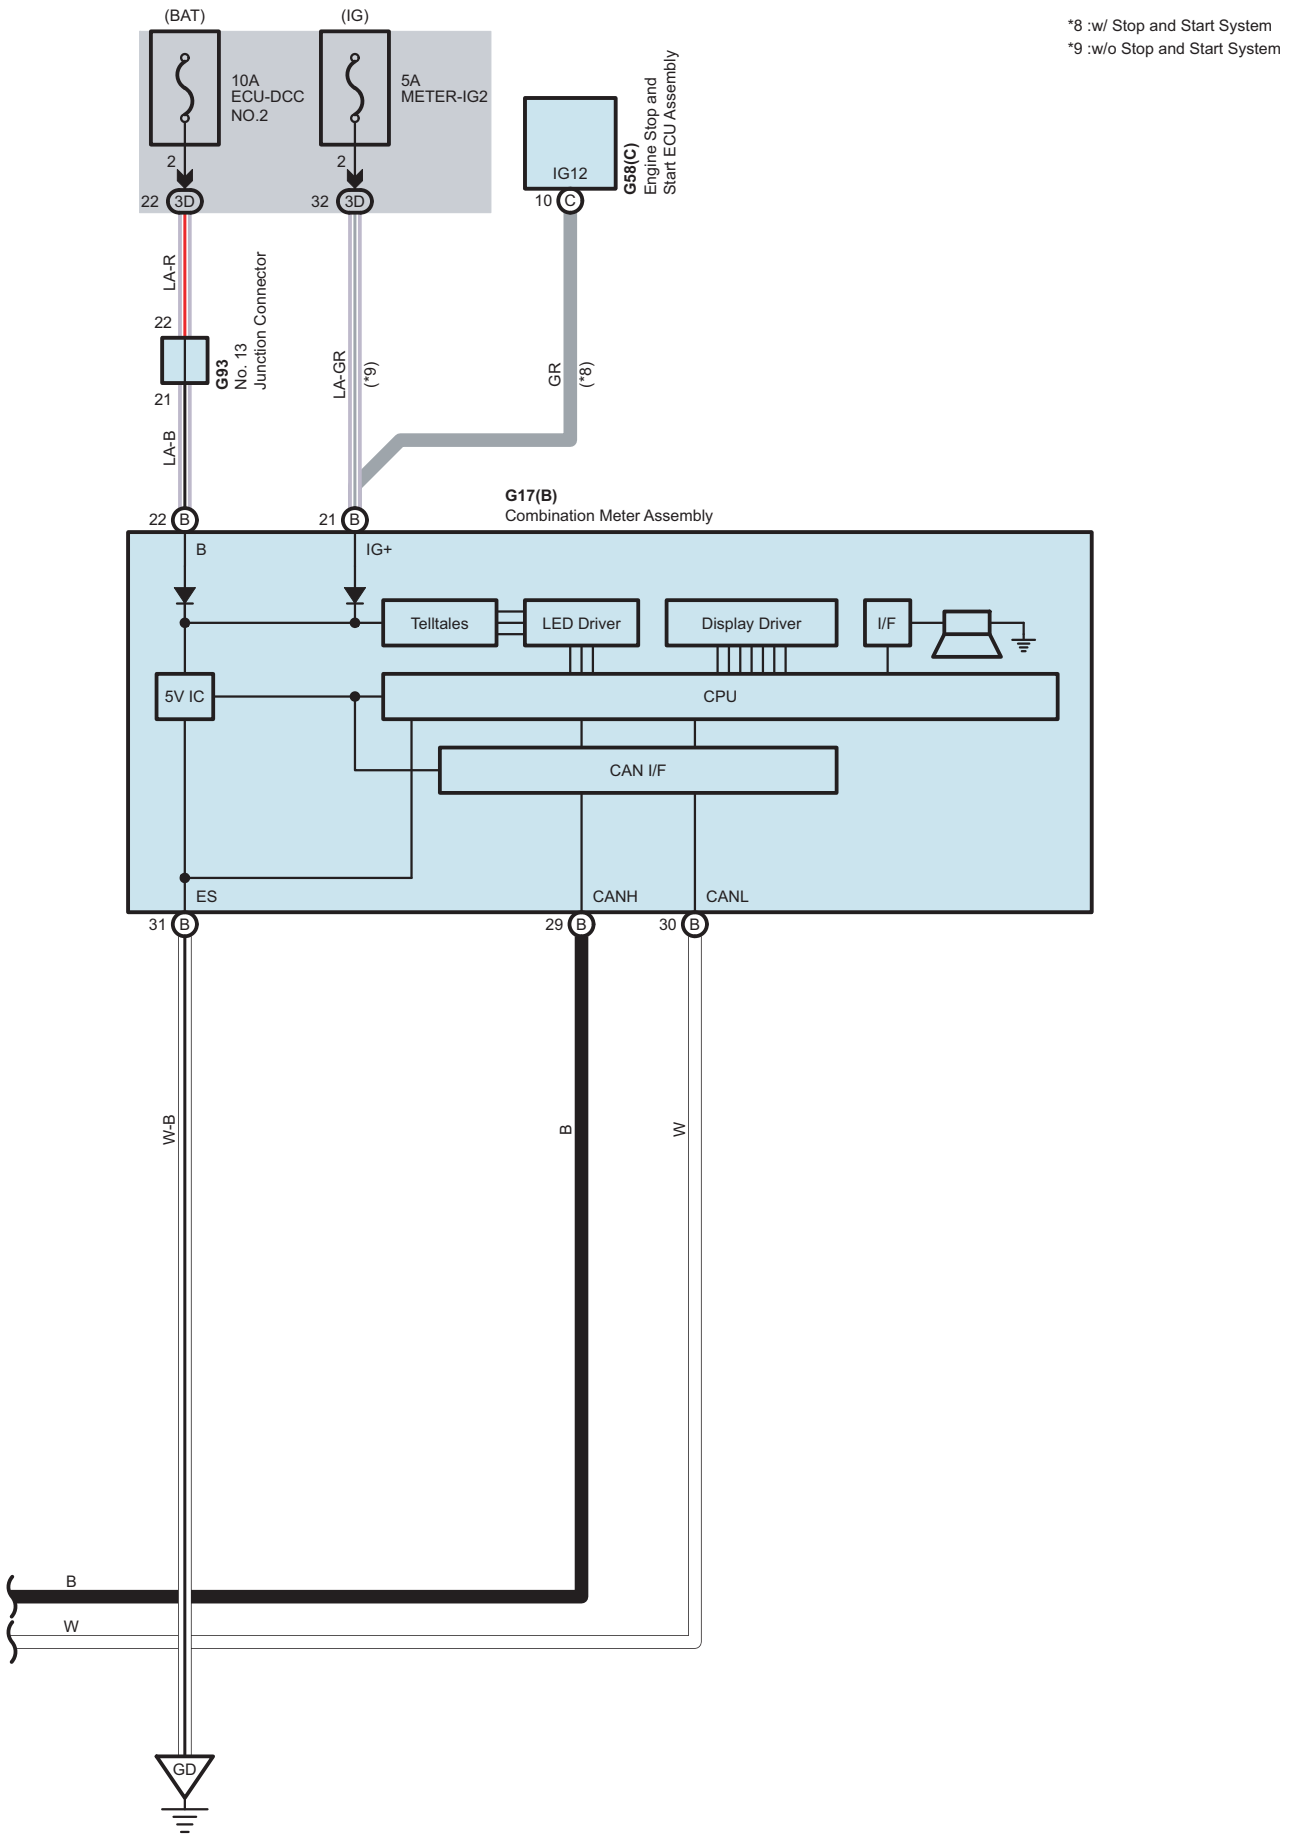 


A25
Black

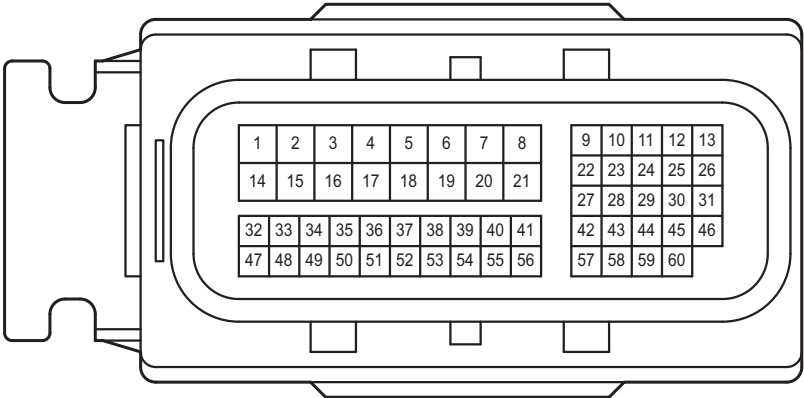 


90980-12931

 A26
Black

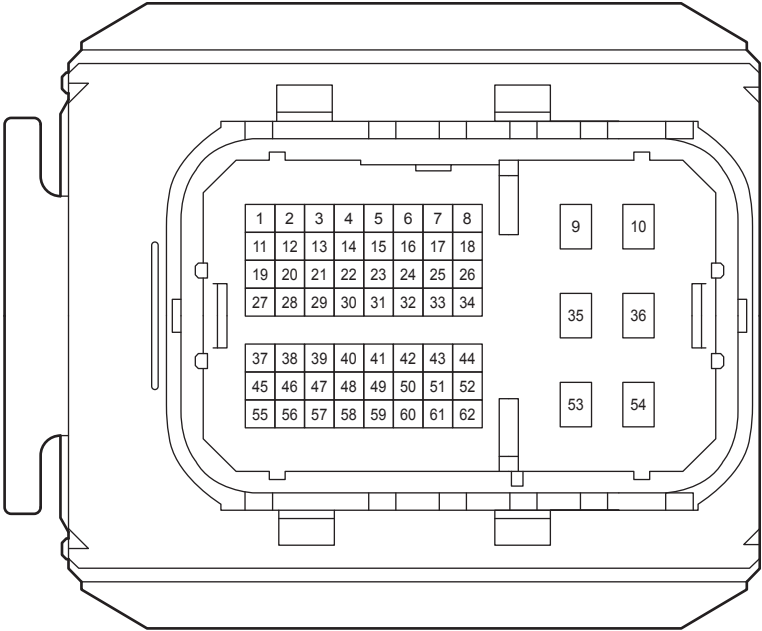


90980-12D10

 A27
Black

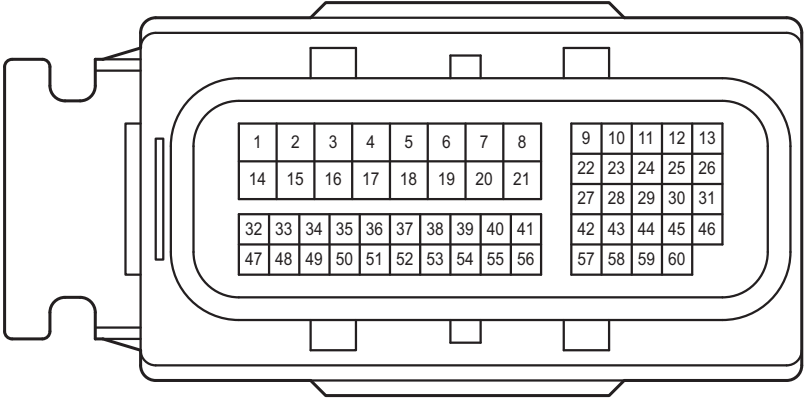


90980-12931

 A28
Black

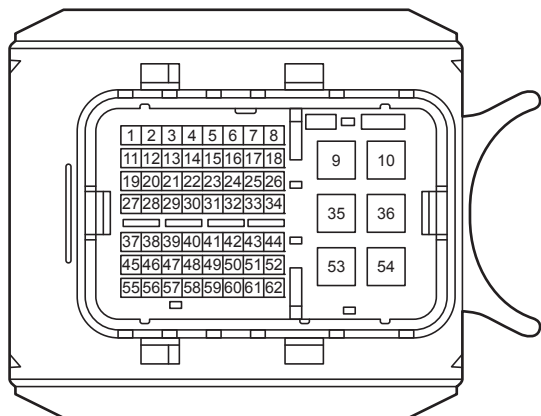


90980-12D06

 A40
Black

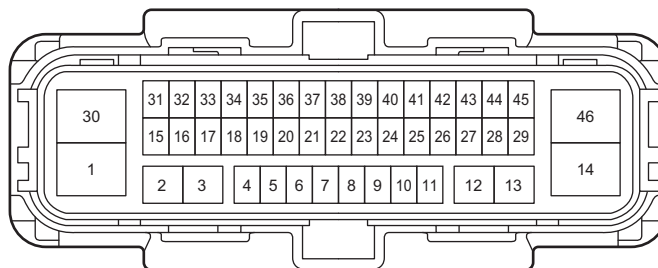

90980-WA092

 A45
Black

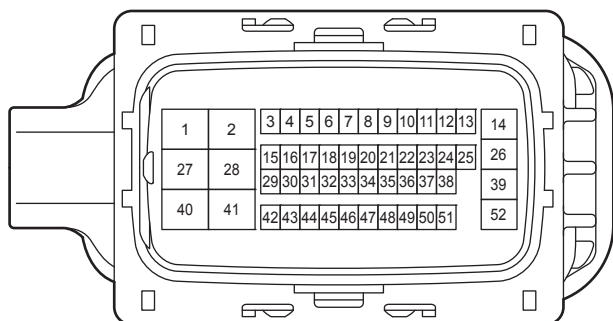


90980-12B87

A49
Yellow



90980-12490

 A50
Yellow

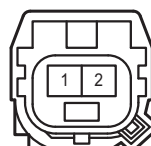

90980-12490

A51
Yellow



90980-12490

A52
Yellow



90980-12490

A62
Yellow



 
90980-12698

A63
Yellow




90980-12698

A69
White

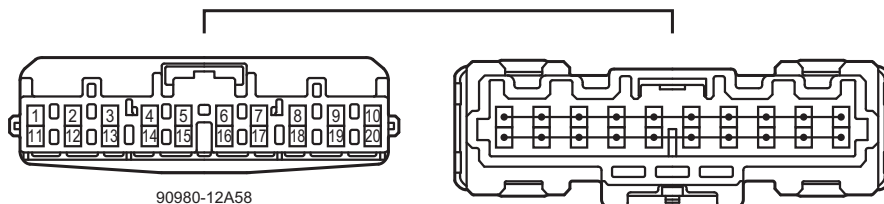


90980-12A58

 
A71
White

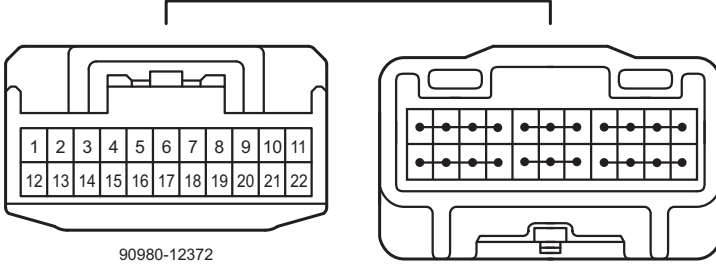


G10
White

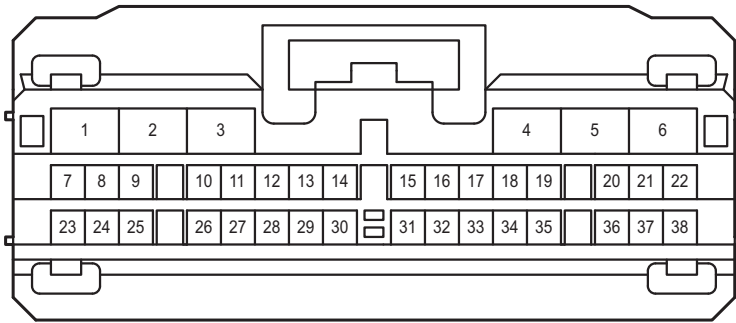 


G17
Black

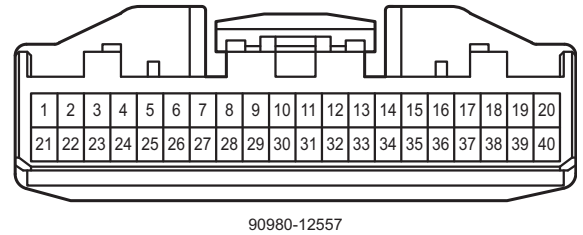 


G21
Yellow

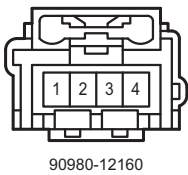 


G28
Black

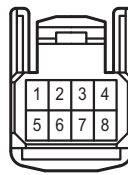 


G37
Black

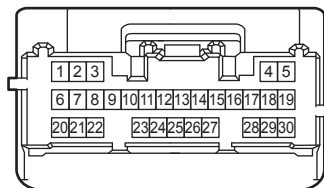 


G57
White

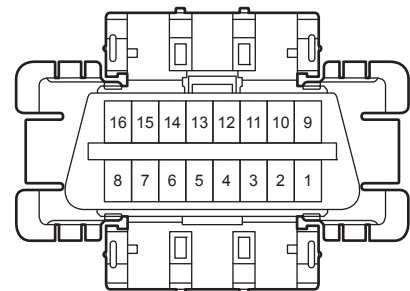 


G58
Black

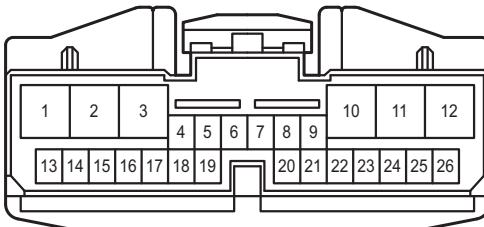 


G60
Gray

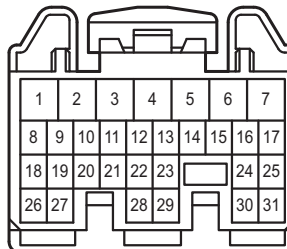 

G64
Yellow

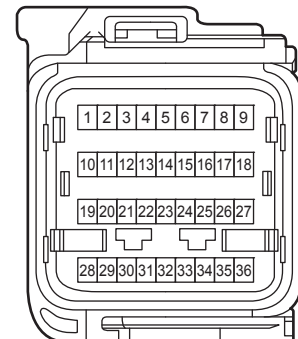 

G66
Black

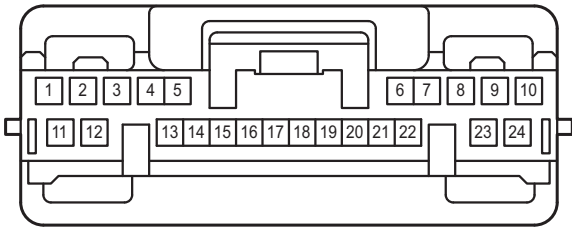 


90980-12912

G68
Black




90980-12063

 G70
Yellow

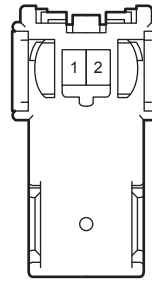


90980-12253

 G71
Yellow

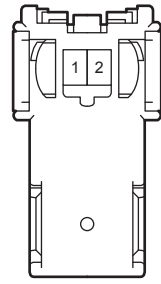


90980-12253

 G92
Gray

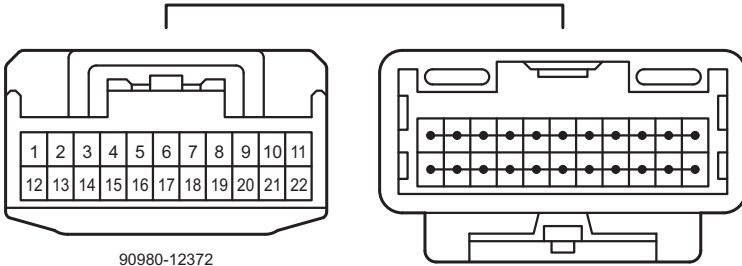


90980-12372

 G93
Gray

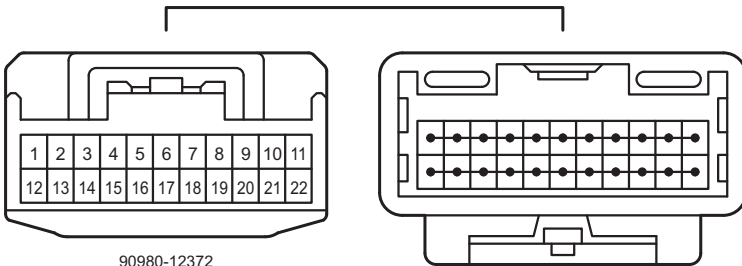


90980-12372

 G95
White

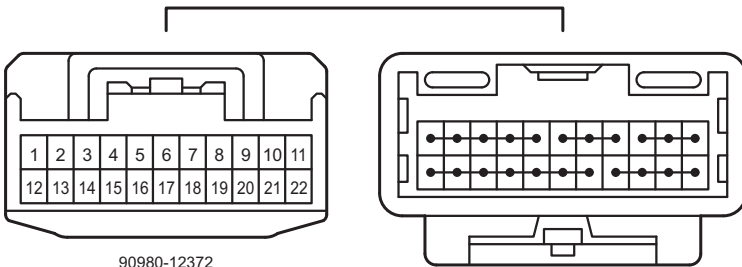


90980-12372

 
G97
Blue

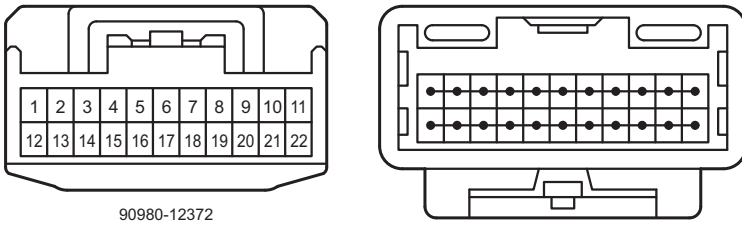


G98
White

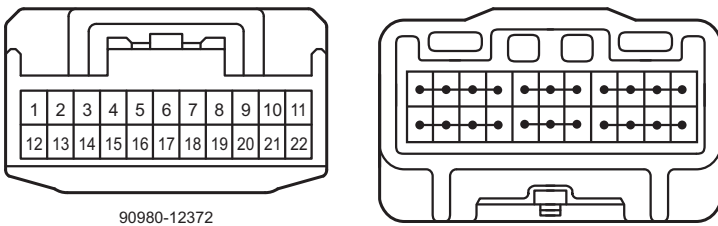 


G99
White

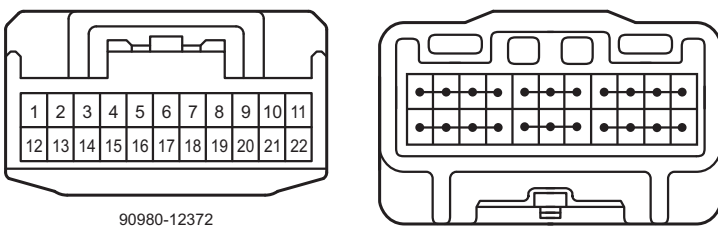 


H15
Orange

 


H16
Black

 


J8
Yellow

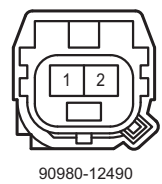 


J30
Yellow

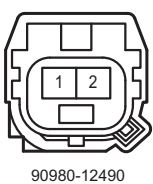 


N33
Yellow

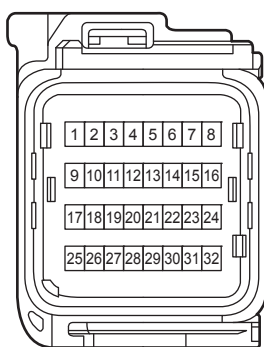 


N34
Yellow

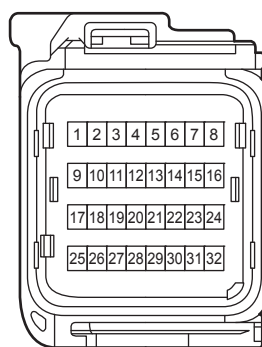 

N35
Yellow

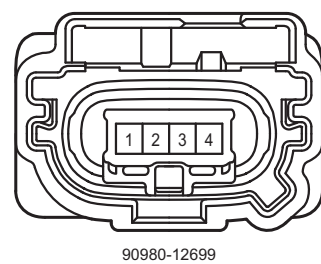 

N36
Yellow

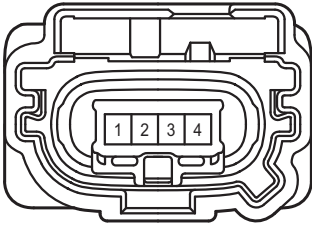 

90980-12699

N37
Yellow



90980-12490

N38
Yellow



90980-12490

N53
Yellow



90980-12698

N54
Yellow



90980-12698

N55
Yellow



 
90980-12698

N56
Yellow




90980-12698

N57
Black




90980-12452

 N58
Black




90980-12452

 N59
Black




90980-12452

 N60
Black




90980-12452

 N61
Black

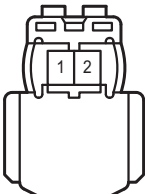

90980-12575

 N62
Black

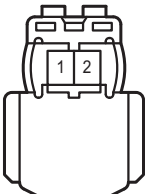

90980-12575

N67
Gray



 
90980-10942

N68
Gray




90980-12520


N97
White

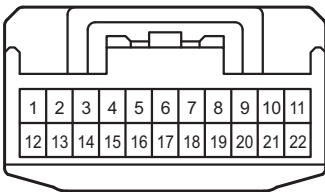


90980-12372

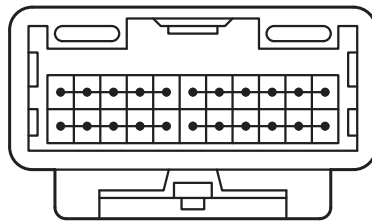 


N99
White

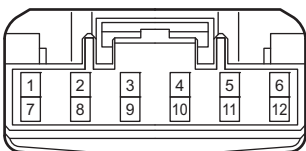 


90980-12C68

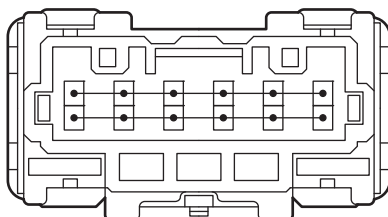 


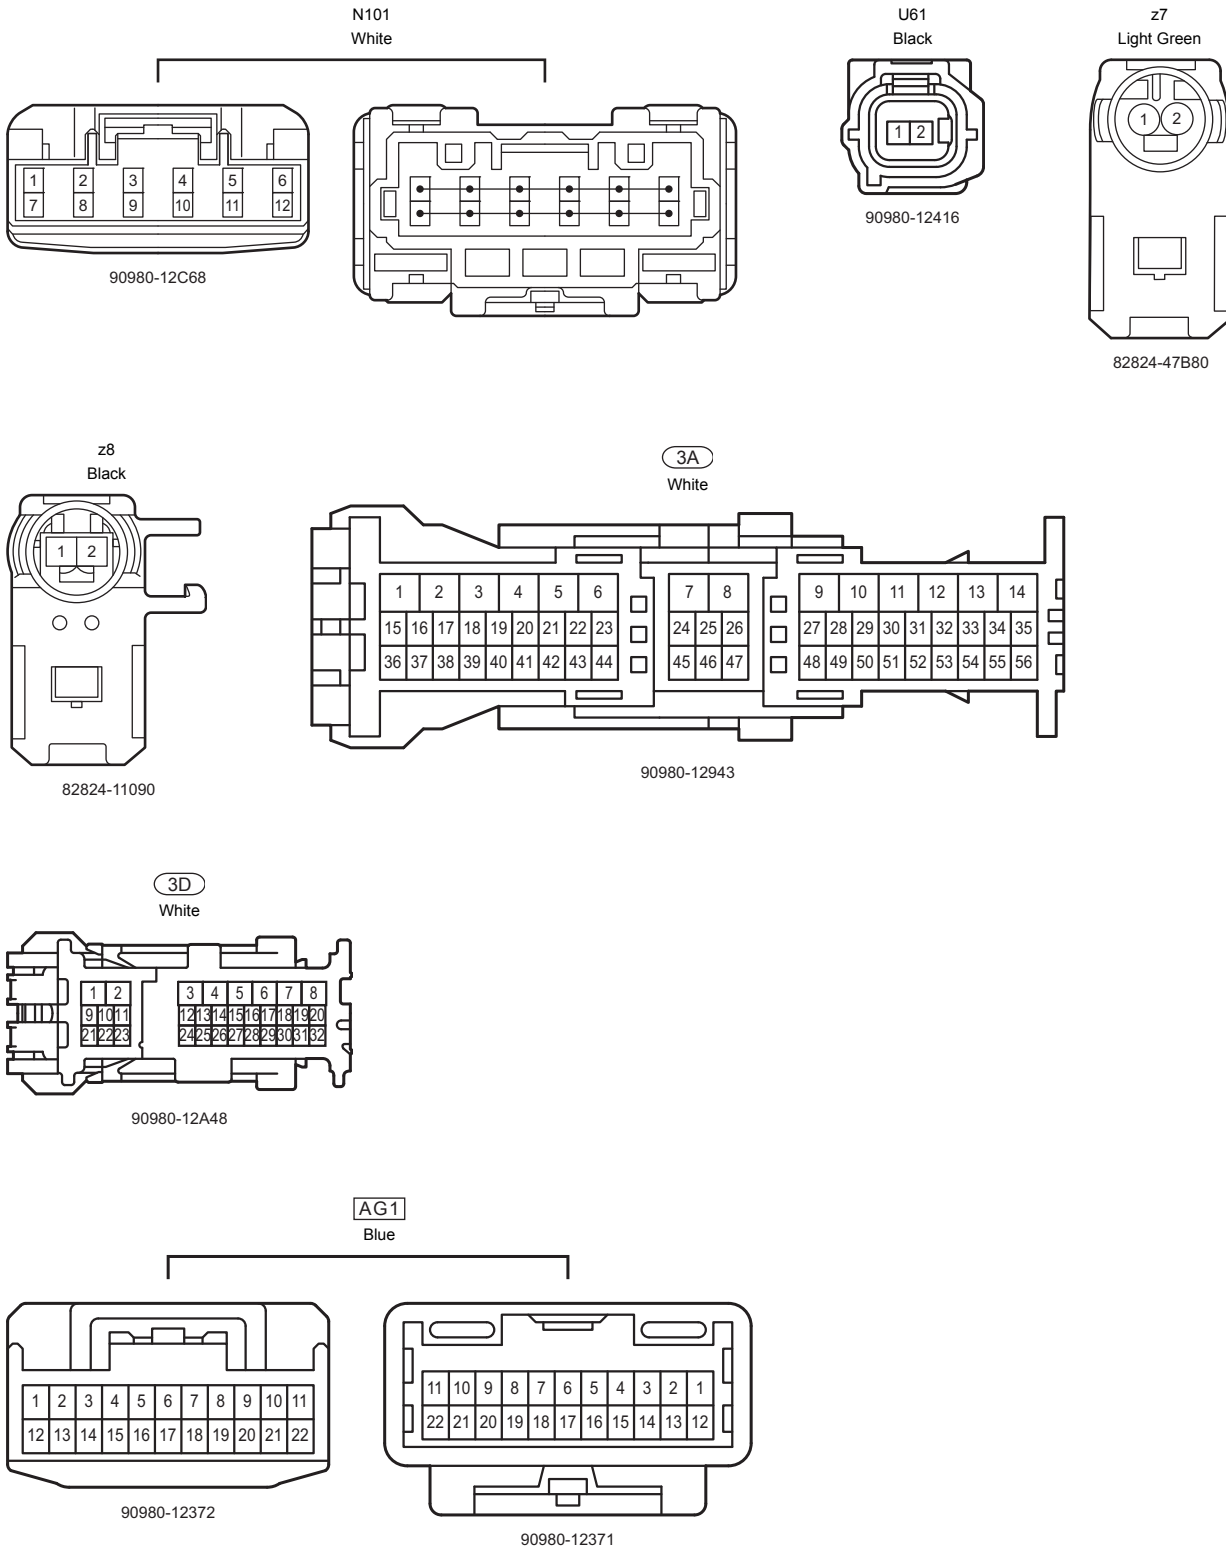 


AG2
White

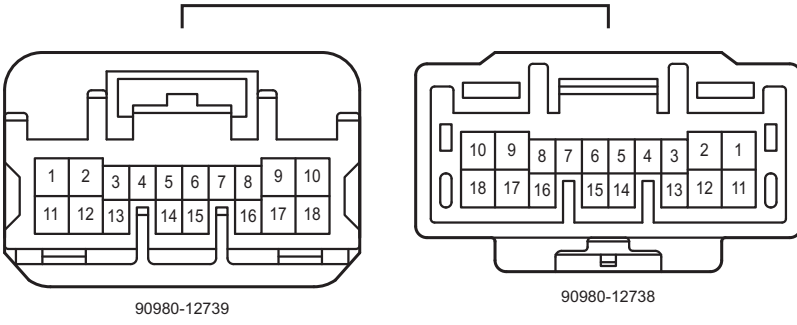 


AG6
Yellow

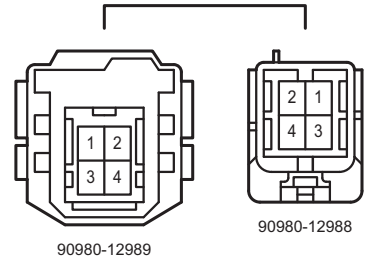 


GH1
Yellow

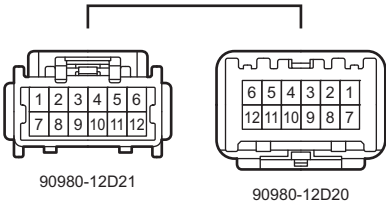 


JN1
White

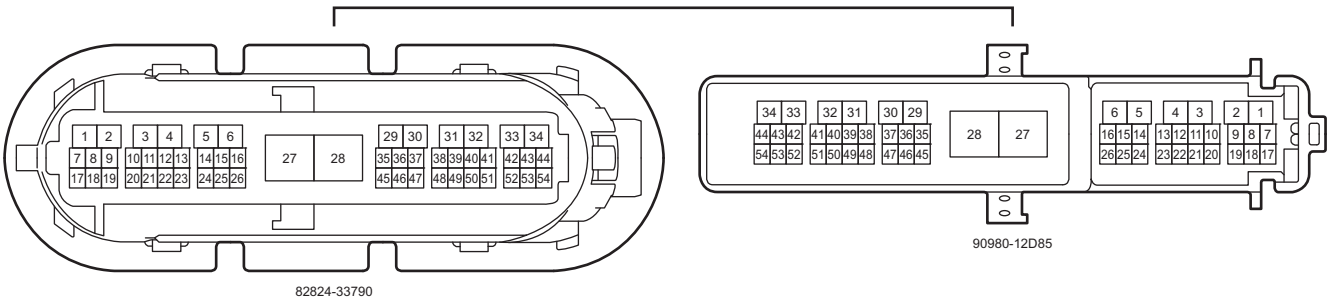 


JN2
White

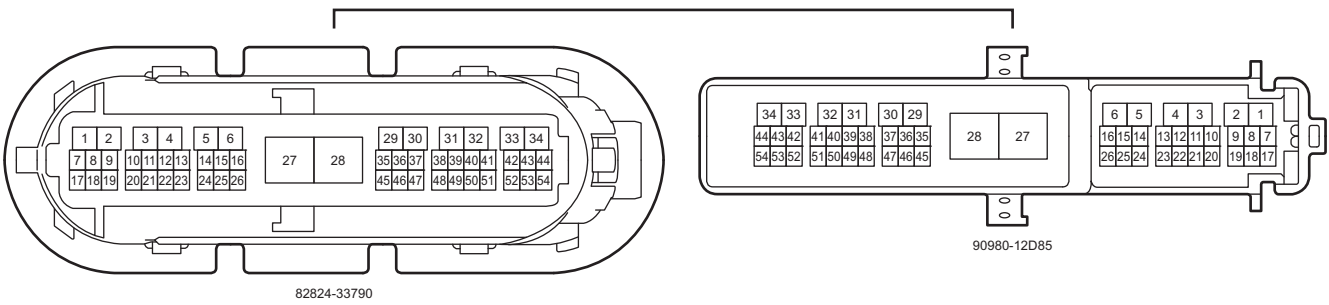 

NA1
Yellow

 


90980-12D21

 


90980-12D20

 NG2
White

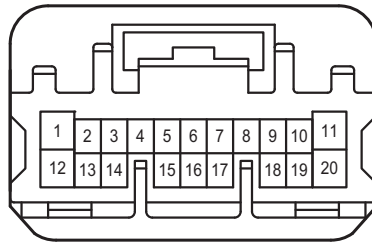


90980-12741

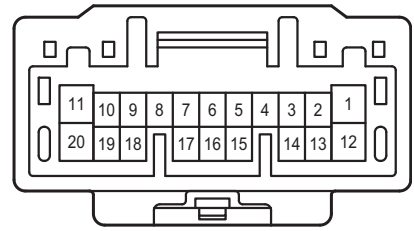 


90980-12740

 NG3
Blue

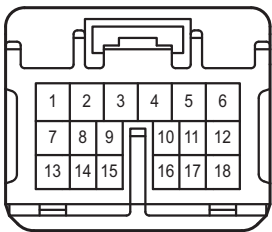


90980-12745

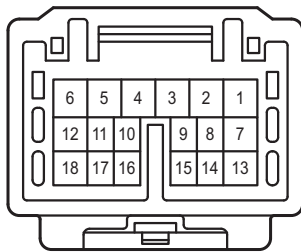 


90980-12744

 NG5
Black

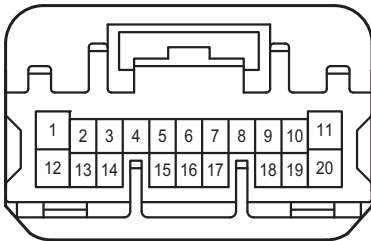

90980-12741

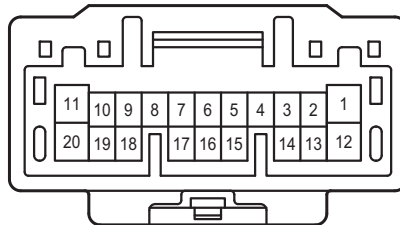 


90980-12740

NU5

Black Gray



 90980-11156



90980-11155