


Position of Parts in Engine Compartment (6AR-FSE)

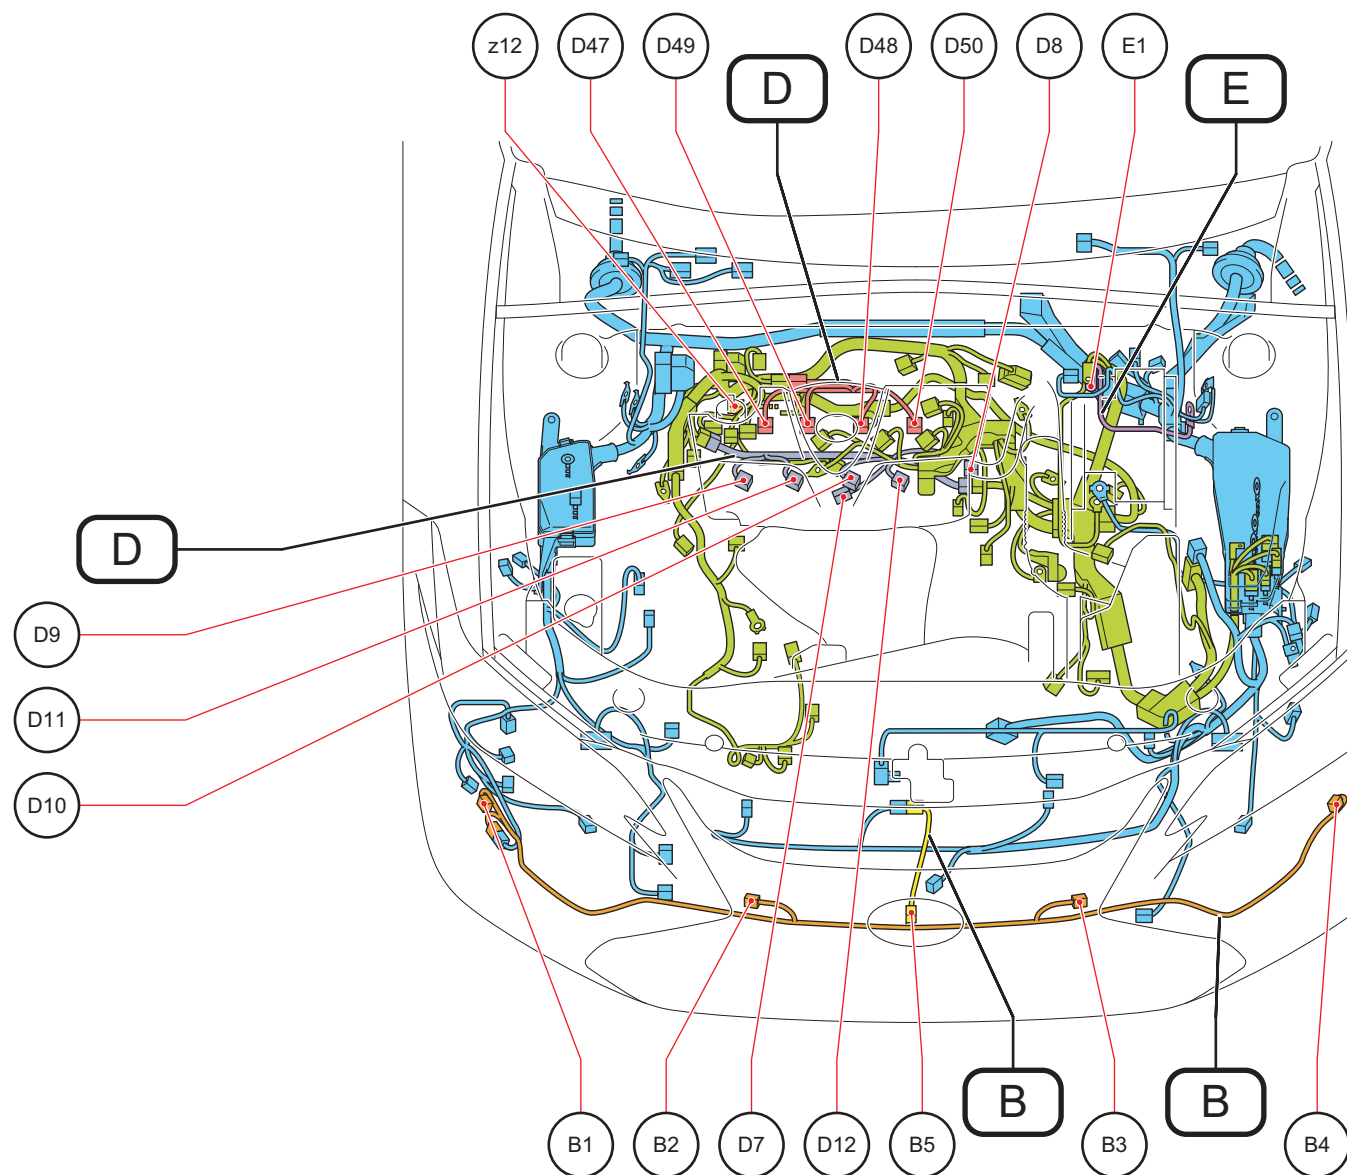

- B 1 Front Corner Ultrasonic Sensor RH
- B 2 Front Center Ultrasonic Sensor RH
- B 3 Front Center Ultrasonic Sensor LH
- B 4 Front Corner Ultrasonic Sensor LH
- B 5 Front Television Camera Assembly
- D 7 Knock Control Sensor
- D 8 Fuel Pressure Sensor (Fuel Delivery Pipe Assembly) (for High Pressure Side)
- D 9 No. 1 Direct Fuel Injector Assembly
- D 10 No. 3 Direct Fuel Injector Assembly
- D 11 No. 2 Direct Fuel Injector Assembly
- D 12 No. 4 Direct Fuel Injector Assembly
- D 47 No. 1 Port Fuel Injector Assembly
- D 48 No. 3 Port Fuel Injector Assembly
- D 49 No. 2 Port Fuel Injector Assembly
- D 50 No. 4 Port Fuel Injector Assembly
- E 1 Battery
- z 12 Steering Torque Sensor Board Sub-Assembly (Rack and Pinion Power Steering Gear Assembly), Power Steering ECU with Motor Assembly (Rack and Pinion Power Steering Gear Assembly)

