

Parking Assist (LEXUS Parking Assist-Sensor) (Before Sep. 2013 Production)

1

(IG) 10A RH-IG 2 43 4A LG (RHD) 4 IG ECU 5 SB

(IG) 10A LH-IG 2 43 5A LG (LHD) 45 5A

N57 Back Sonar or Clearance Sonar Switch Assembly

2

N10 Clearance Warning ECU Assembly

IG 1 LG 9 CLSW SB 15 CBZ LG 16 EF L 6 E5 G 4 BOF R 8 SOF SB 23 E1 W 24 SOR P 22 BOR GR 30 E W-B (LHD) W-B (RHD) 17 R1 18 R2

N45 No. 1 Clearance Warning Buzzer

1 Z+ 2 Z-

3

10 NA2 19 NA2 17 NA2

8 AD1 7 AD1 3 AD1

5 EI BI SI BO SO EO D1 Front No. 1 Ultrasonic Sensor LH

2 W SB LG 1 BI SI EI BO SO EO D2 Front No. 1 Ultrasonic Sensor Center LH

1 Y GR R 2 BI SI EI BO SO EO D3 Front No. 1 Ultrasonic Sensor Center RH

B G L 1 BI SI EI BO SO EO D4 Front No. 1 Ultrasonic Sensor RH

17 NU1 16 NU1 15 NU1

1 BU1 2 BU1 3 BU1

5 EI BI SI BO SO EO N1 Rear No. 1 Ultrasonic Sensor LH

2 GR LG SB 1 BI SI EI BO SO EO N2 Rear No. 1 Ultrasonic Sensor Center LH

1 P V L 2 BI SI EI BO SO EO N3 Rear No. 1 Ultrasonic Sensor Center RH

L SB R 1 BI SI EI BO SO EO N4 Rear No. 1 Ultrasonic Sensor RH

4

11 14 N123 Junction Connector 10 12

W-B (LHD) W-B (RHD)

N1 N6

Multiplex Communication System (CAN) <2-7> <3-10>

Multiplex Communication
System (CAN)-2 7~2 10~

Parking Assist (LEXUS Parking Assist-Sensor) (Before Sep. 2013 Production)

