

F RELAY LOCATIONS

[Engine Compartment] (LHD)

* 1:Except *2

* 2:8AR-FTS Cooling Fan Motor
240W Type

Power Steering
ECU Assembly

Engine Room R/B
Assembly No. 1
Engine Room J/B
Assembly No. 1

Headlight
Light Control ECU
Sub-Assembly RH

Engine Room R/B No. 3

Brake Actuator Assembly

Engine Room R/B
Assembly No. 2
Engine Room J/B
Assembly No. 2

Transmission
Control ECU
Assembly

ECM

Headlight
Light Control ECU
Sub-Assembly LH

Injector Driver

No. 2 Cooling
Fan ECU

Cooling Fan
ECU (*2)

Cooling Fan
ECU (*1)

Headlight Cleaner
Control Relay

(RHD)

* 1:Except *2

* 2:2GR-FKS Cooling Fan Motor
240W Type,
8AR-FTS Cooling Fan Motor
240W Type

Headlight
Light Control ECU
Sub-Assembly RH

Brake Actuator Assembly

Engine Room R/B No. 3

Power Steering
ECU Assembly

Engine Room R/B
Assembly No. 1
Engine Room J/B
Assembly No. 1

Engine Room R/B
Assembly No. 2
Engine Room J/B
Assembly No. 2

Transmission
Control ECU
Assembly

ECM

Headlight
Light Control ECU
Sub-Assembly LH

Injector Driver

No. 2 Cooling
Fan ECU

Cooling Fan
ECU (*2)

Cooling Fan
ECU (*1)

Headlight Cleaner
Control Relay