


Position of Parts in Engine Compartment <RHD 2GR-FKS>

* 1: Before Sep. 2016 Production
 * 2: From Sep. 2016 Production

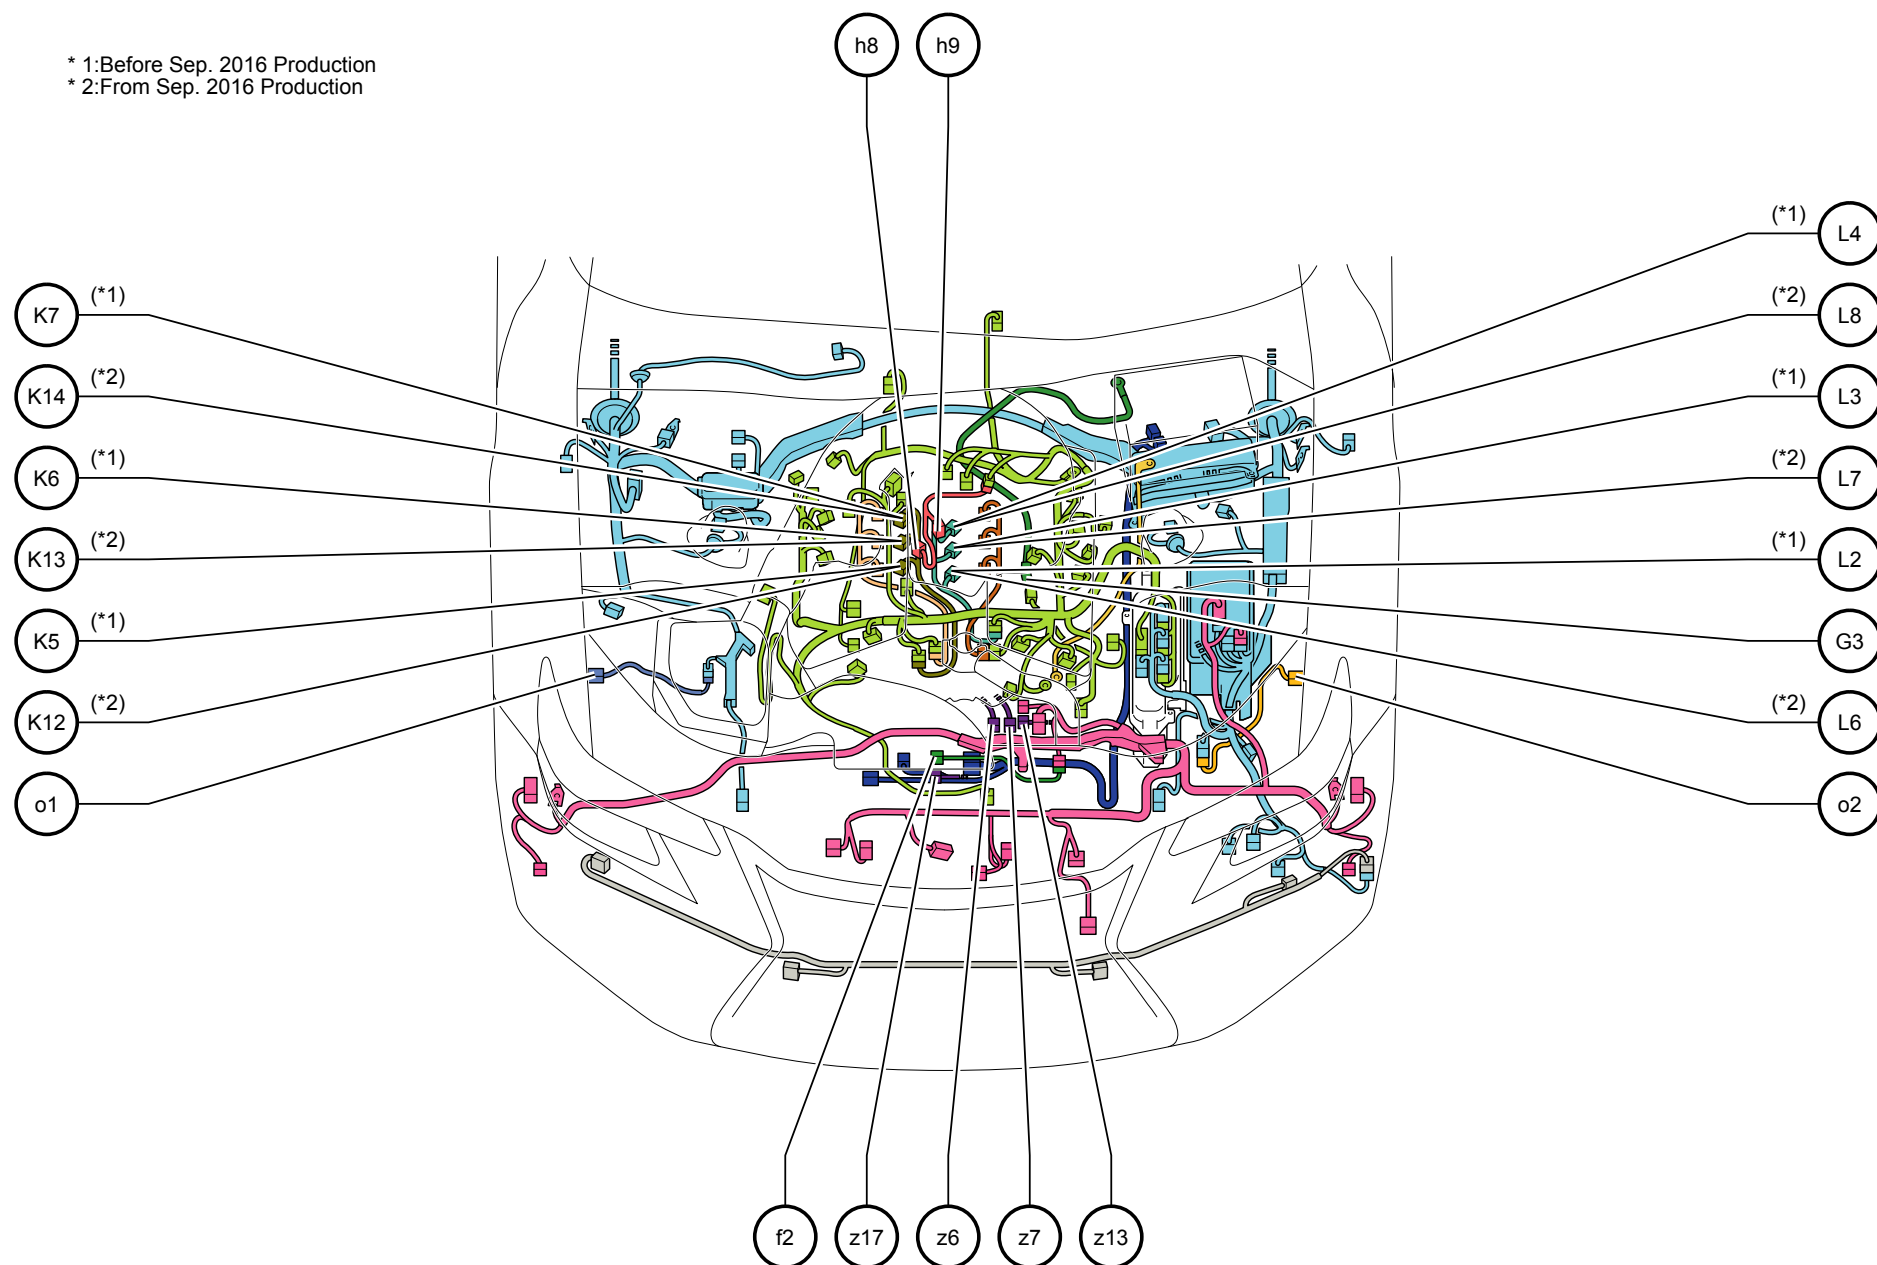

G 3 Starter Assembly

- K 5 Fuel Injector Assembly No. 1 (for Direct Injection)
- K 6 Fuel Injector Assembly No. 3 (for Direct Injection)
- K 7 Fuel Injector Assembly No. 5 (for Direct Injection)
- K 12 Fuel Injector Assembly No. 1 (for Direct Injection)
- K 13 Fuel Injector Assembly No. 3 (for Direct Injection)
- K 14 Fuel Injector Assembly No. 5 (for Direct Injection)

- L 2 Fuel Injector Assembly No. 2 (for Direct Injection)
- L 3 Fuel Injector Assembly No. 4 (for Direct Injection)
- L 4 Fuel Injector Assembly No. 6 (for Direct Injection)
- L 6 Fuel Injector Assembly No. 2 (for Direct Injection)
- L 7 Fuel Injector Assembly No. 4 (for Direct Injection)
- L 8 Fuel Injector Assembly No. 6 (for Direct Injection)

- f 2 No. 2 Cooling Fan ECU , No. 2 Cooling Fan Motor

- h 8 Knock Control Sensor (Bank 1)
- h 9 Knock Control Sensor (Bank 2)

- o 1 Front Speed Sensor RH
- o 2 Front Speed Sensor LH

- z 6 Cooling Fan ECU , Cooling Fan Motor
- z 7 Cooling Fan ECU , No. 2 Cooling Fan Motor
- z 13 Cooling Fan ECU , Cooling Fan Motor
- z 17 No. 2 Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment <RHD 2GR-FKS>

