

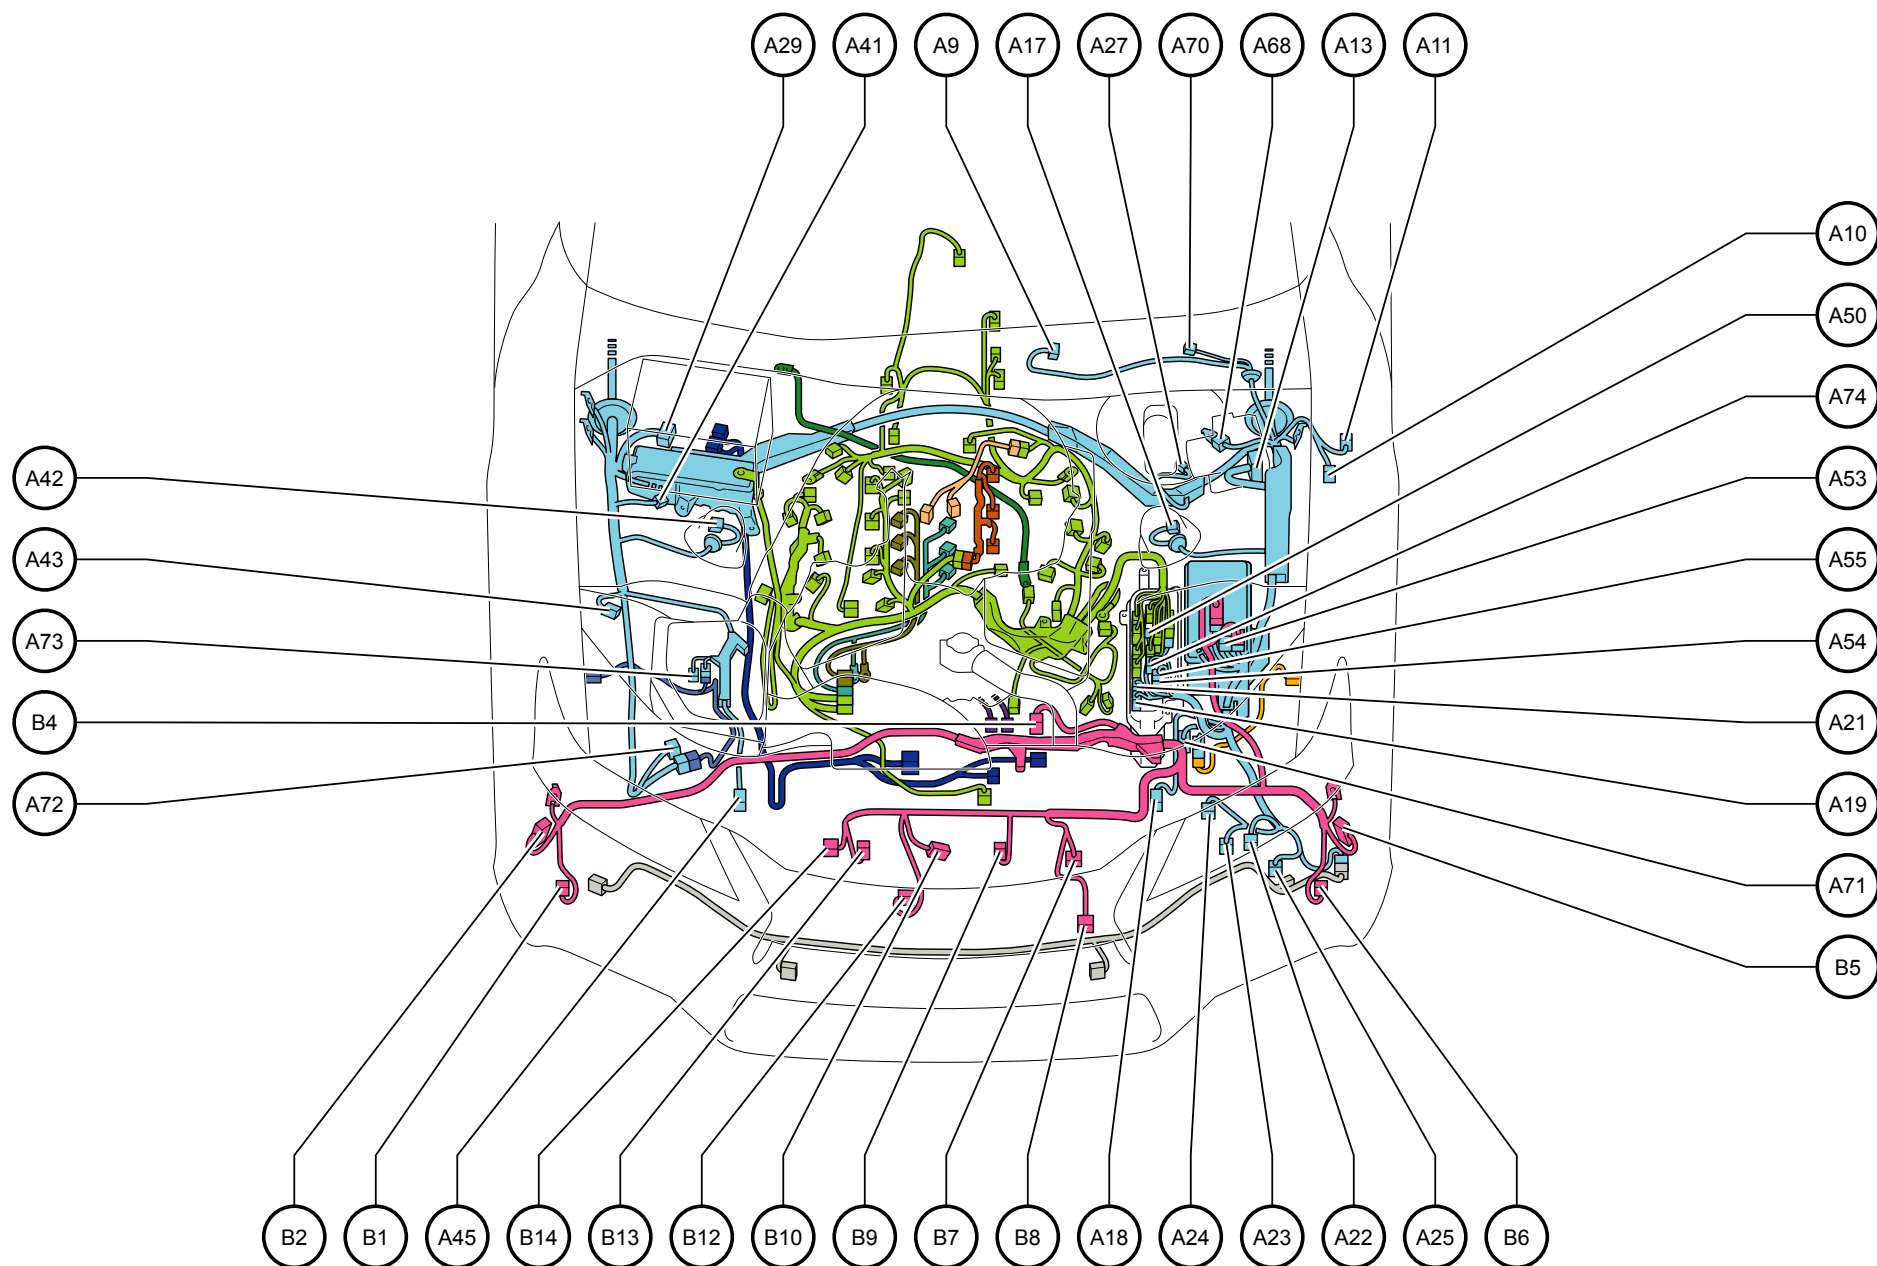
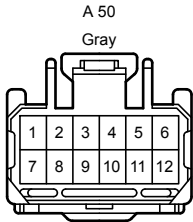
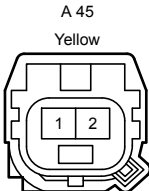
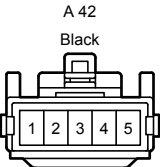
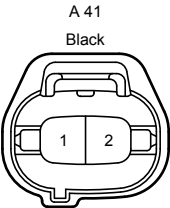
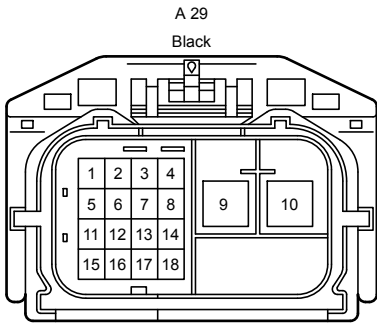
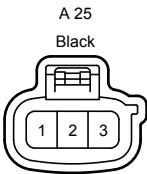
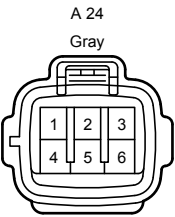
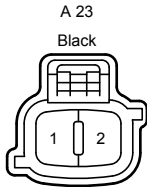
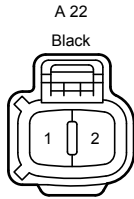
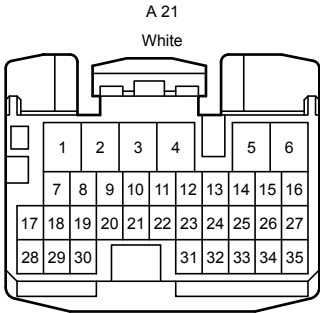
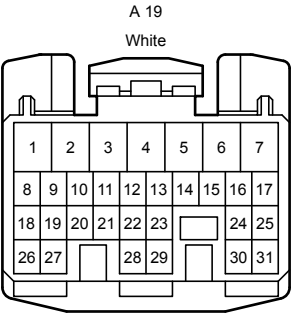
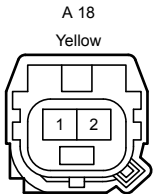
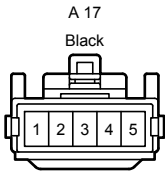
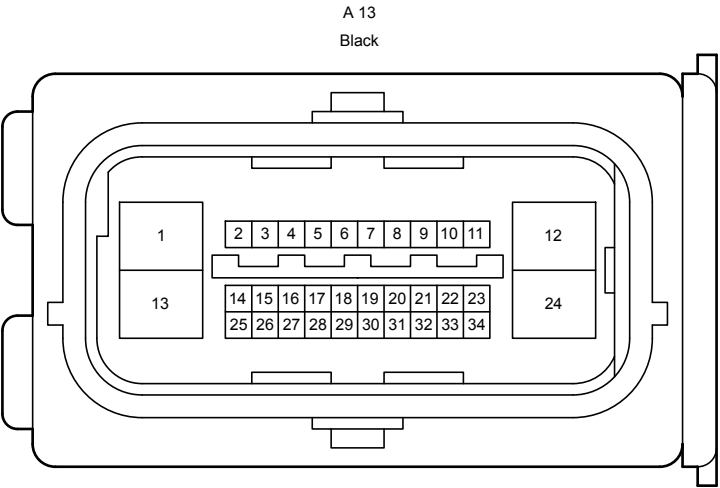
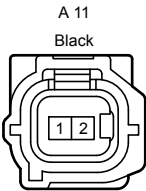


Position of Parts in Engine Compartment <LHD 2GR-FSE>

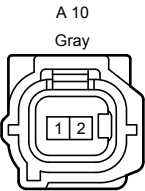

- A 9 Windshield Wiper Motor Assembly
- A 10 Wireless Door Lock Buzzer
- A 11 Front Tire Pressure Monitor Initiator
- A 13 Brake Actuator Assembly
- A 17 Front Absorber Control Actuator LH
- A 18 Front Airbag Sensor LH
- A 19 ECM
- A 21 ECM
- A 22 Level Warning Switch Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Headlight Cleaner Control Relay
- A 25 Headlight Cleaner Motor and Pump Assembly
- A 27 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 29 Power Steering ECU Assembly
- A 41 No. 1 Wiring Harness Condenser Assembly
- A 42 Front Absorber Control Actuator RH
- A 43 Security Horn Assembly
- A 45 Front Airbag Sensor RH
- A 50 Junction Connector
- A 53 Junction Connector
- A 54 Junction Connector
- A 55 Junction Connector
- A 68 Junction Connector
- A 70 Front Wiper Deicer (Windshield Glass)
- A 71 Front Speed Sensor LH
- A 72 Front Speed Sensor RH
- A 73 Front Speed Sensor RH
- A 74 Transmission Control ECU Assembly

- B 1 Front Fog Light Assembly RH
- B 2 Headlight Assembly RH
- B 4 Cooling Fan ECU
- B 5 Headlight Assembly LH
- B 6 Front Fog Light Assembly LH
- B 7 A/C Pressure Sensor (Liquid Tube Sub-Assembly)
- B 8 Ambient Temperature Sensor (Thermistor Assembly)
- B 9 Low Pitched Horn Assembly
- B 10 Engine Hood Courtesy Switch
- B 12 Millimeter Wave Radar Sensor Assembly
- B 13 High Pitched Horn Assembly
- B 14 Smog Ventilation Sensor

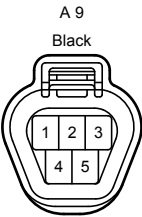

Position of Parts in Engine Compartment <LHD 2GR-FSE>

