


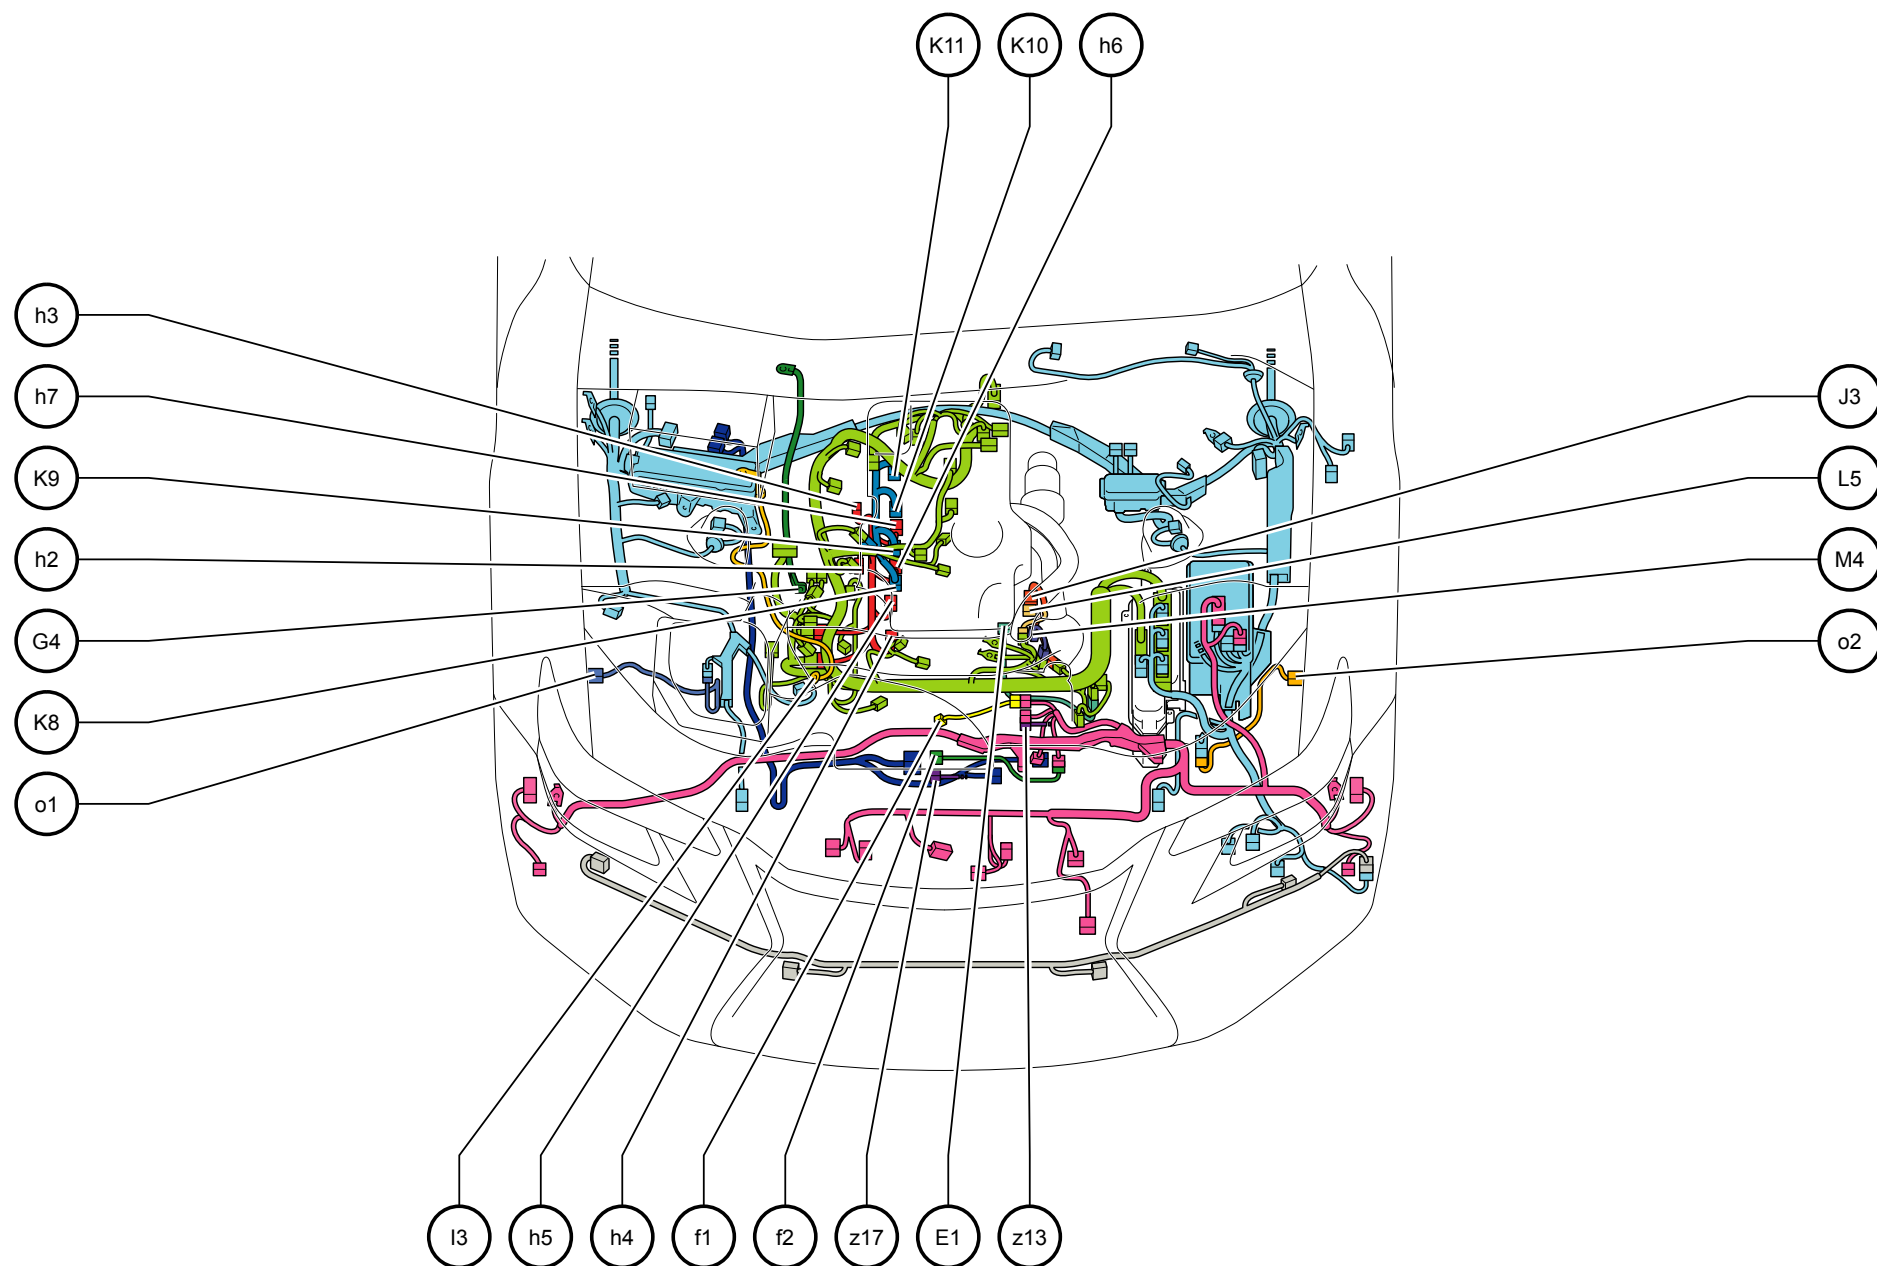

- E 1 Oil Pressure Sender Gage Assembly
- G 4 Starter Assembly
- I 3 Generator Assembly
- J 3 Engine Oil Temperature Sensor (Temperature Sensor)
- K 8 Fuel Injector Assembly No. 1 (for Port Injection)
- K 9 Fuel Injector Assembly No. 2 (for Port Injection)
- K 10 Fuel Injector Assembly No. 3 (for Port Injection)
- K 11 Fuel Injector Assembly No. 4 (for Port Injection)
- L 5 Oil Pressure Sender Gage Assembly
- M 4 No. 2 Vacuum Switching Valve Assembly
- f 1 No. 2 Cooling Fan Motor
- f 2 No. 2 Cooling Fan ECU , No. 2 Cooling Fan Motor
- h 2 Knock Control Sensor (Bank 1)
- h 3 Fuel Pressure Sensor (High Pressure Side)
- h 4 Fuel Injector Assembly No. 1 (for Direct Injection)
- h 5 Fuel Injector Assembly No. 2 (for Direct Injection)
- h 6 Fuel Injector Assembly No. 3 (for Direct Injection)
- h 7 Fuel Injector Assembly No. 4 (for Direct Injection)
- o 1 Front Speed Sensor RH
- o 2 Front Speed Sensor LH
- z 13 Cooling Fan ECU , Cooling Fan Motor
- z 17 No. 2 Cooling Fan ECU , No. 2 Cooling Fan Motor

