


Position of Parts in Body <LHD 2GR-FXE>

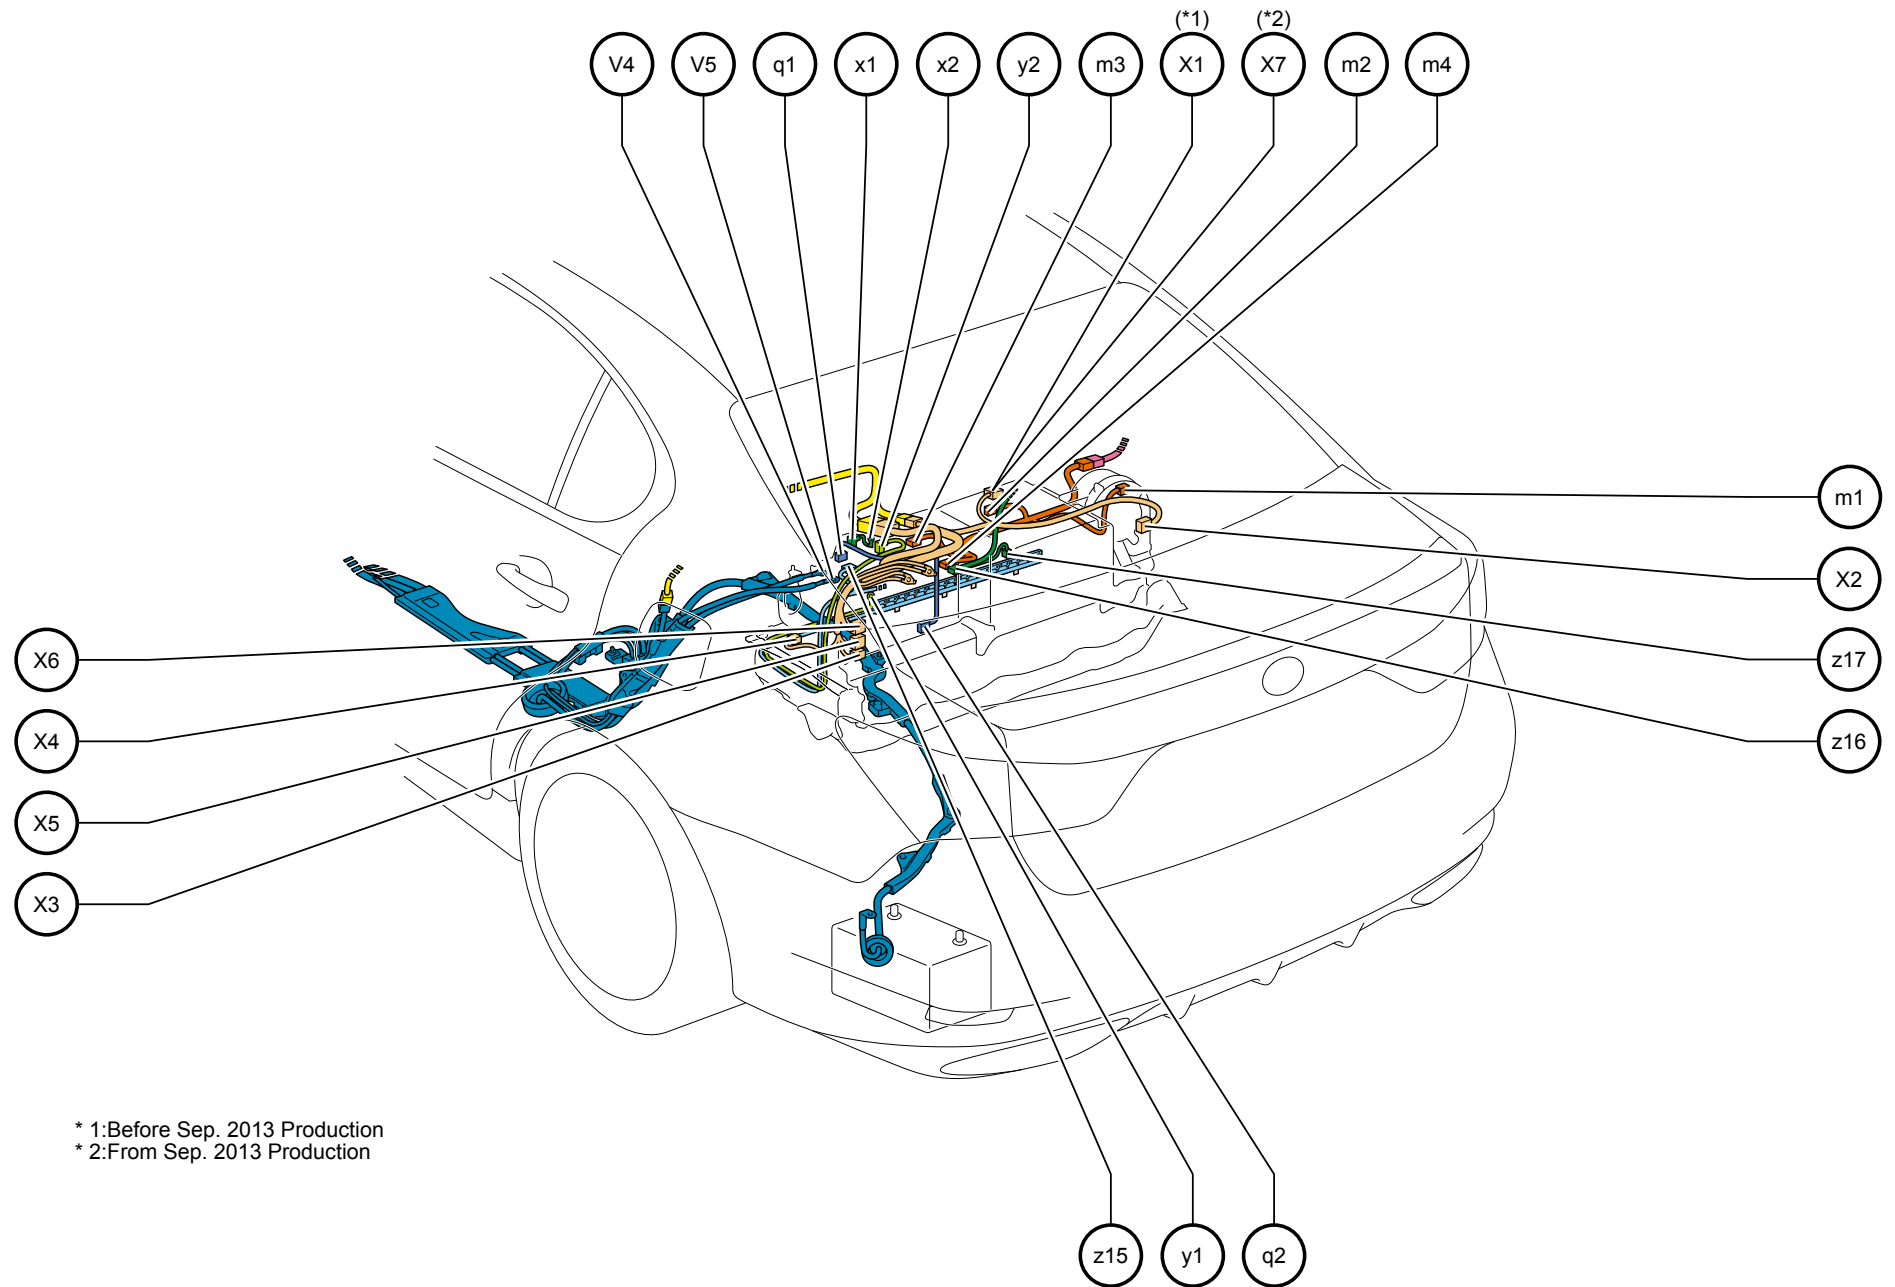

- V 4 Hybrid Battery Junction Block Assembly
- V 5 Hybrid Battery Junction Block Assembly

- X 1 Brake Control Power Supply Assembly
- X 2 Voltage Inverter Assembly
- X 3 Power Steering Converter Assembly
- X 4 Battery Cooling Blower Assembly LH
- X 5 Power Steering Converter Assembly
- X 6 Power Steering Converter Assembly
- X 7 Brake Control Power Supply Assembly

- m 1 Battery Cooling Blower Assembly RH
- m 2 Interlock Switch (Service Plug Grip)
- m 3 Hybrid Battery Junction Block Assembly
- m 4 Battery Voltage Sensor , HV Supply Battery Assembly

- q 1 Hybrid Battery Junction Block Assembly
- q 2 Power Steering Converter Assembly

- x 1 Hybrid Battery Junction Block Assembly
- x 2 HV Supply Battery Assembly

- y 1 HV Supply Battery Assembly
- y 2 Hybrid Battery Junction Block Assembly

- z 15 Battery Voltage Sensor , HV Supply Battery Assembly
- z 16 Battery Voltage Sensor , HV Supply Battery Assembly
- z 17 HV Supply Battery Assembly , Hybrid Battery Junction Block Assembly

Position of Parts in Body <LHD 2GR-FXE>

