


Position of Parts in Instrument Panel <RHD>

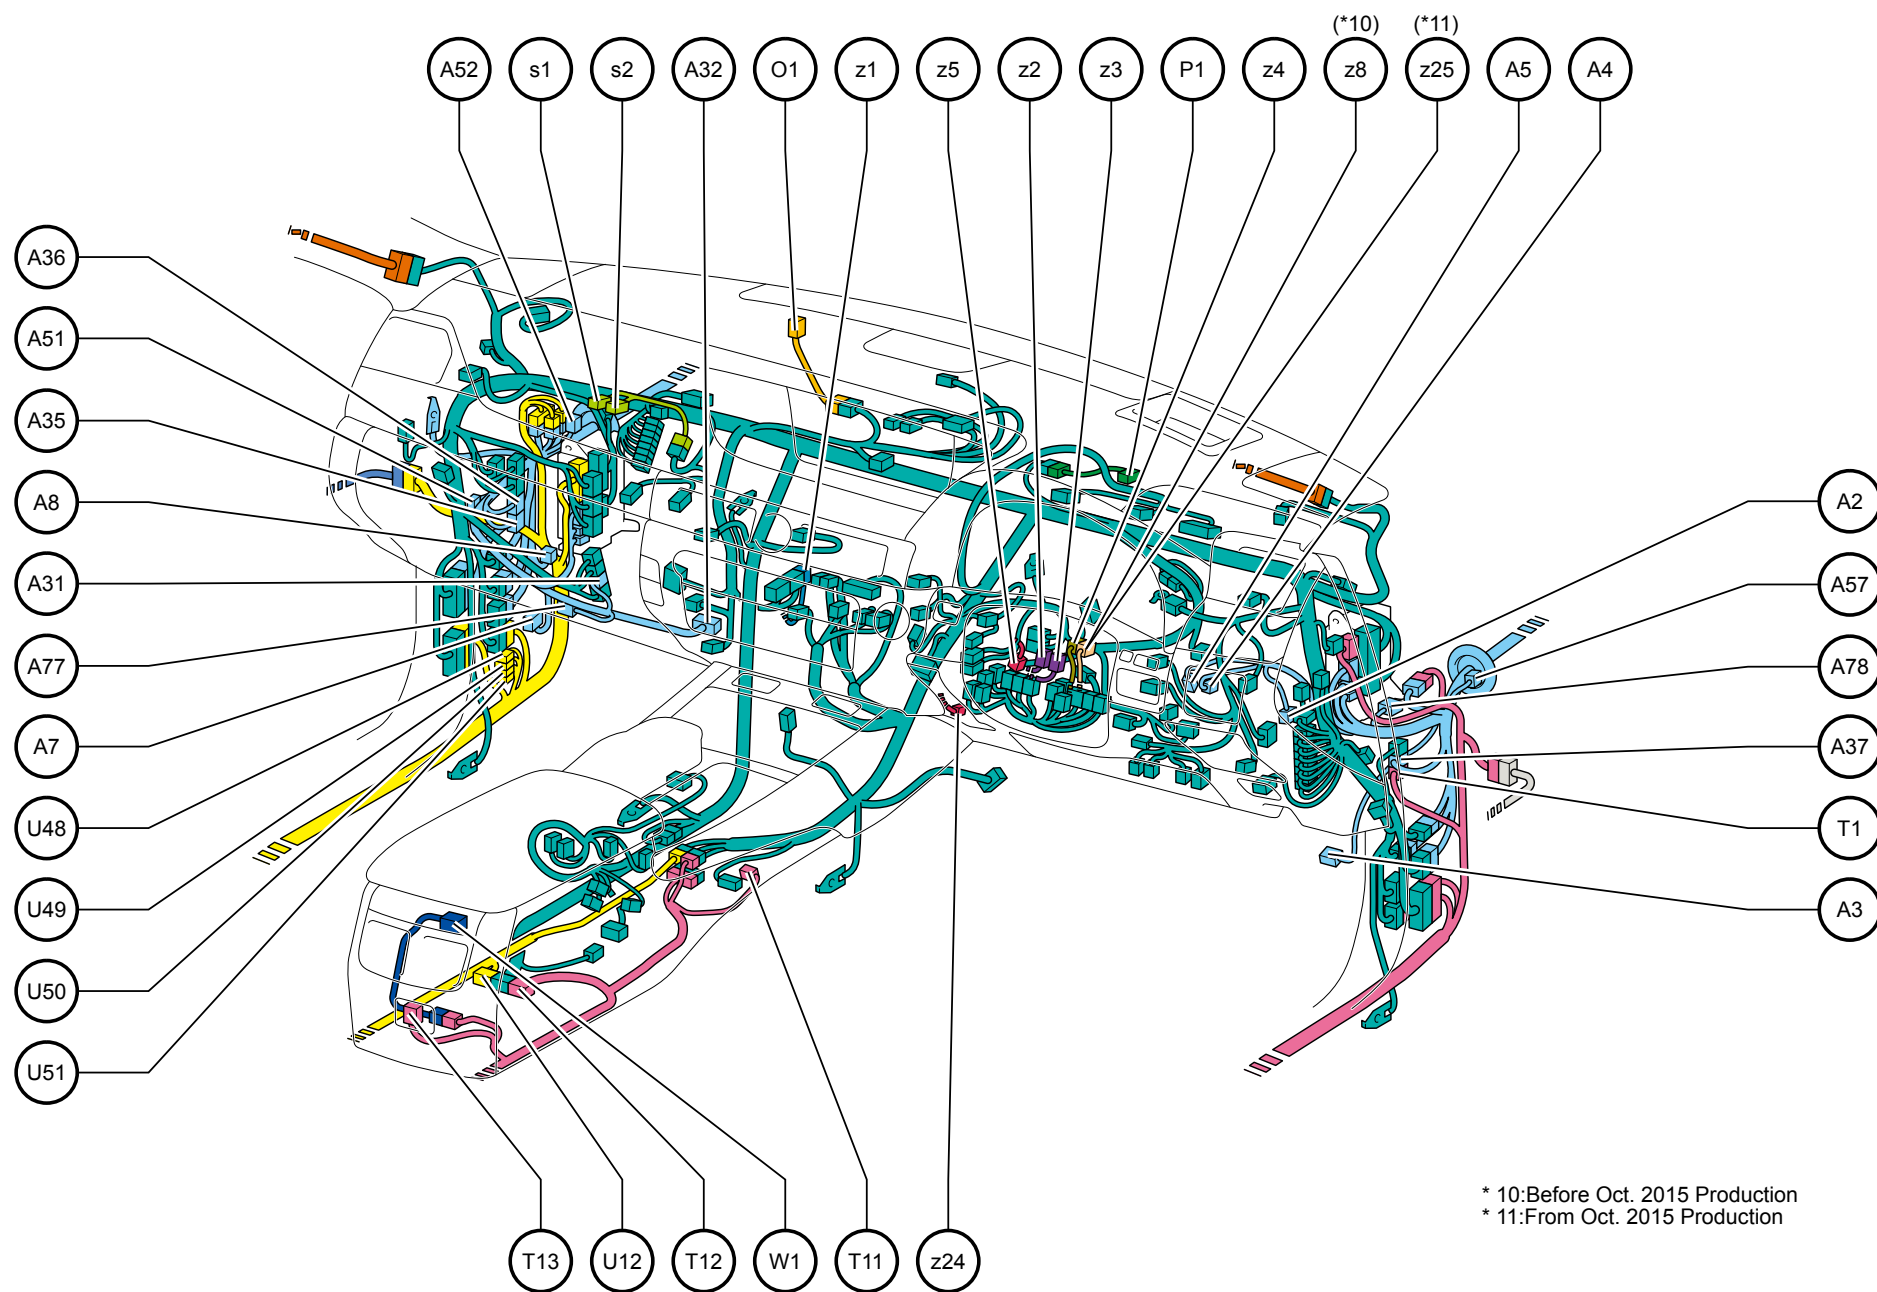

- A 2 Accelerator Pedal Sensor Assembly
- A 3 Kick Down Switch Assembly
- A 4 Brake Pedal Stroke Sensor Assembly
- A 5 Stop Light Switch Assembly
- A 7 Headlight Swivel ECU Assembly
- A 8 Front Acceleration Sensor LH
- A 31 Front Steering Control ECU
- A 32 Blower Motor with Fan Sub-Assembly
- A 35 Power Management Control ECU
- A 36 Power Management Control ECU
- A 37 Absorber Control ECU
- A 51 Junction Connector
- A 52 Junction Connector
- A 57 Junction Connector
- A 77 Junction Connector
- A 78 Junction Connector

- O 1 Automatic Light Control Sensor

- P 1 Headup Display (Combination Meter Mirror ECU)

- T 1 Absorber Control ECU
- T 11 Transmission Control Switch (Transmission Floor Shift Assembly)
- T 12 Airbag Sensor Assembly
- T 13 Rear No. 2 Power Outlet Socket Assembly


- U 12 Airbag Sensor Assembly
- U 48 Junction Connector
- U 49 Junction Connector
- U 50 Junction Connector
- U 51 Junction Connector

- W 1 Console Box Illumination Light Assembly

- s 1 Instrument Panel Passenger Airbag without Door Assembly
- s 2 Instrument Panel Passenger Airbag without Door Assembly

- z 1 A/C Amplifier Assembly , A/C Harness Assembly
- z 2 Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
- z 3 Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
- z 4 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 5 Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly
- z 8 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 24 Steering Wheel Assembly , Spiral Cable Sub-Assembly
- z 25 No. 1 Switch Wire , Spiral Cable Sub-Assembly

Position of Parts in Instrument Panel <RHD>

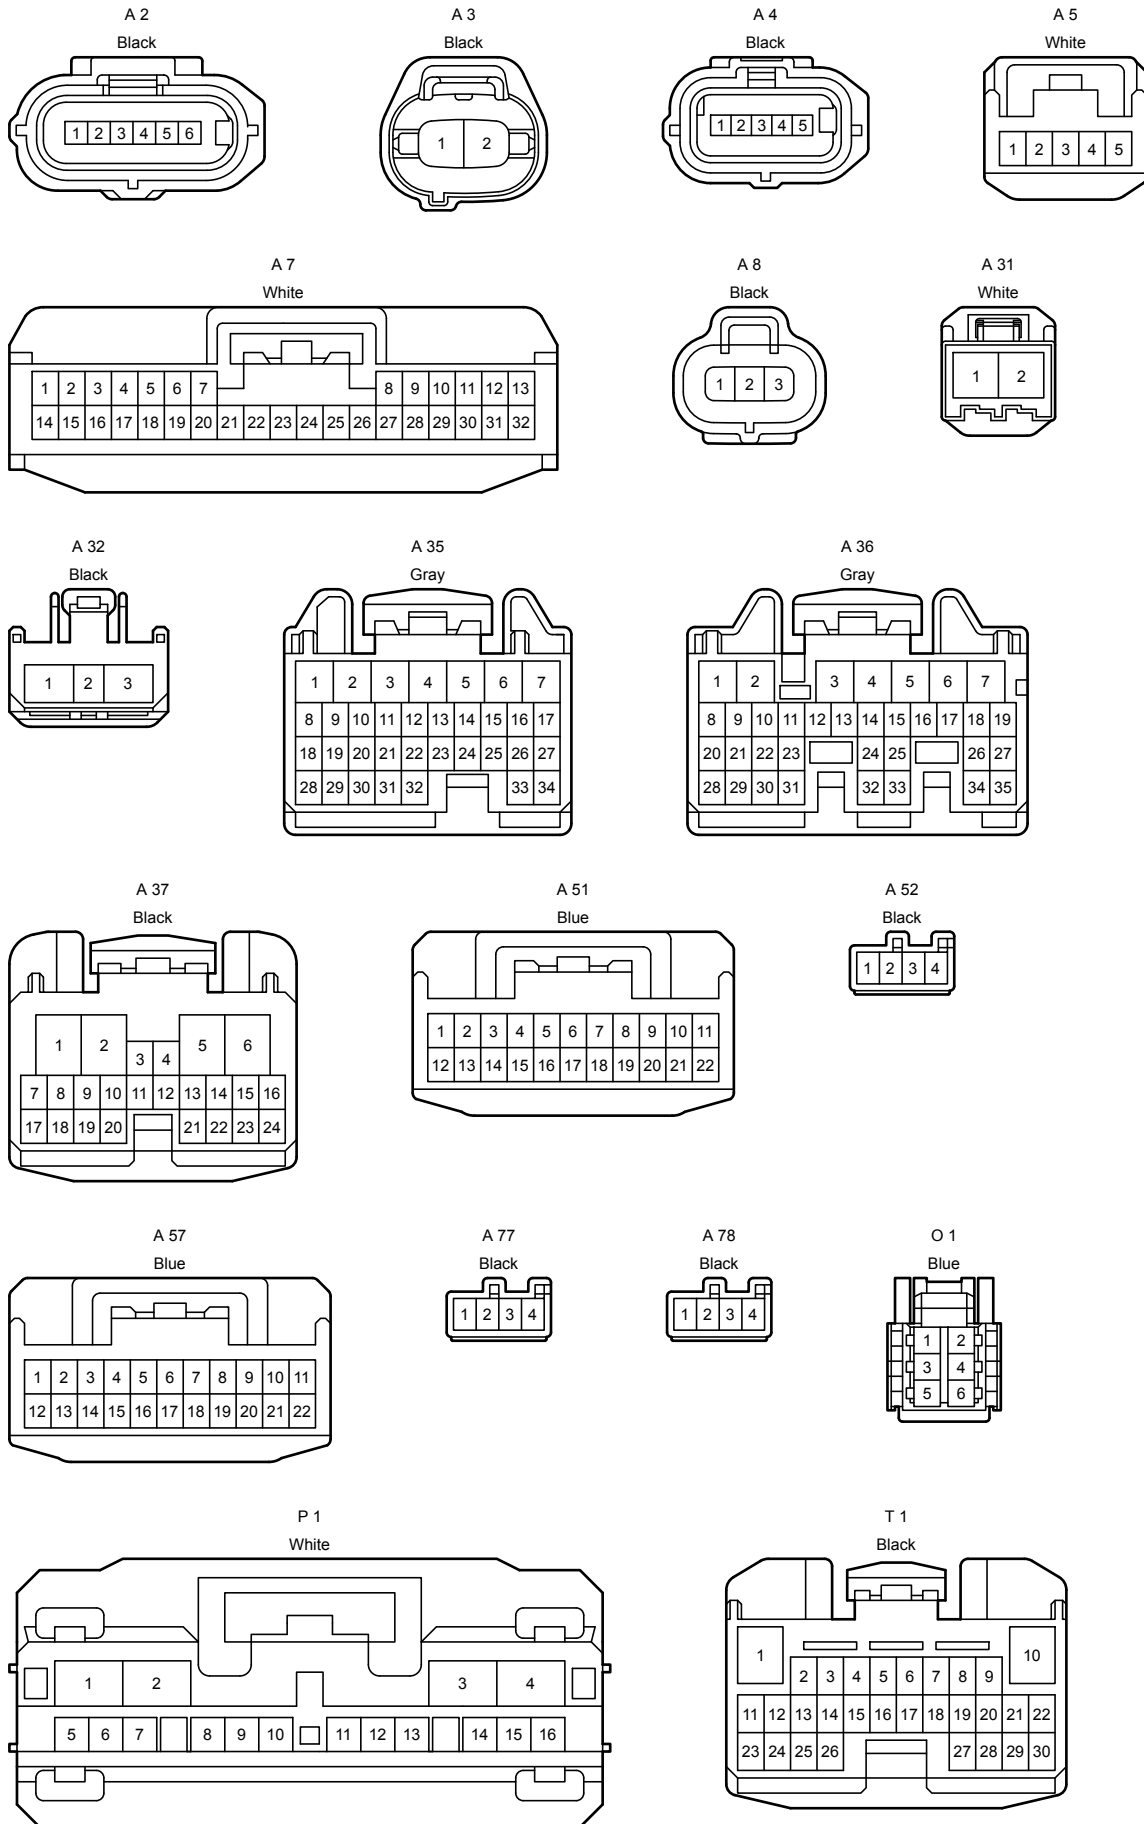

Position of Parts in Instrument Panel <RHD>

