


Position of Parts in Engine Compartment (LHD)

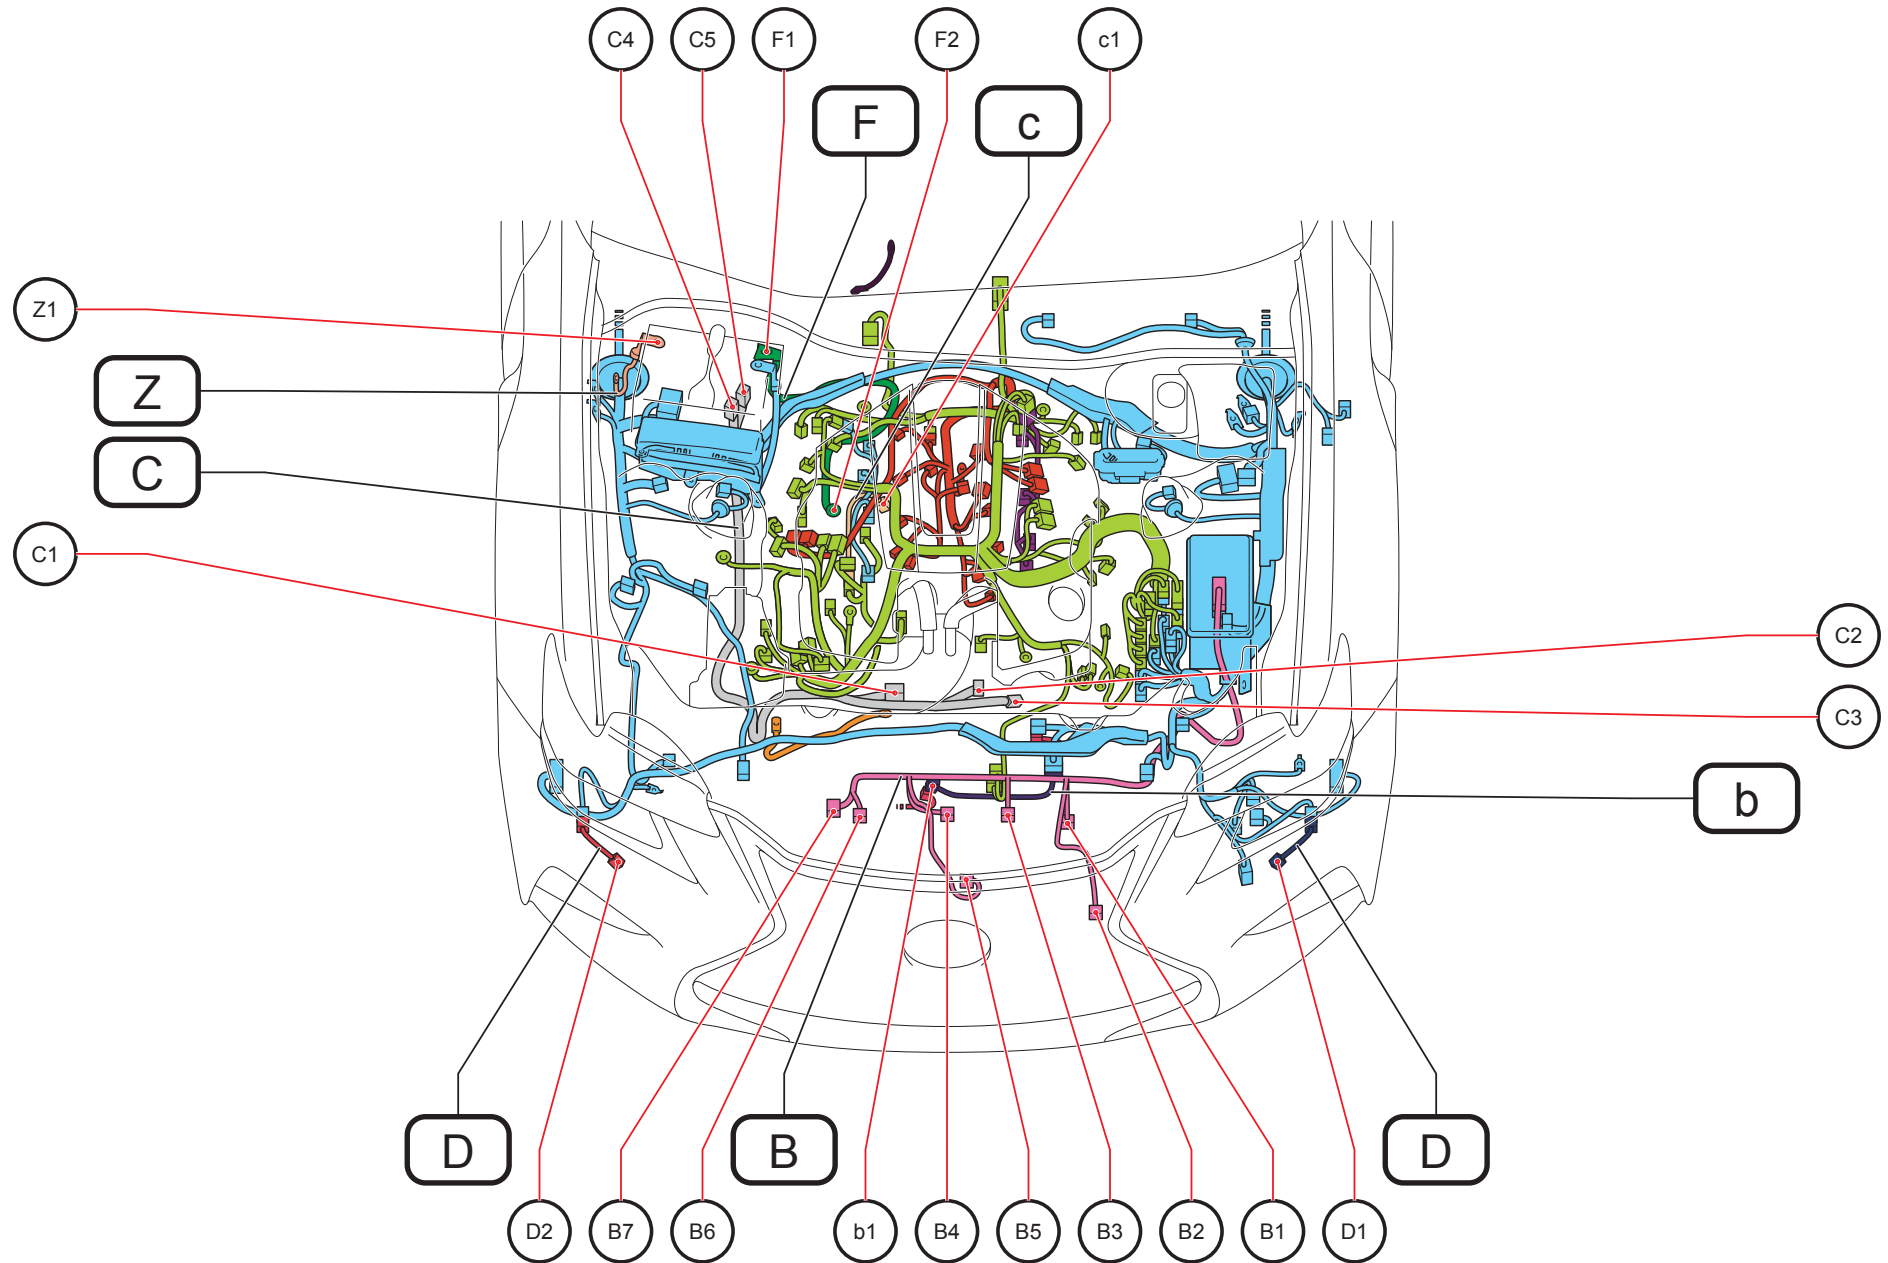

Position of Parts in Engine Compartment (LHD)

B1	A/C Pressure Sensor (Liquid Pipe Sub-Assembly)
B2	Ambient Temperature Sensor (Thermistor Assembly)
B3	Low Pitched Horn Assembly
B4	Engine Hood Courtesy Switch
B5	Millimeter Wave Radar Sensor Assembly
B6	High Pitched Horn Assembly
B7	Smog Ventilation Sensor
C1	Power Steering Motor (Power Steering Link Assembly)
C2	Power Steering Motor (Power Steering Link Assembly)
C3	Power Steering Torque Sensor (Power Steering Link Assembly)
C4	Power Steering ECU Assembly
C5	Power Steering ECU Assembly
D1	Front No. 1 Ultrasonic Sensor LH
D2	Front No. 1 Ultrasonic Sensor RH
F1	Battery
F2	Starter Assembly
Z1	Battery
b1	Cooling Fan ECU RH
c1	Crank Position Sensor

Position of Parts in Engine Compartment (LHD)

