


Position of Parts in Engine Compartment (LHD)

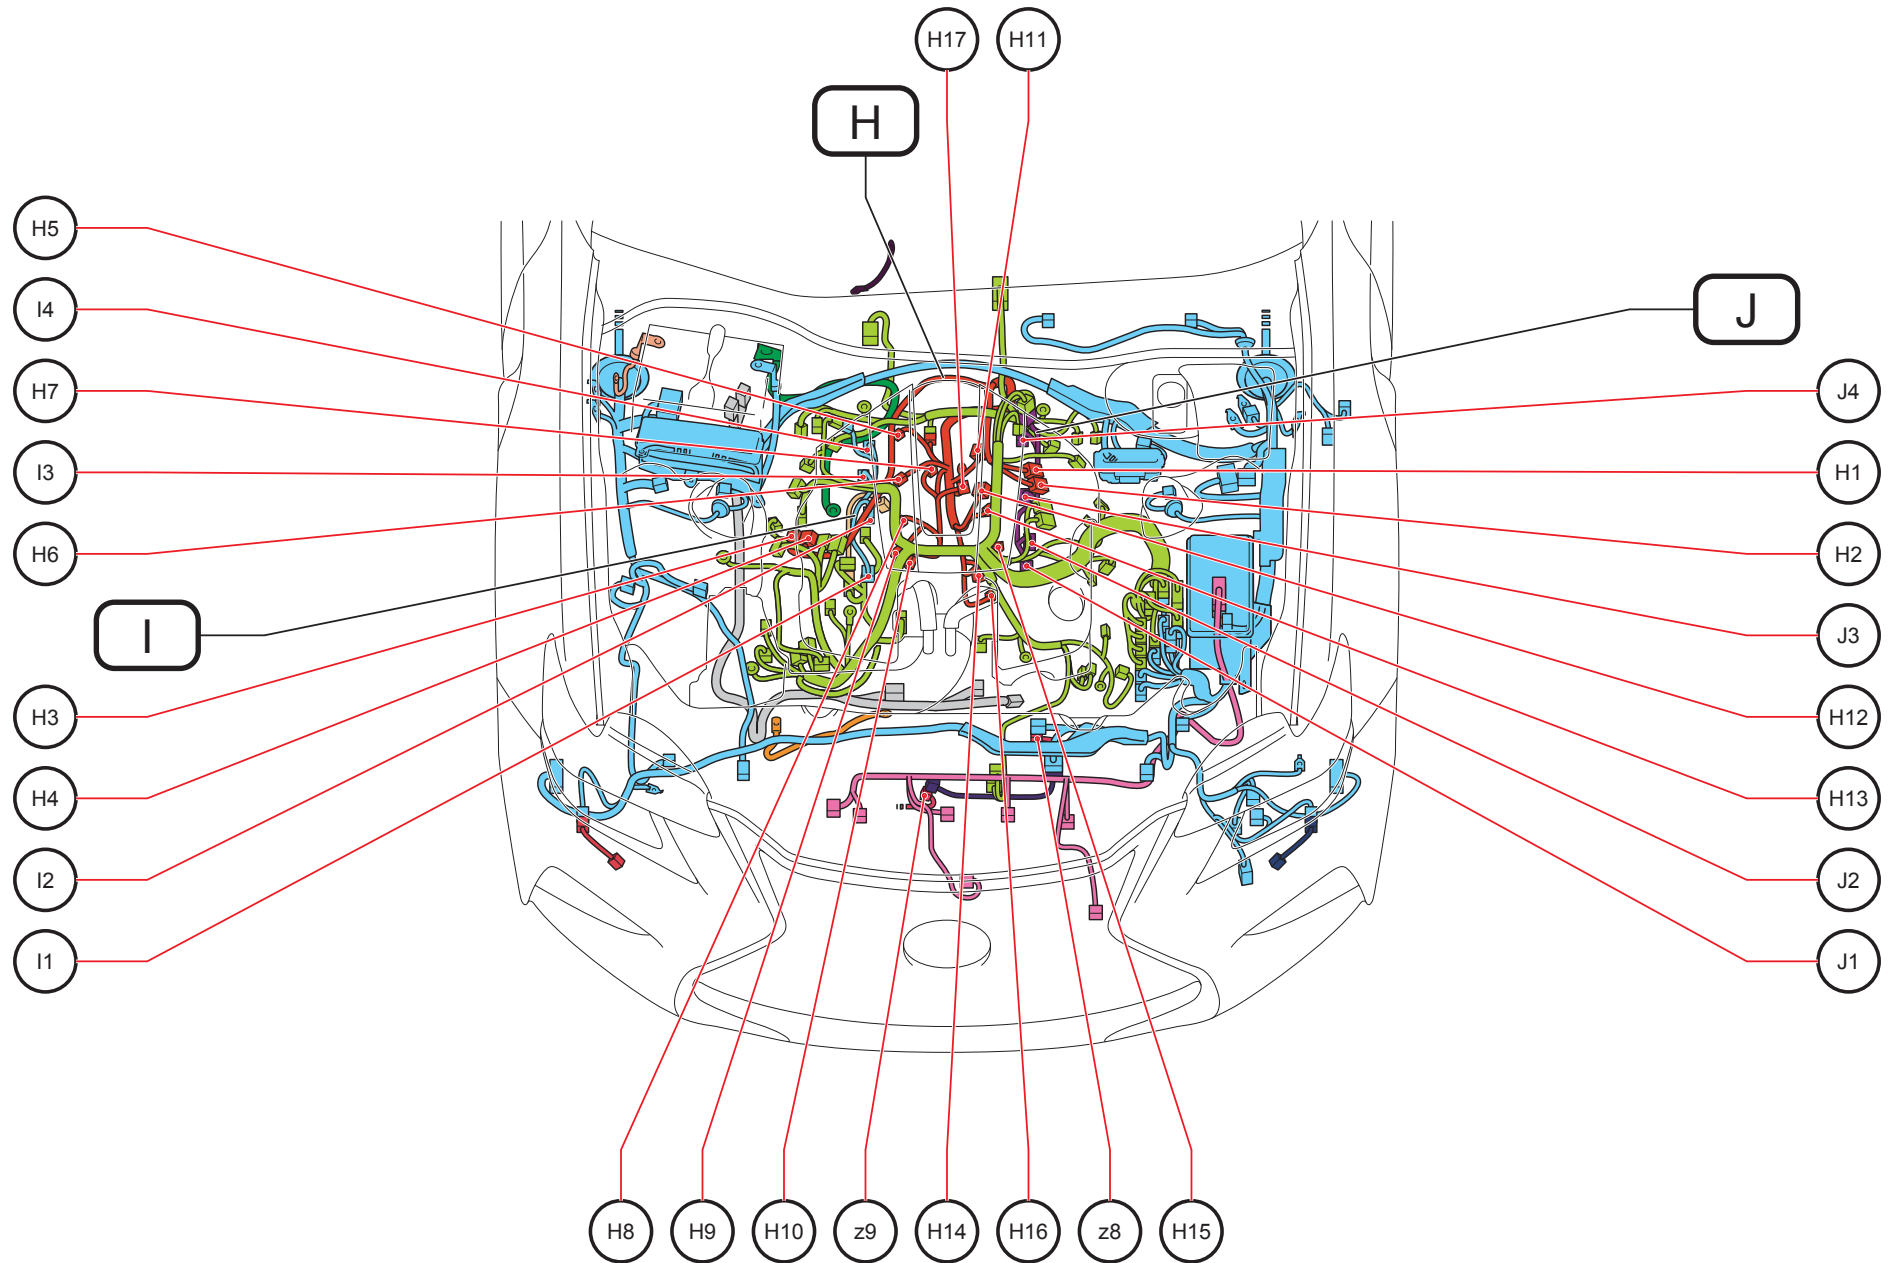

H1	Injector Driver No. 1
H2	Injector Driver No. 1
H3	Injector Driver No. 2
H4	Injector Driver No. 2
H5	Direct Fuel Injector Assembly No. 8
H6	Direct Fuel Injector Assembly No. 6
H7	Knock Control Sensor (Bank 2 Sensor 2)
H8	Direct Fuel Injector Assembly No. 4
H9	Direct Fuel Injector Assembly No. 2
H10	Knock Control Sensor (Bank 2 Sensor 1)
H11	Direct Fuel Injector Assembly No. 7
H12	Knock Control Sensor (Bank 1 Sensor 2)
H13	Direct Fuel Injector Assembly No. 5
H14	Knock Control Sensor (Bank 1 Sensor 1)
H15	Direct Fuel Injector Assembly No. 3
H16	Direct Fuel Injector Assembly No. 1
H17	Fuel Pressure Sensor
I1	Port Fuel Injector Assembly No. 2
I2	Port Fuel Injector Assembly No. 4
I3	Port Fuel Injector Assembly No. 6
I4	Port Fuel Injector Assembly No. 8
J1	Port Fuel Injector Assembly No. 1
J2	Port Fuel Injector Assembly No. 3
J3	Port Fuel Injector Assembly No. 5
J4	Port Fuel Injector Assembly No. 7
z8	Cooling Fan ECU LH , Cooling Fan Motor
z9	Cooling Fan ECU RH , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment (LHD)

