



Position of Parts in Engine Compartment (RHD)

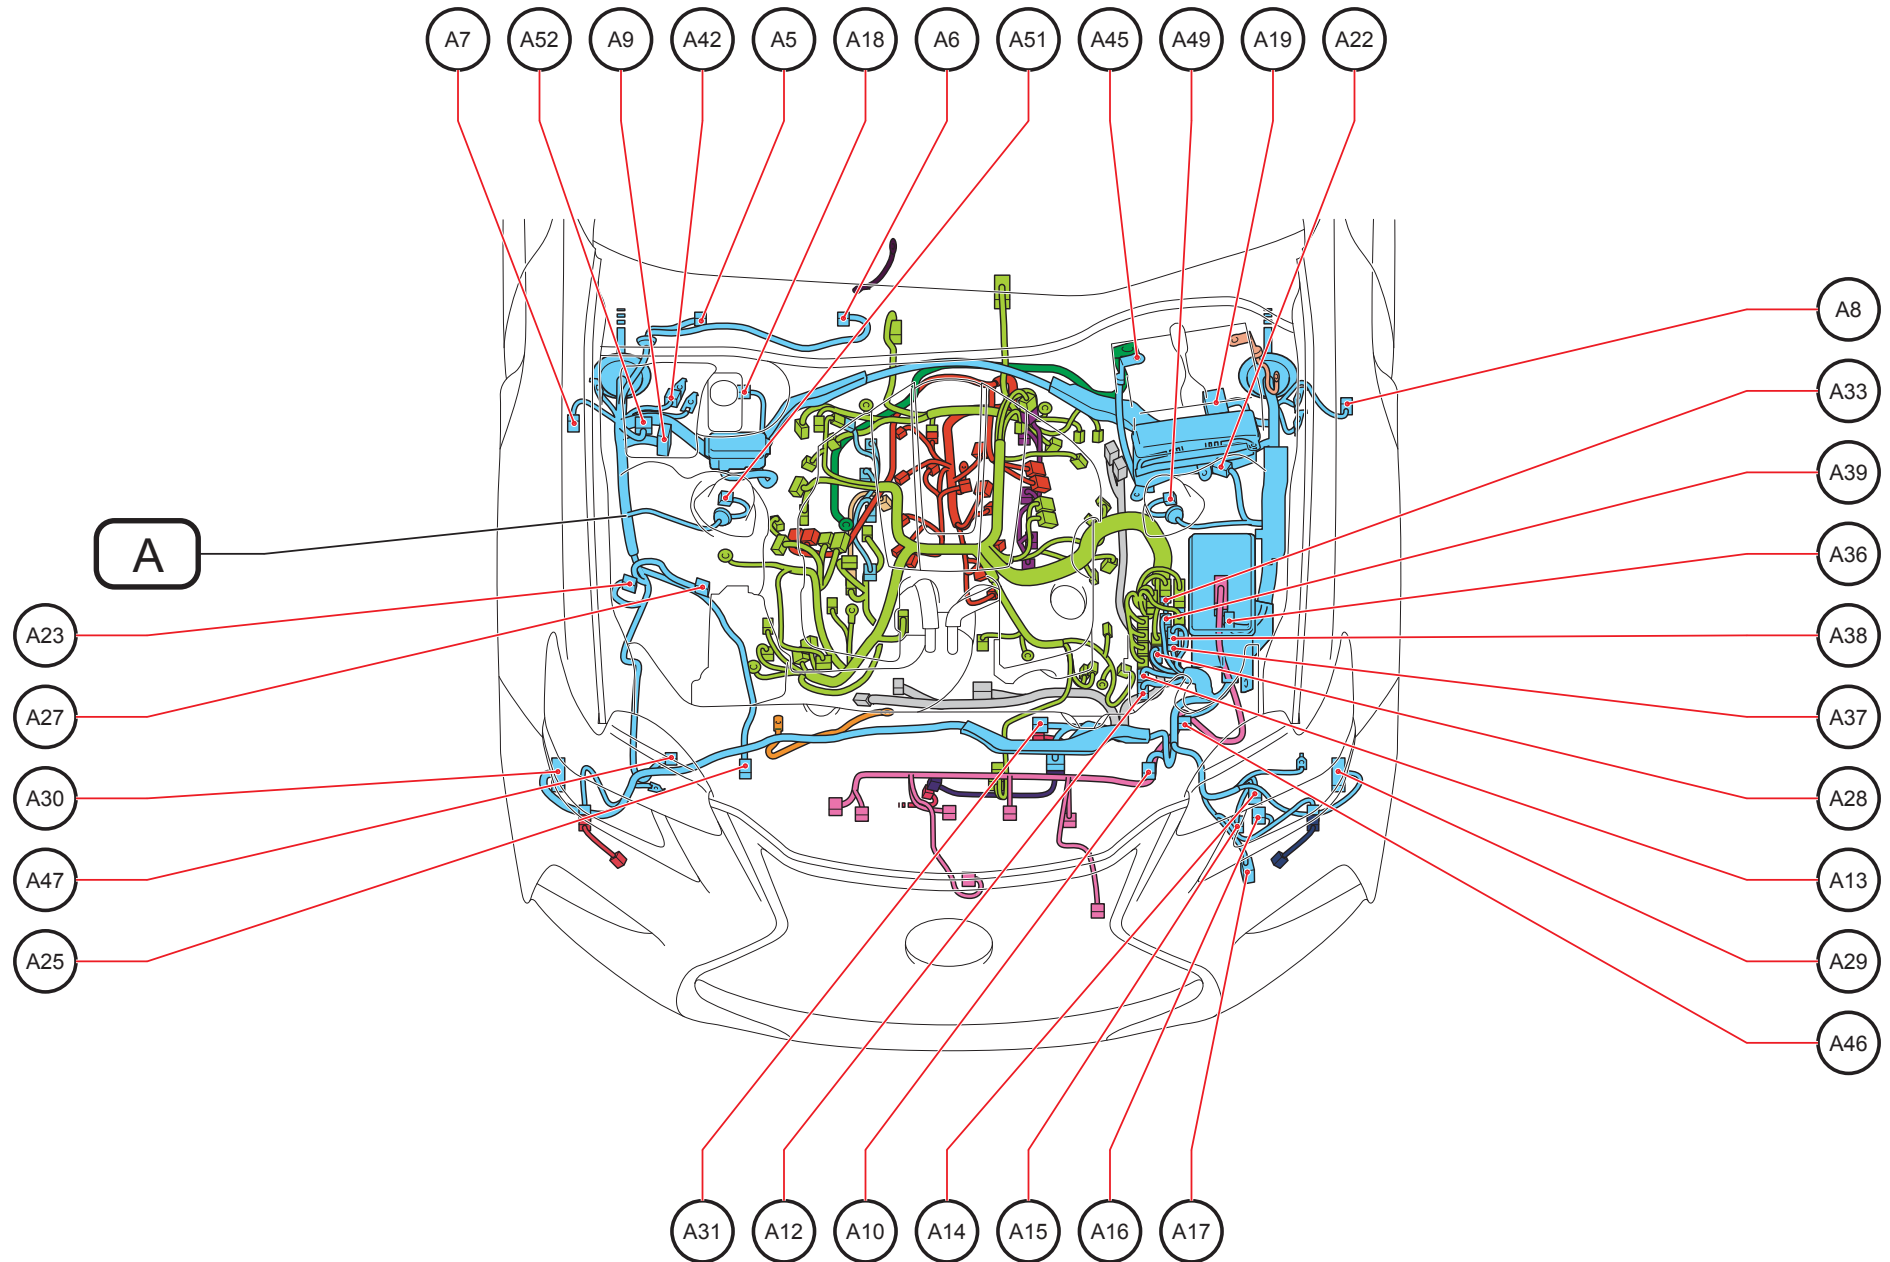


A5	Front Wiper Deicer (Windshield Glass)
A6	Windshield Wiper Motor Assembly
A7	Wireless Door Lock Buzzer
A8	Front Tire Pressure Monitor Initiator
A9	Brake Actuator Assembly
A10	Front Airbag Sensor LH
A12	ECM
A13	ECM
A14	Level Warning Switch Assembly
A15	Windshield Washer Motor and Pump Assembly
A16	Headlight Cleaner Control Relay
A17	Headlight Cleaner Motor and Pump Assembly
A18	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A19	Power Steering ECU Assembly
A22	No. 1 Wiring Harness Condenser Assembly
A23	Security Horn Assembly
A25	Front Airbag Sensor RH
A27	VSV (AICV)
A28	Transmission Control ECU Assembly
A29	Headlight Light Control ECU Sub-Assembly LH
A30	Headlight Light Control ECU Sub-Assembly RH
A31	Cooling Fan ECU LH
A33	No. 1 Junction Connector
A36	No. 4 Junction Connector
A37	No. 5 Junction Connector
A38	No. 5 Junction Connector
A39	No. 1 CAN Junction Connector
A42	No. 2 Ground Junction Connector
A45	Battery
A46	Skid Control Sensor Wire LH
A47	Skid Control Sensor Wire RH
A49	Front Shock Absorber Assembly LH
A51	Front Shock Absorber Assembly RH
A52	Brake Actuator Assembly


Position of Parts in Engine Compartment (RHD)

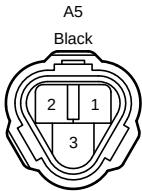


90980-11407

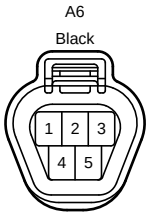


90980-11599

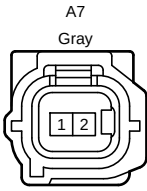


90980-12572

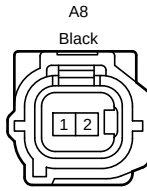


90980-12416

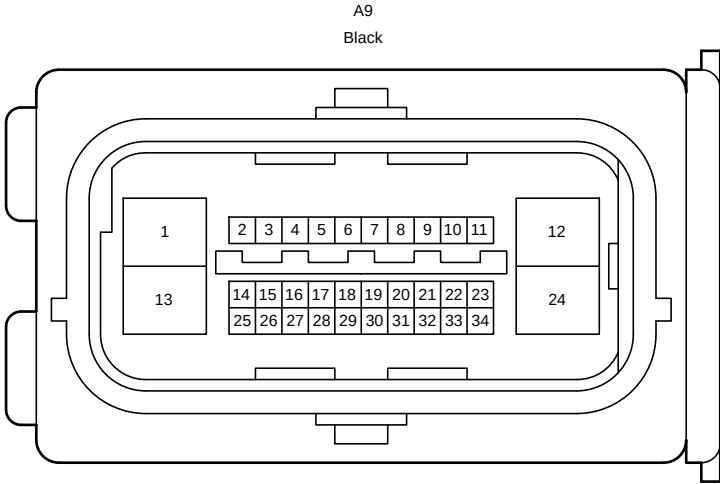


90980-12686

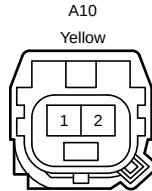


90980-12490

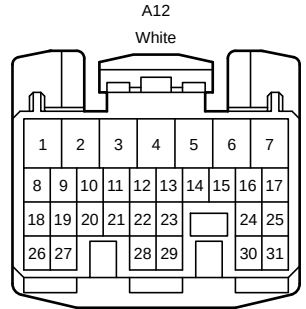


90980-12525

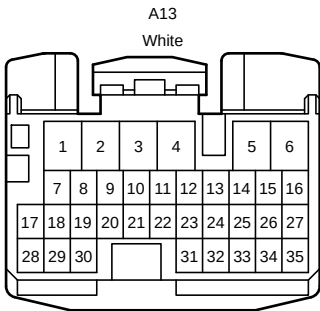


90980-12529

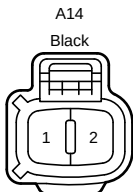


90980-11068

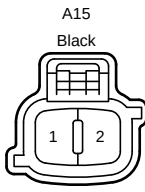

90980-11019

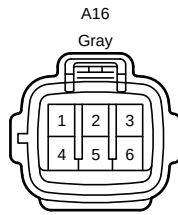


90980-11194

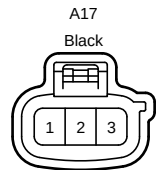


90980-10981



90980-11207

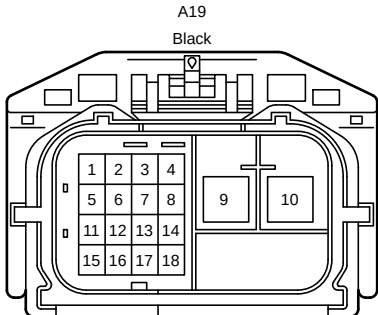


90980-12573

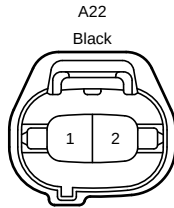

90980-11156




90980-10619

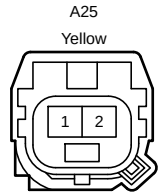

90980-12490

Position of Parts in Engine Compartment (RHD)

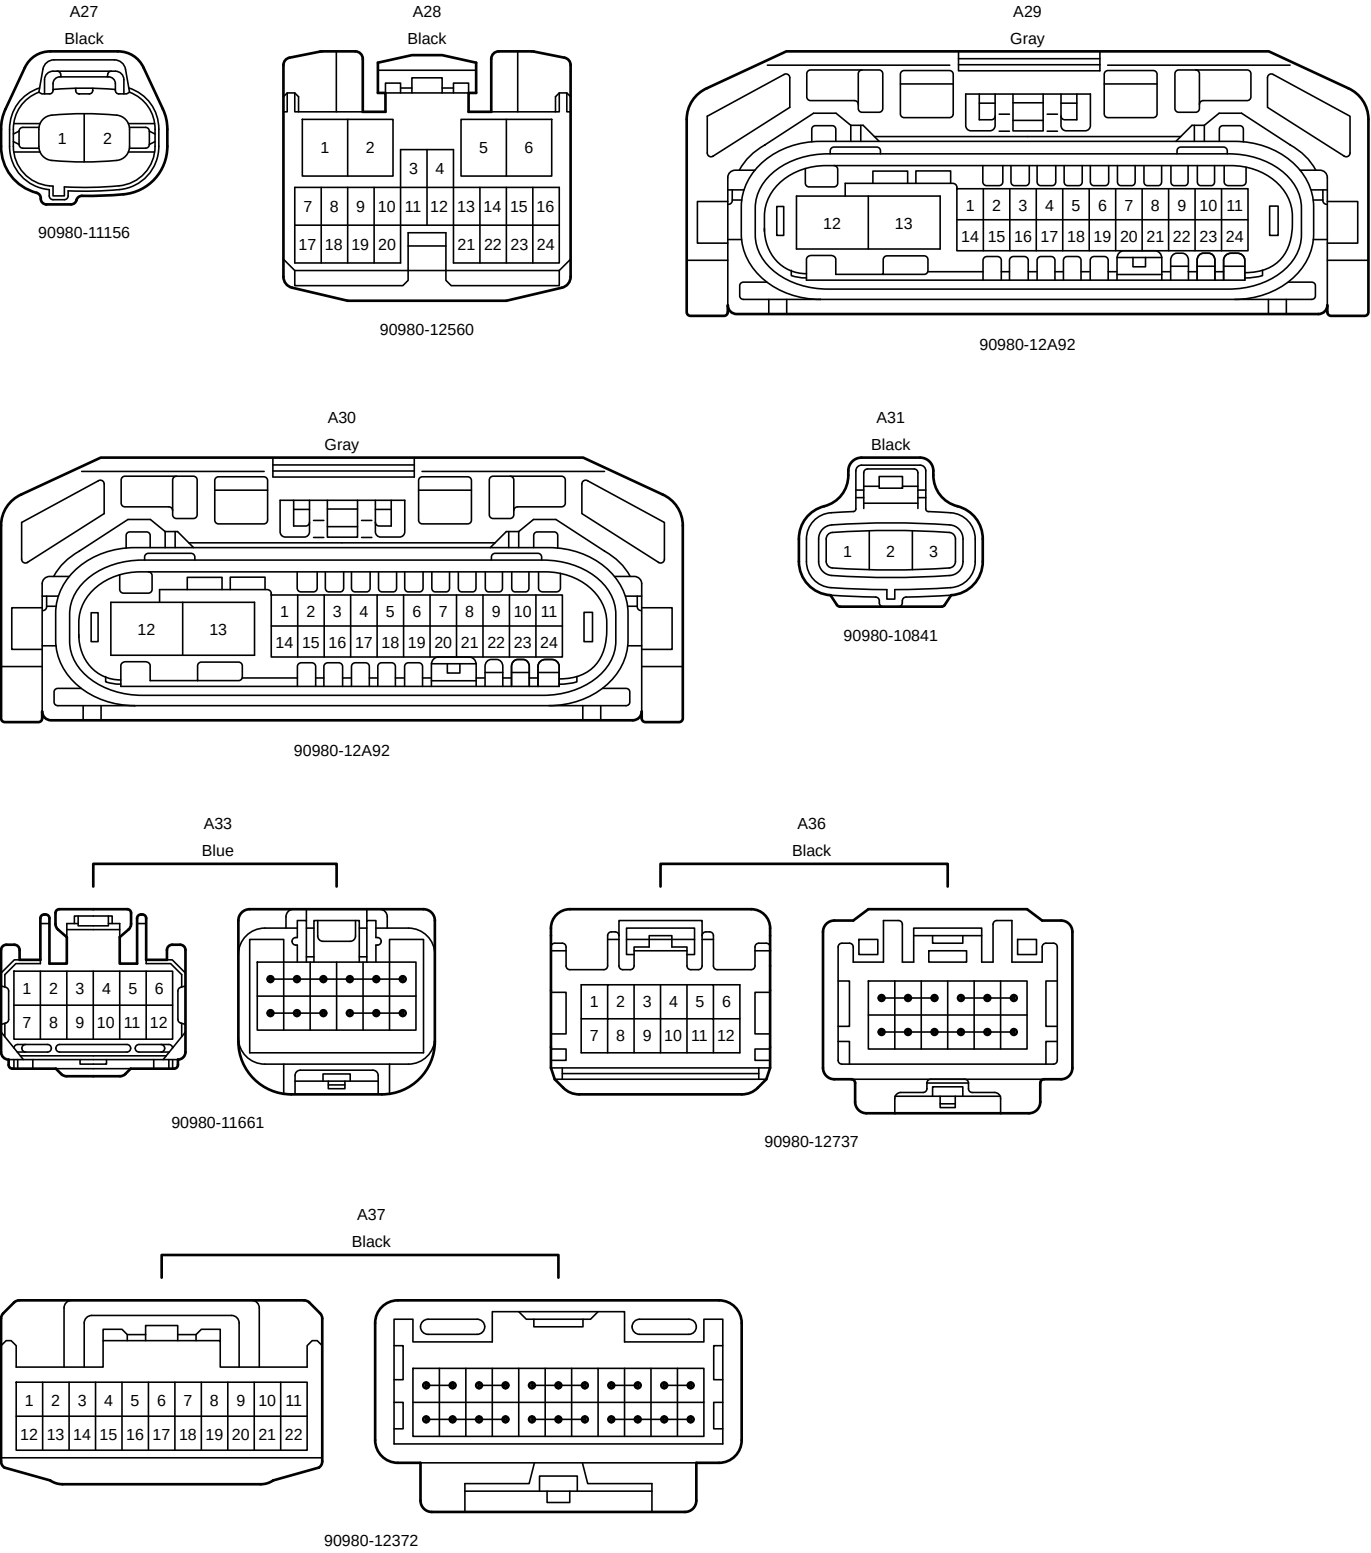

Position of Parts in Engine Compartment (RHD)

