



Position of Parts in Engine Compartment (RHD)

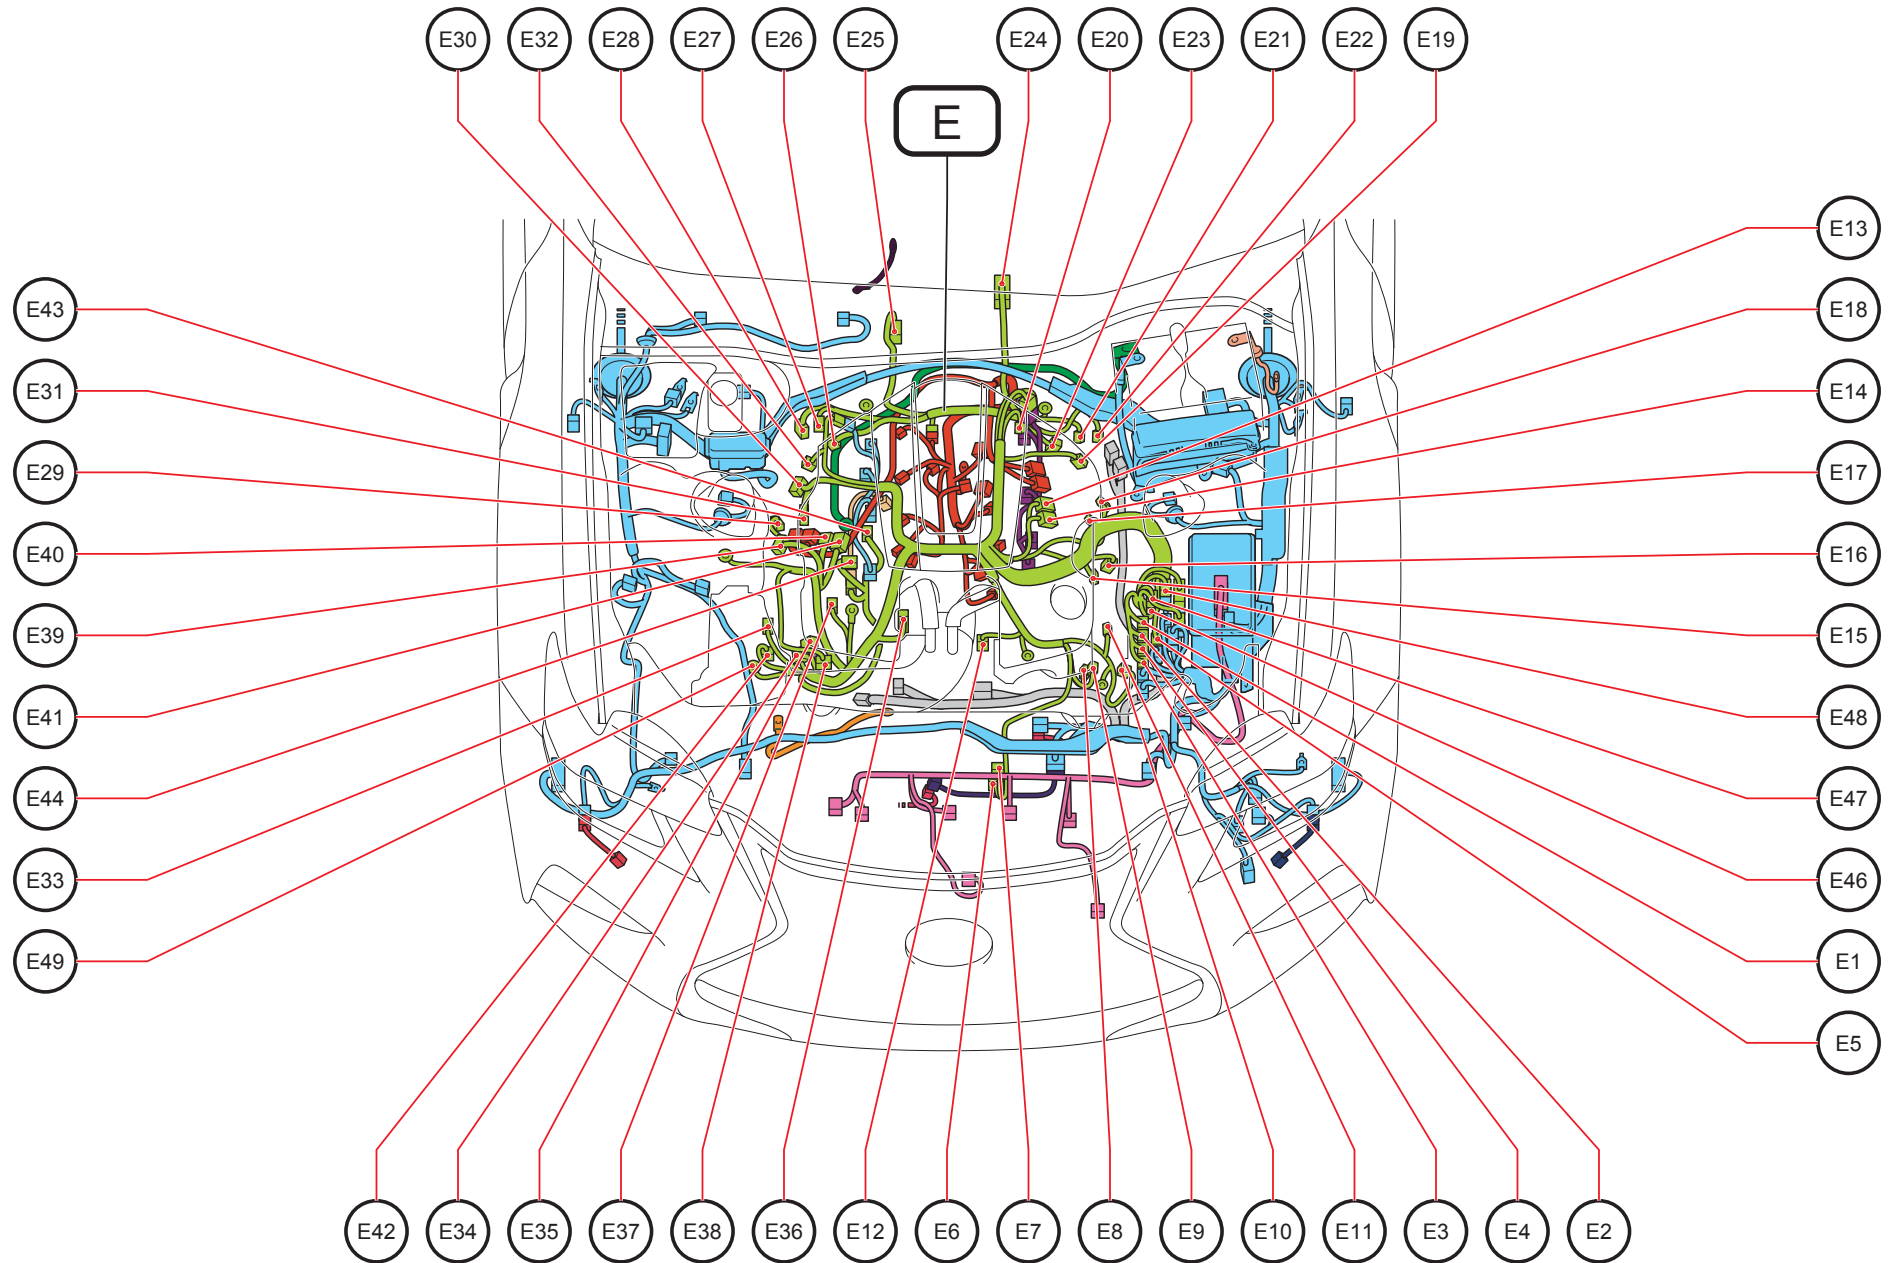


Position of Parts in Engine Compartment (RHD)

E1	ECM
E2	ECM
E3	ECM
E4	ECM
E5	Transmission Control ECU Assembly
E6	Engine Oil Pressure Switch Assembly
E7	Oil Temperature Sensor
E8	Camshaft Timing Control with EDU Motor Assembly LH
E9	Camshaft Timing Control with EDU Motor Assembly LH
E10	Compressor with Pulley Assembly
E11	Camshaft Timing Oil Control Valve Assembly LH (Bank 1 Exhaust Side)
E12	E.F.I. Engine Coolant Temperature Sensor
E13	Injector Driver No. 1
E14	Injector Driver No. 1
E15	Ignition Coil Assembly No. 1
E16	VVT Sensor (Bank 1 Exhaust Side)
E17	Ignition Coil Assembly No. 3
E18	Ignition Coil Assembly No. 5
E19	Fuel Pump with Seal Sub-Assembly LH
E20	Purge VSV
E21	VVT Sensor (Bank 1 Intake Side)
E22	Ignition Coil Assembly No. 7
E23	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E24	Electronically Controlled Transmission Solenoid (Transmission Wire)
E25	Park/Neutral Position Switch Assembly
E26	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
E27	VVT Sensor (Bank 2 Intake Side)
E28	Ignition Coil Assembly No. 8
E29	VVT Sensor (Bank 2 Exhaust Side)
E30	Ignition Coil Assembly No. 6
E31	Ignition Coil Assembly No. 4
E32	Fuel Pump with Seal Sub-Assembly RH
E33	Camshaft Timing Oil Control Valve Assembly RH (Bank 2 Exhaust Side)
E34	Camshaft Timing Control with EDU Motor Assembly RH
E35	Camshaft Timing Control with EDU Motor Assembly RH
E36	Throttle Body with Motor Assembly
E37	Camshaft Position Sensor
E38	Intake Mass Air Flow Meter Sub-Assembly
E39	Ignition Coil Assembly No. 2
E40	Injector Driver No. 2
E41	Injector Driver No. 2
E42	Generator Assembly
E43	Starter Assembly
E44	Engine Oil Level Sensor
E46	No. 7 Junction Connector
E47	No. 7 Junction Connector
E48	No. 1 Junction Connector
E49	Generator Assembly


Position of Parts in Engine Compartment (RHD)

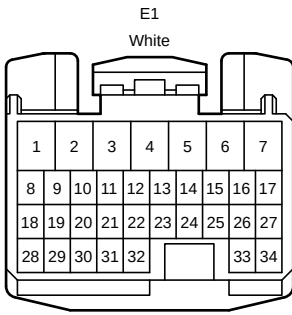


90980-12527

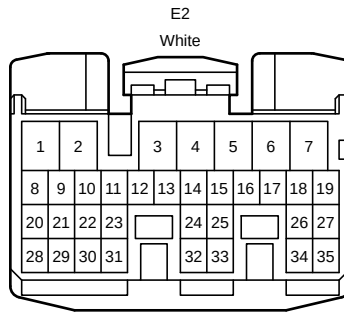


90980-12528

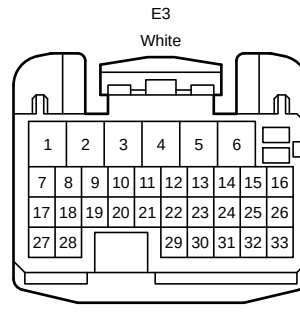


90980-12700

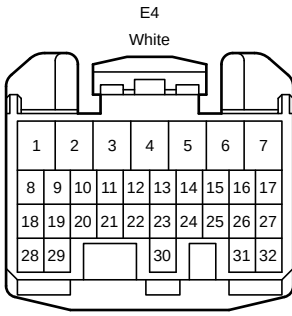


90980-12526

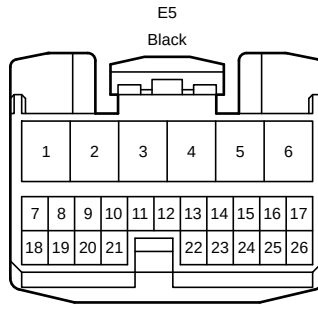

90980-12561

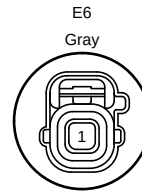


90980-11363

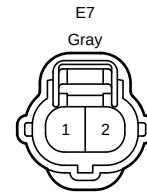


90980-11025



90980-11410

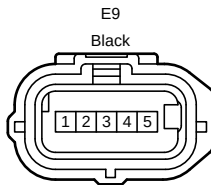


90980-12292

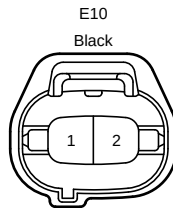


90980-11156



 
90980-11162




90980-10735

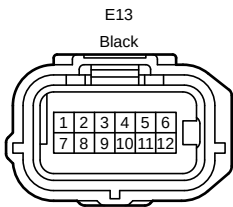


90980-12356

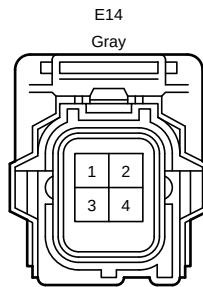


90980-12654

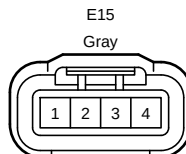


90980-11885

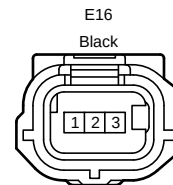


90980-12353

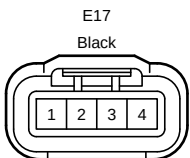


90980-11885

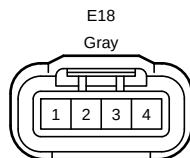


90980-11885

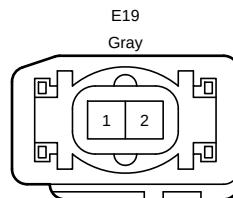

90980-12747



















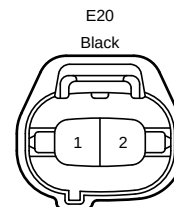


90980-11156

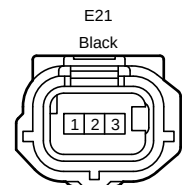

90980-12353


Position of Parts in Engine Compartment (RHD)

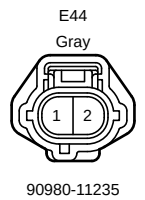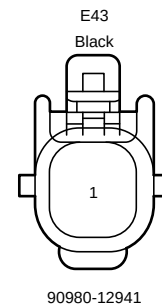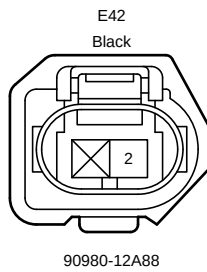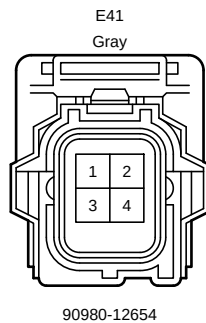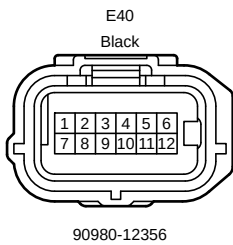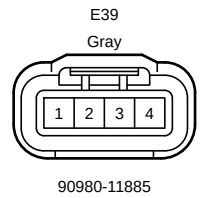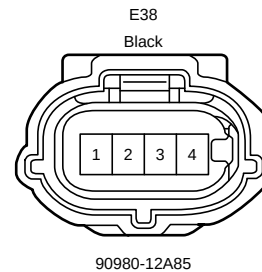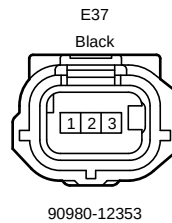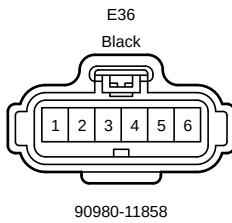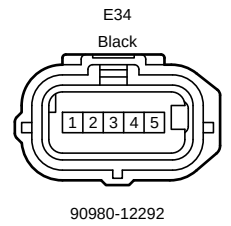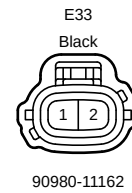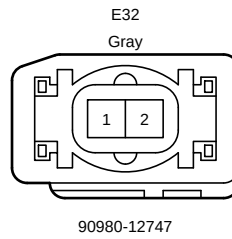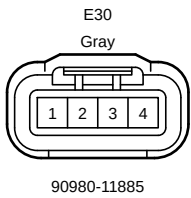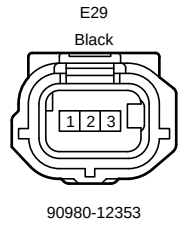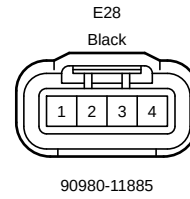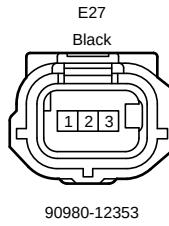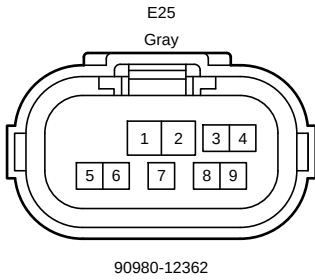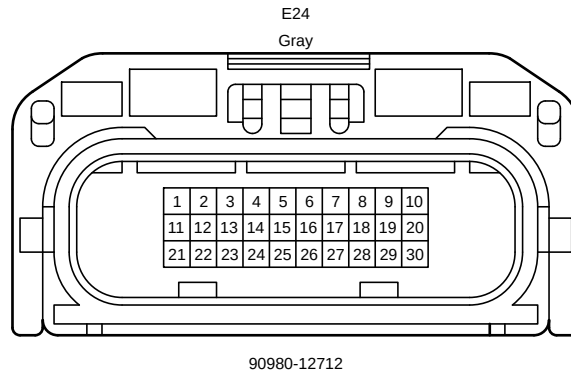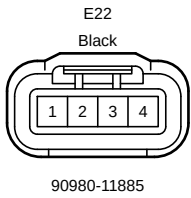

Position of Parts in Engine Compartment (RHD)

E46


White

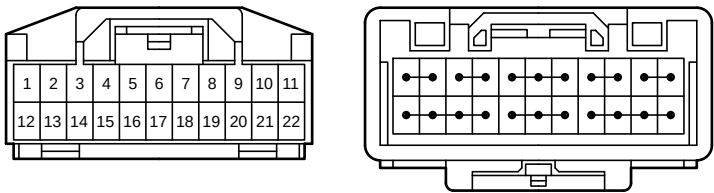

90980-11915

E47


White

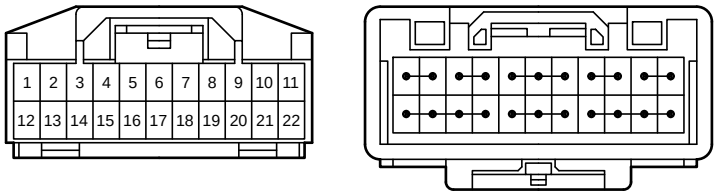

90980-11915

E48

Blue

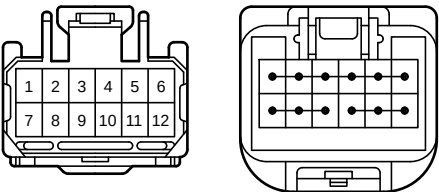

90980-11661

E49

