























Position of Parts in Body (LHD)

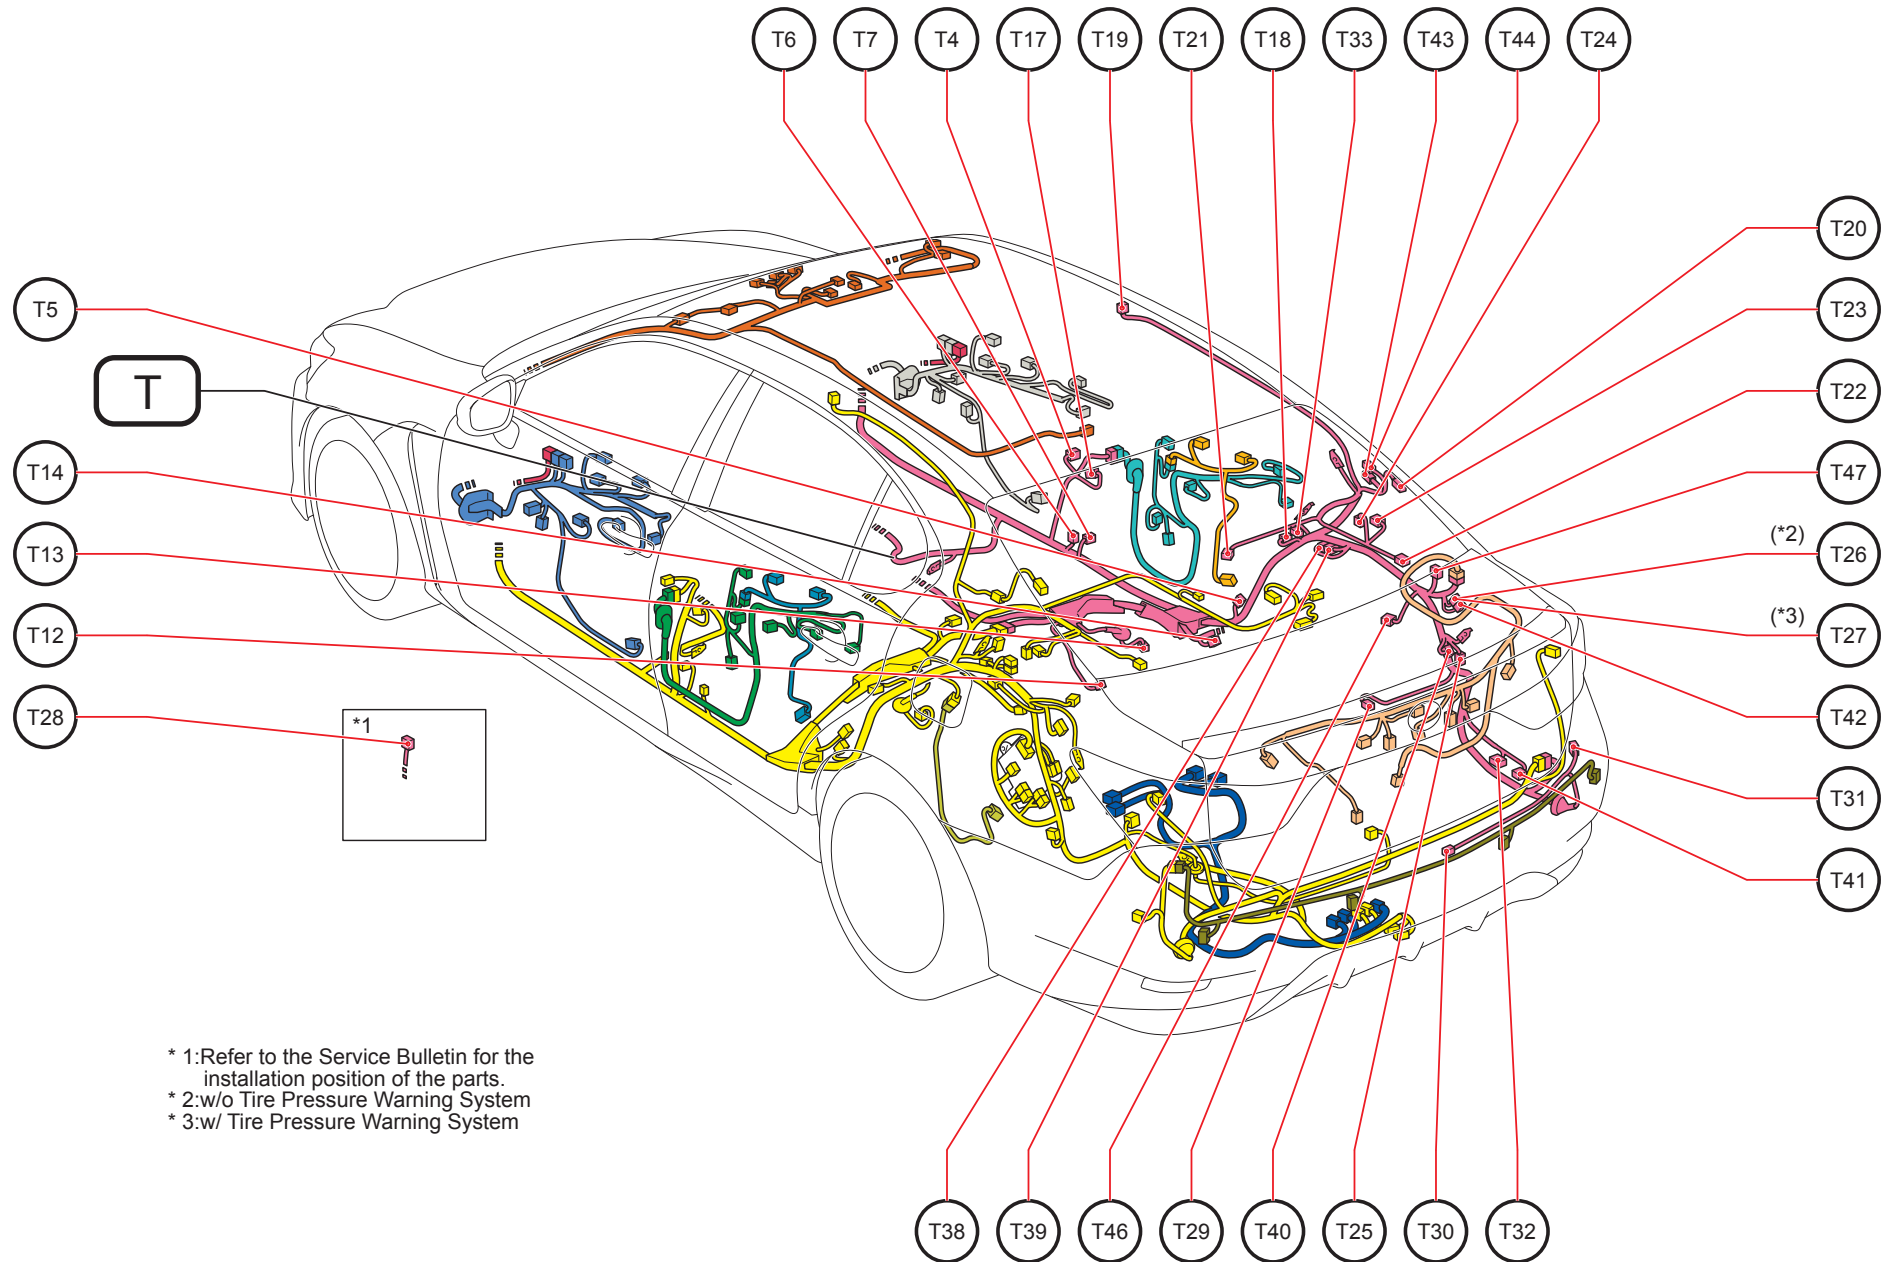

- * 1:Refer to the Service Bulletin for the installation position of the parts.
- * 2:w/o Tire Pressure Warning System
- * 3:w/ Tire Pressure Warning System

T4	Front Door Courtesy Light Switch Assembly RH
T5	Rear Airbag Sensor RH
T6	Front Seat Outer Belt Assembly RH
T7	Front Seat Outer Belt Assembly RH
T12	Rear Seat Inner with Center Assembly RH
T13	No. 2 Fuel Sender Gage Assembly
T14	Rear Side Airbag Assembly RH
T17	Side Airbag Sensor Assembly RH
T18	Rear Door Courtesy Light Switch Assembly RH
T19	Curtain Shield Airbag Assembly RH
T20	Rear Window Defogger (Back Window Glass)
T21	Rear No. 3 Speaker Assembly
T22	Rear Header Speaker Assembly RH
T23	Rear Seat 3 Point Type Belt Assembly Outer RH
T24	Rear Seat 3 Point Type Belt Assembly Outer RH
T25	Rear Speed Sensor RH
T26	Smart Door Control Receiver Assembly
T27	Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly)
T28	Theft Warning Siren Assembly
T29	No. 3 Indoor Electrical Key Antenna Assembly
T30	Rear Electrical Key Antenna
T31	Blind Spot Monitor Sensor RH
T32	Stereo Component Amplifier Assembly
T33	No. 2 Speaker with Box Assembly
T38	No. 12 Junction Connector
T39	No. 12 Junction Connector
T40	No. 13 Junction Connector
T41	Stereo Component Amplifier Assembly
T42	Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly)
T43	Amplifier Antenna Assembly No. 1
T44	Amplifier Antenna Assembly No. 1
T46	Rear Shock Absorber Assembly RH
T47	Rear Acceleration Sensor RH

      Position of Parts in Body (LHD)

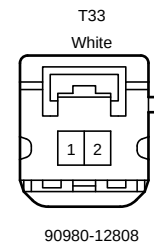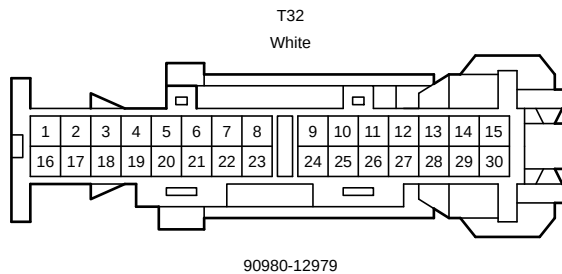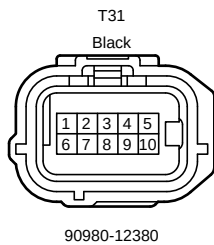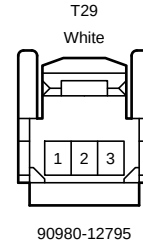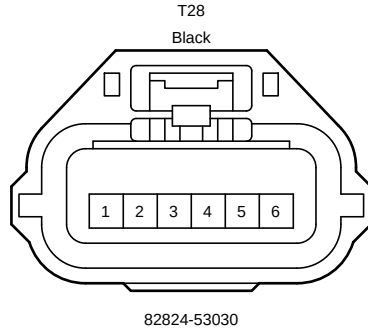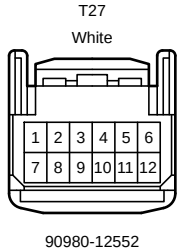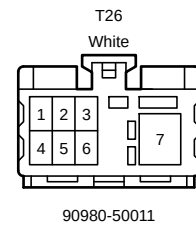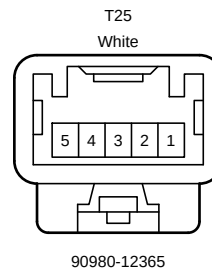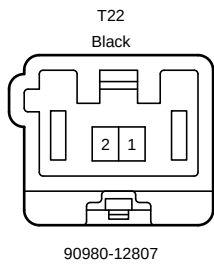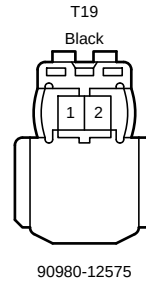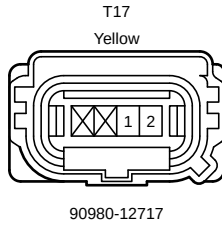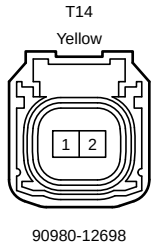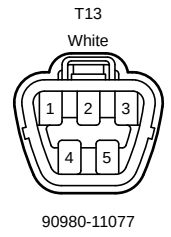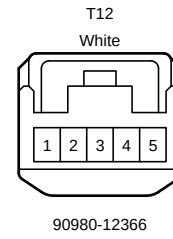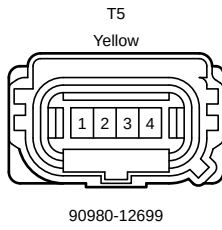

Position of Parts in Body (LHD)

