


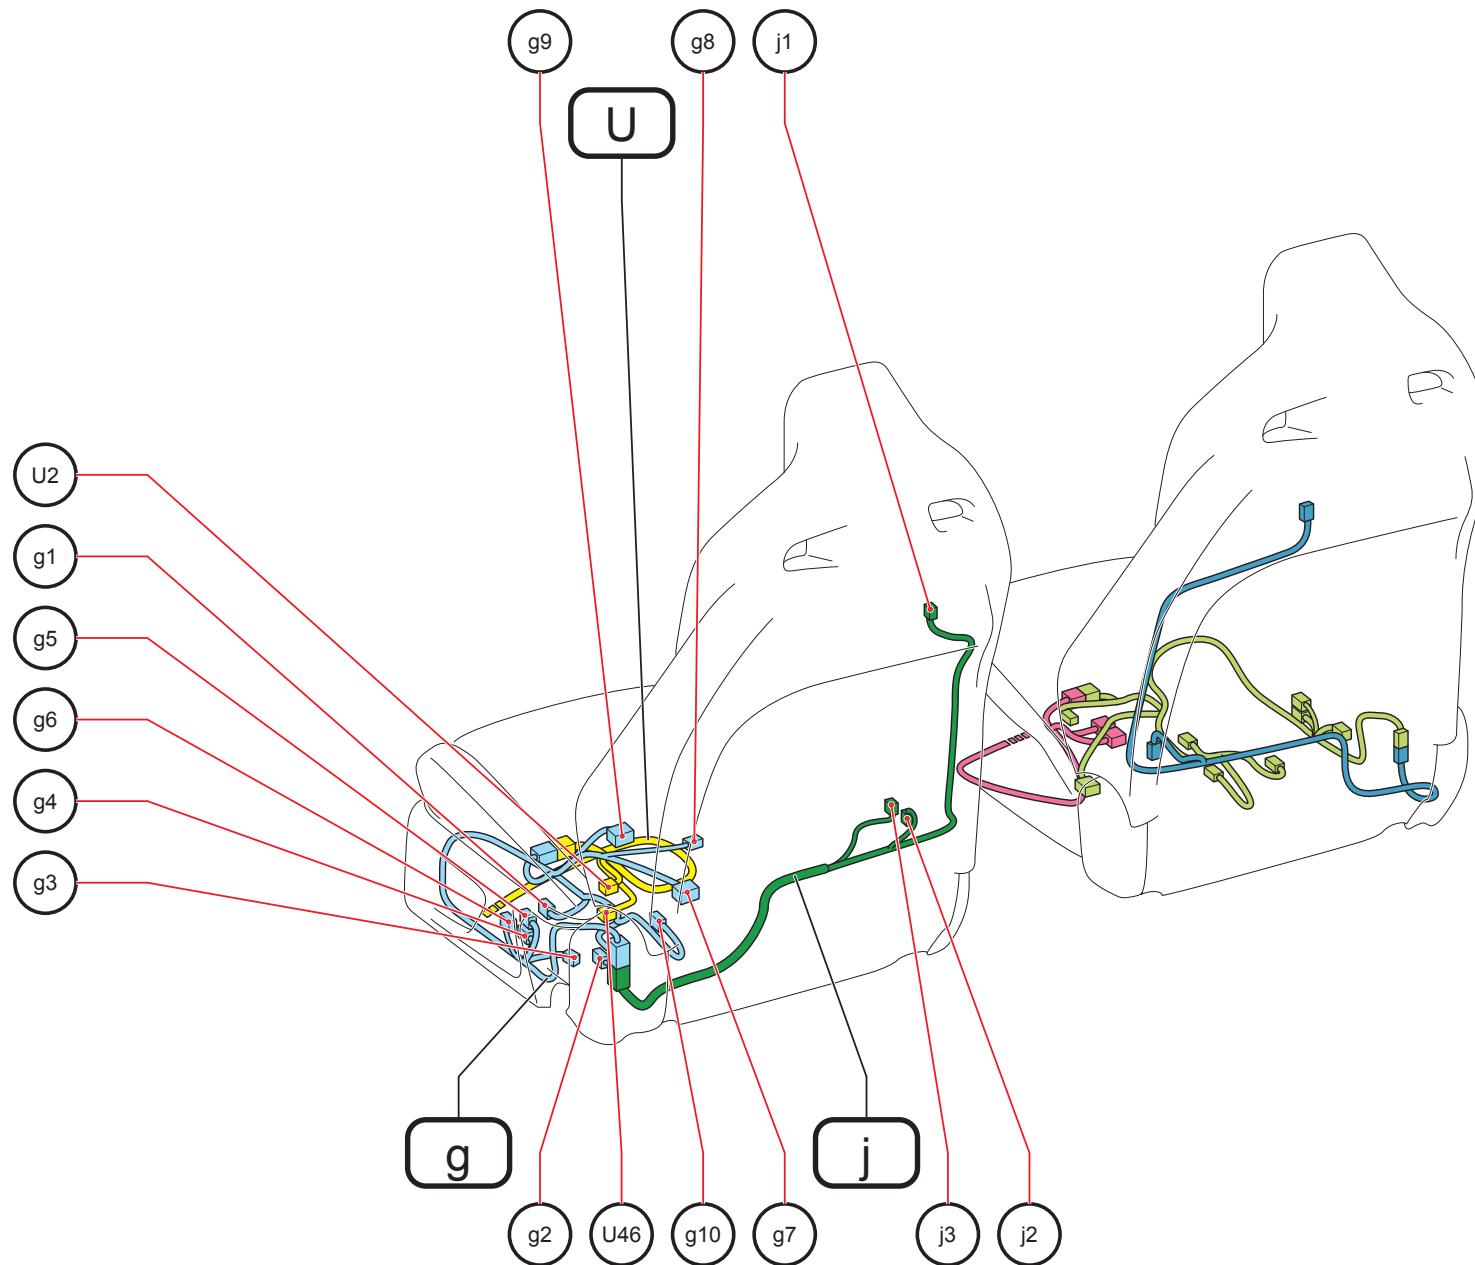

Position of Parts in Seat (LHD Front Seat)

U2	Front Seat Inner Belt Assembly LH
U46	Front Seat Airbag Assembly LH
g1	Power Seat Slide Motor LH (Front Seat Adjuster Assembly LH)
g2	Power Seat Tilt Motor LH (Front Seat Adjuster Assembly LH)
g3	Power Seat Lift Motor LH (Front Seat Adjuster Assembly LH)
g4	Position Control ECU Assembly LH
g5	Position Control ECU Assembly LH
g6	Front Lumbar Power Seat Switch LH
g7	Front Seat Heater Control Sub-Assembly LH
g8	Front Seat Inner Belt Assembly LH
g9	No. 19 Junction Connector
g10	Seat Cushion Climate Control Blower Assembly LH
j1	Seat Back Climate Control Blower LH
j2	Power Seat Reclining Motor LH (Front Seat Back Spring Sub-Assembly LH)
j3	Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)

Position of Parts in Seat (LHD Front Seat)

