


Position of Parts in Seat (RHD Front Seat)

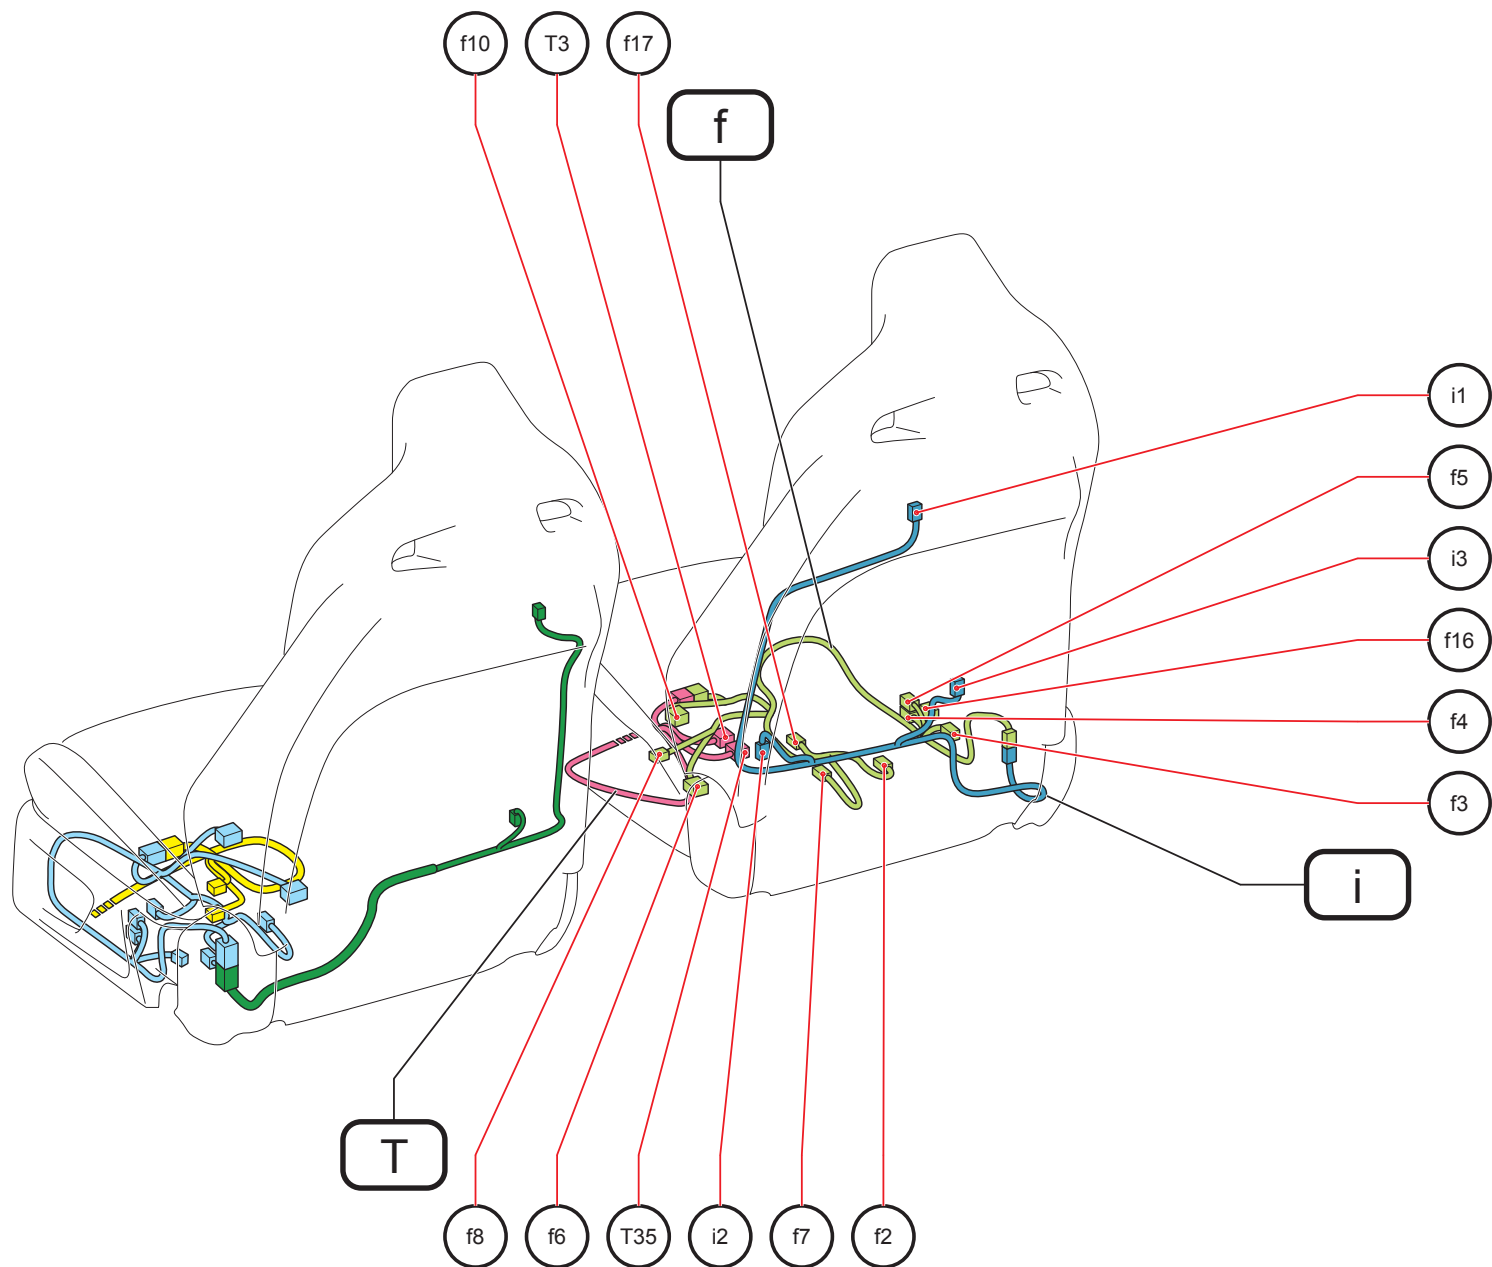


Position of Parts in Seat (RHD Front Seat)

T3	Front Seat Inner Belt Assembly RH
T35	Front Seat Airbag Assembly RH
f2	Power Seat Tilt Motor RH (Front Seat Adjuster Assembly RH)
f3	Power Seat Lift Motor RH (Front Seat Adjuster Assembly RH)
f4	Position Control ECU Assembly RH
f5	Position Control ECU Assembly RH
f6	Front Seat Heater Control Sub-Assembly RH
f7	Seat Cushion Climate Control Blower Assembly RH
f8	Front Seat Inner Belt Assembly RH
f10	No. 18 Junction Connector
f16	Front Lumbar Power Seat Switch RH
f17	Power Seat Slide Motor RH (Front Seat Adjuster Assembly RH)
i1	Seat Back Climate Control Blower RH
i2	Power Seat Reclining Motor RH (Front Seat Back Spring Sub-Assembly RH)
i3	Power Seat Lumbar Support Motor RH (Lumbar Support Adjuster Assembly RH)


Position of Parts in Seat (RHD Front Seat)




90980-10942

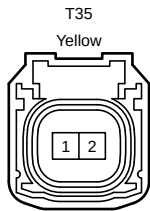


90980-12698

 


90980-12341

 


90980-10825

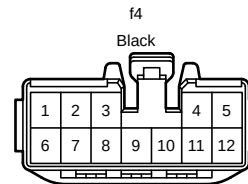


90980-11782

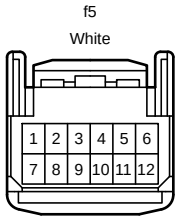


90980-12552

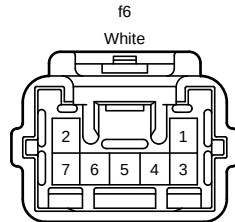


90980-11528

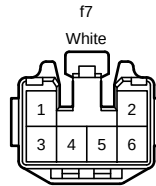


90980-12180

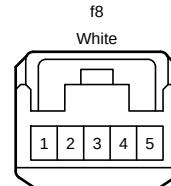


90980-12366

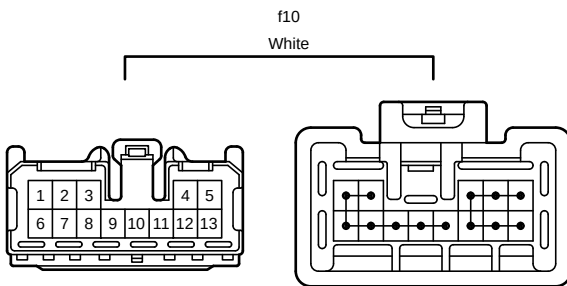


90980-12346

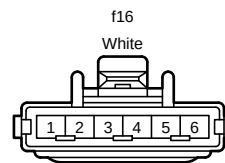


90980-10933

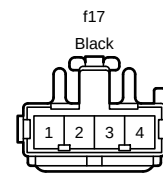


90980-11841

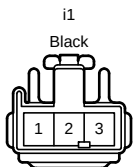

90980-10908

 

90980-12341

 

90980-12341