


Position of Parts in Instrument Panel (LHD)

* 1:Refer to the Service Bulletin for the installation position of the parts.


* 2:8 Inch Display Type

* 3:12.3 Inch Display Type

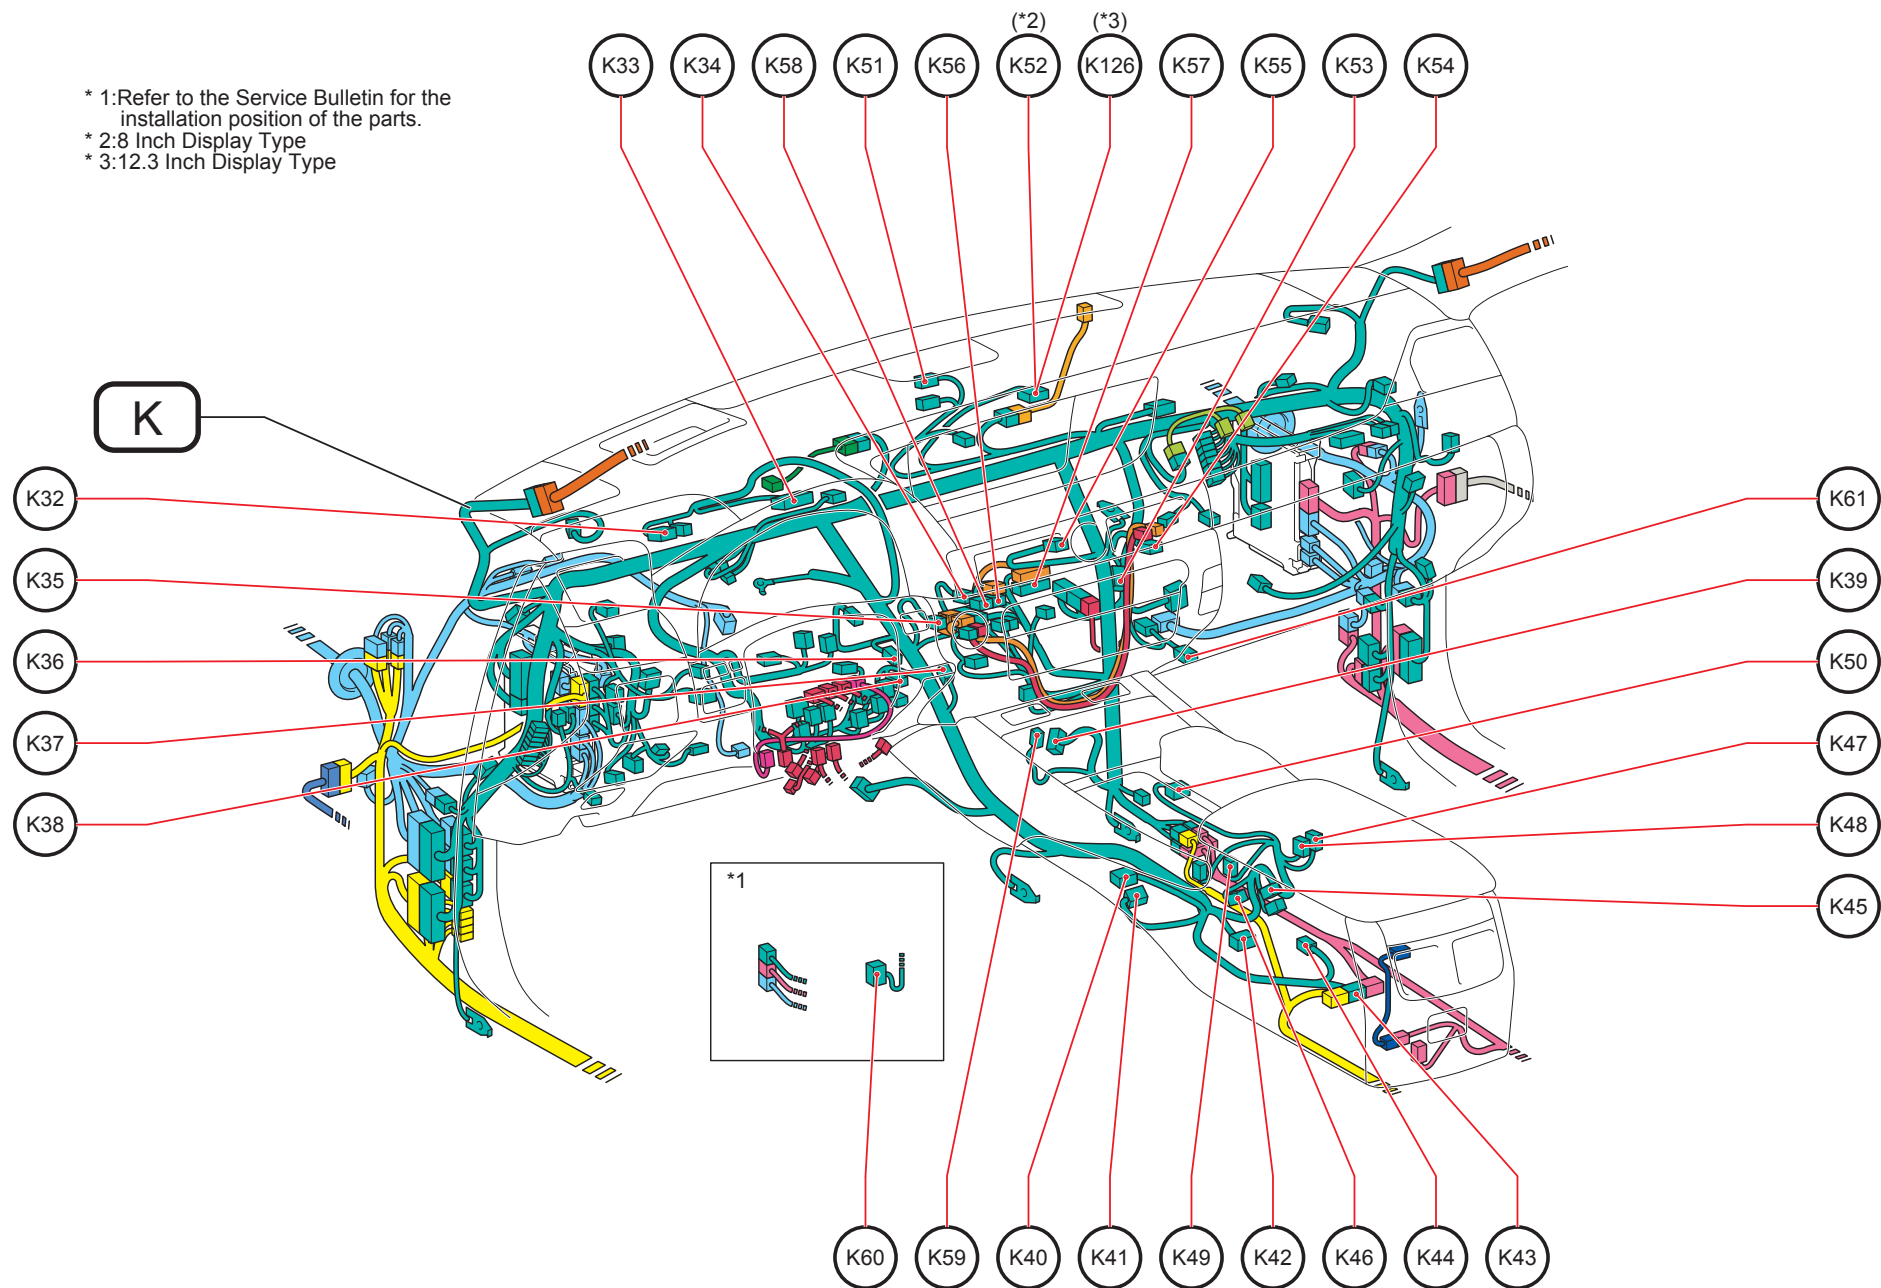


K32	Combination Meter Assembly
K33	Combination Meter Assembly
K34	No. 2 Instrument Panel Register Assembly
K35	Engine Switch
K36	Room Temperature Sensor (Cooler Thermistor)
K37	No. 1 Clearance Warning Buzzer
K38	Parking Light Switch Assembly
K39	Rear No. 2 Oxygen Sensor (Bank 2 Sensor 2)
K40	Shift Lock Control ECU (Transmission Floor Shift Assembly)
K41	Transmission Control Switch (Transmission Floor Shift Assembly)
K42	Yaw Rate Sensor No. 1
K43	Airbag ECU Assembly
K44	No. 1 Indoor Electrical Key Antenna Assembly
K45	No. 1 Stereo Jack Adapter Assembly
K46	Power Outlet Socket Assembly
K47	Rear Sunshade Switch Assembly
K48	Back Sonar or Clearance Sonar Switch Assembly
K49	A/T Shift Position Indicator (Shifting Hole Frame Sub-Assembly)
K50	Remote Operation Switch
K51	Front No. 3 Speaker Assembly
K52	Multi-Display
K53	Option Connector (Glass Breakage Sensor ECU)
K54	No. 3 Instrument Panel Register Assembly
K55	Clock Assembly
K56	Radio Receiver Assembly
K57	Radio Receiver Assembly
K58	Radio Receiver Assembly
K59	Refreshing Seat Switch
K60	ID Code Box
K61	Lower No. 2 Instrument Panel Airbag Assembly
K126	Accessory Meter Assembly


Position of Parts in Instrument Panel (LHD)

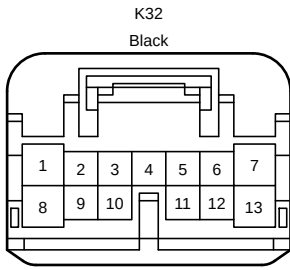


90980-12767

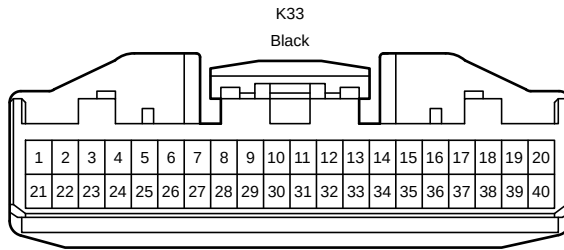


90980-12557

 


90980-10860

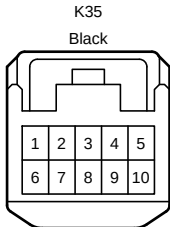


90980-12368

 

90980-11918

 


90980-10825

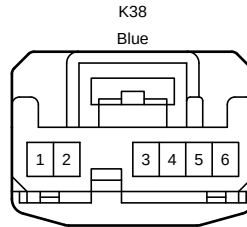


82824-48210




90980-11028

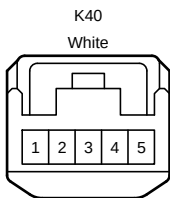


90980-12366

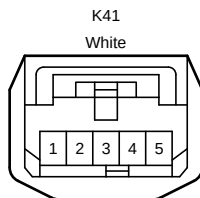


90980-12954

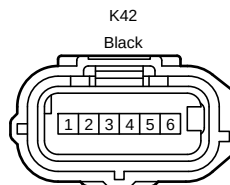


90980-12303

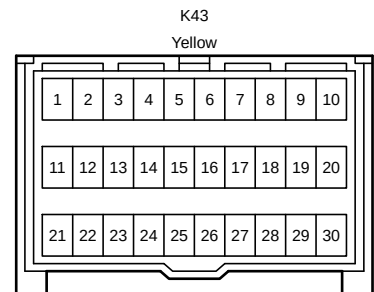


90980-12391

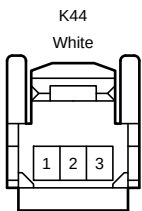


90980-12795

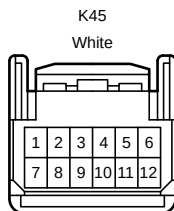


90980-12552

 


90980-12498

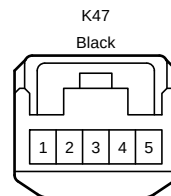


90980-12366

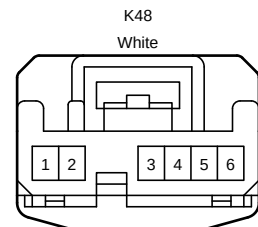


82824-48320

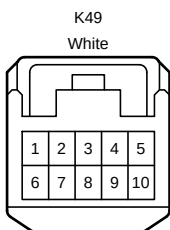


90980-12368

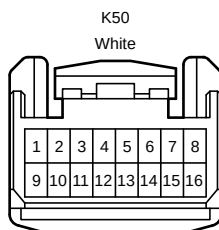

90980-12553

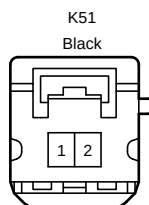

90980-12808

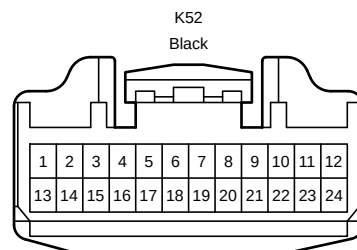

90980-12554

Position of Parts in Instrument Panel (LHD)

