














Position of Parts in Instrument Panel (LHD)

* 1:Refer to the Service Bulletin for the installation position of the parts.

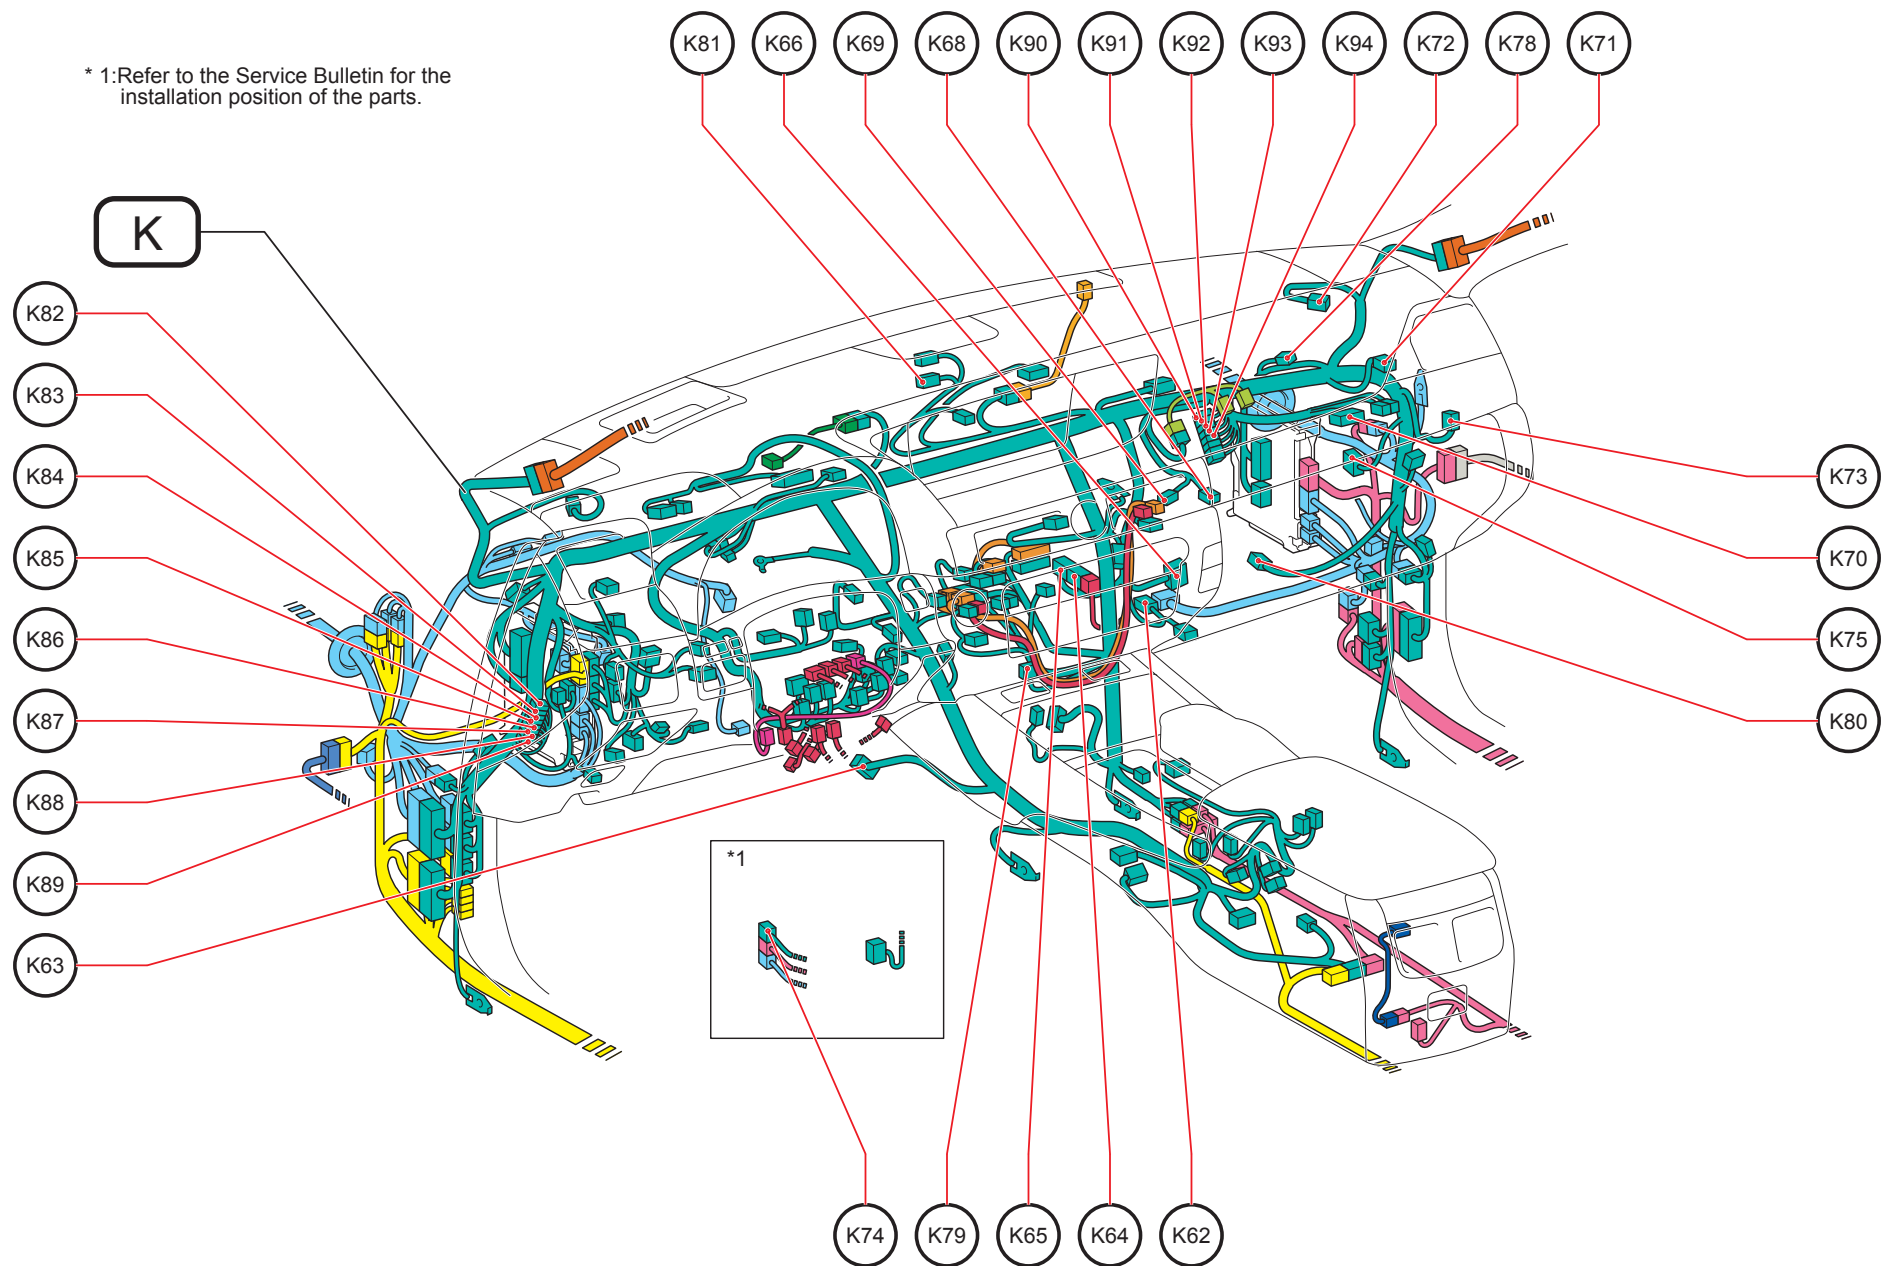

K62	Front Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
K63	Rear Oxygen Sensor (Bank 1 Sensor 2)
K64	A/C Amplifier Assembly
K65	A/C Amplifier Assembly
K66	Network Gateway ECU
K68	Luggage Door Opening Cancel Switch Assembly
K69	Console Box Illumination Light Assembly
K70	DCM (Telematics Transceiver)
K71	No. 1 Instrument Panel Register Assembly
K72	Front No. 2 Speaker Assembly RH
K73	Airbag Cut Off Switch Cylinder Sub-Assembly
K74	Certification ECU
K75	Tire Pressure Monitor Initiator Driver
K78	Diode (A/T Shift)
K79	Yaw Rate Sensor No. 2
K80	Stereo Component Equalizer Assembly
K81	No. 1 Speaker with Box Assembly
K82	No. 2 CAN Junction Connector
K83	No. 2 CAN Junction Connector
K84	No. 2 CAN Junction Connector
K85	No. 2 CAN Junction Connector
K86	No. 2 CAN Junction Connector
K87	No. 2 CAN Junction Connector
K88	No. 2 CAN Junction Connector
K89	No. 2 CAN Junction Connector
K90	No. 3 CAN Junction Connector
K91	No. 3 CAN Junction Connector
K92	No. 3 CAN Junction Connector
K93	No. 3 CAN Junction Connector
K94	No. 3 CAN Junction Connector

    Position of Parts in Instrument Panel (LHD)

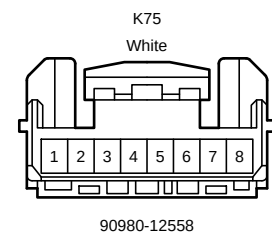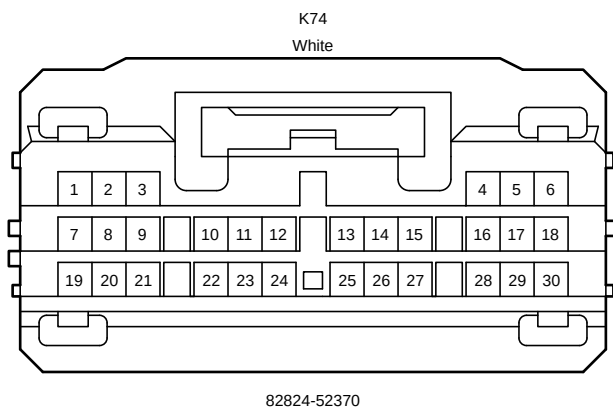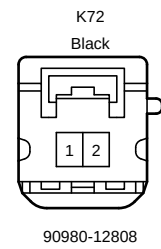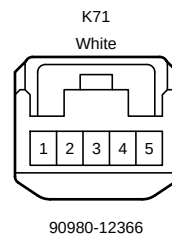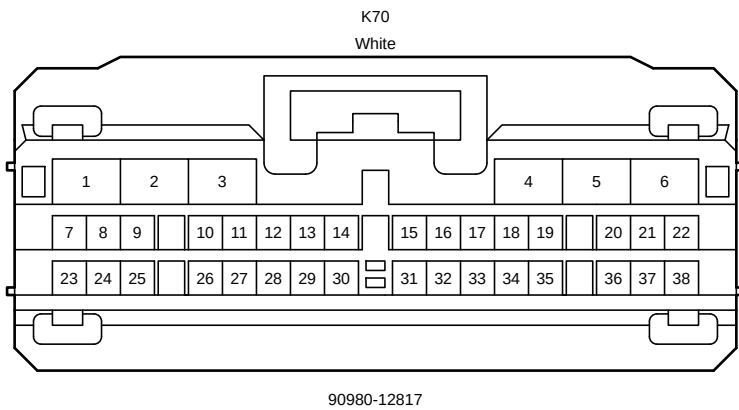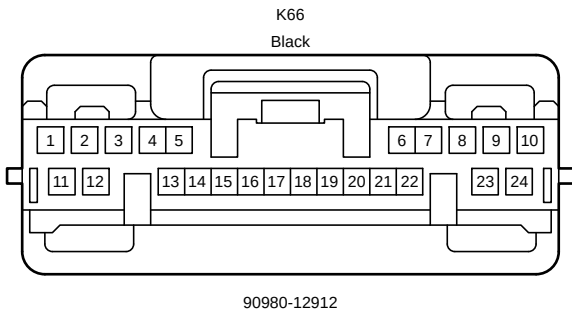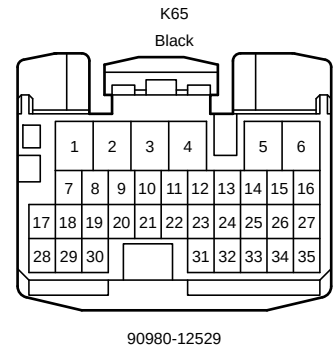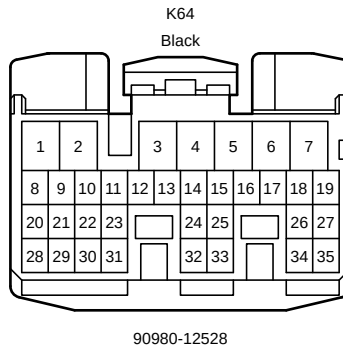

Position of Parts in Instrument Panel (LHD)

