



Position of Parts in Instrument Panel (LHD)

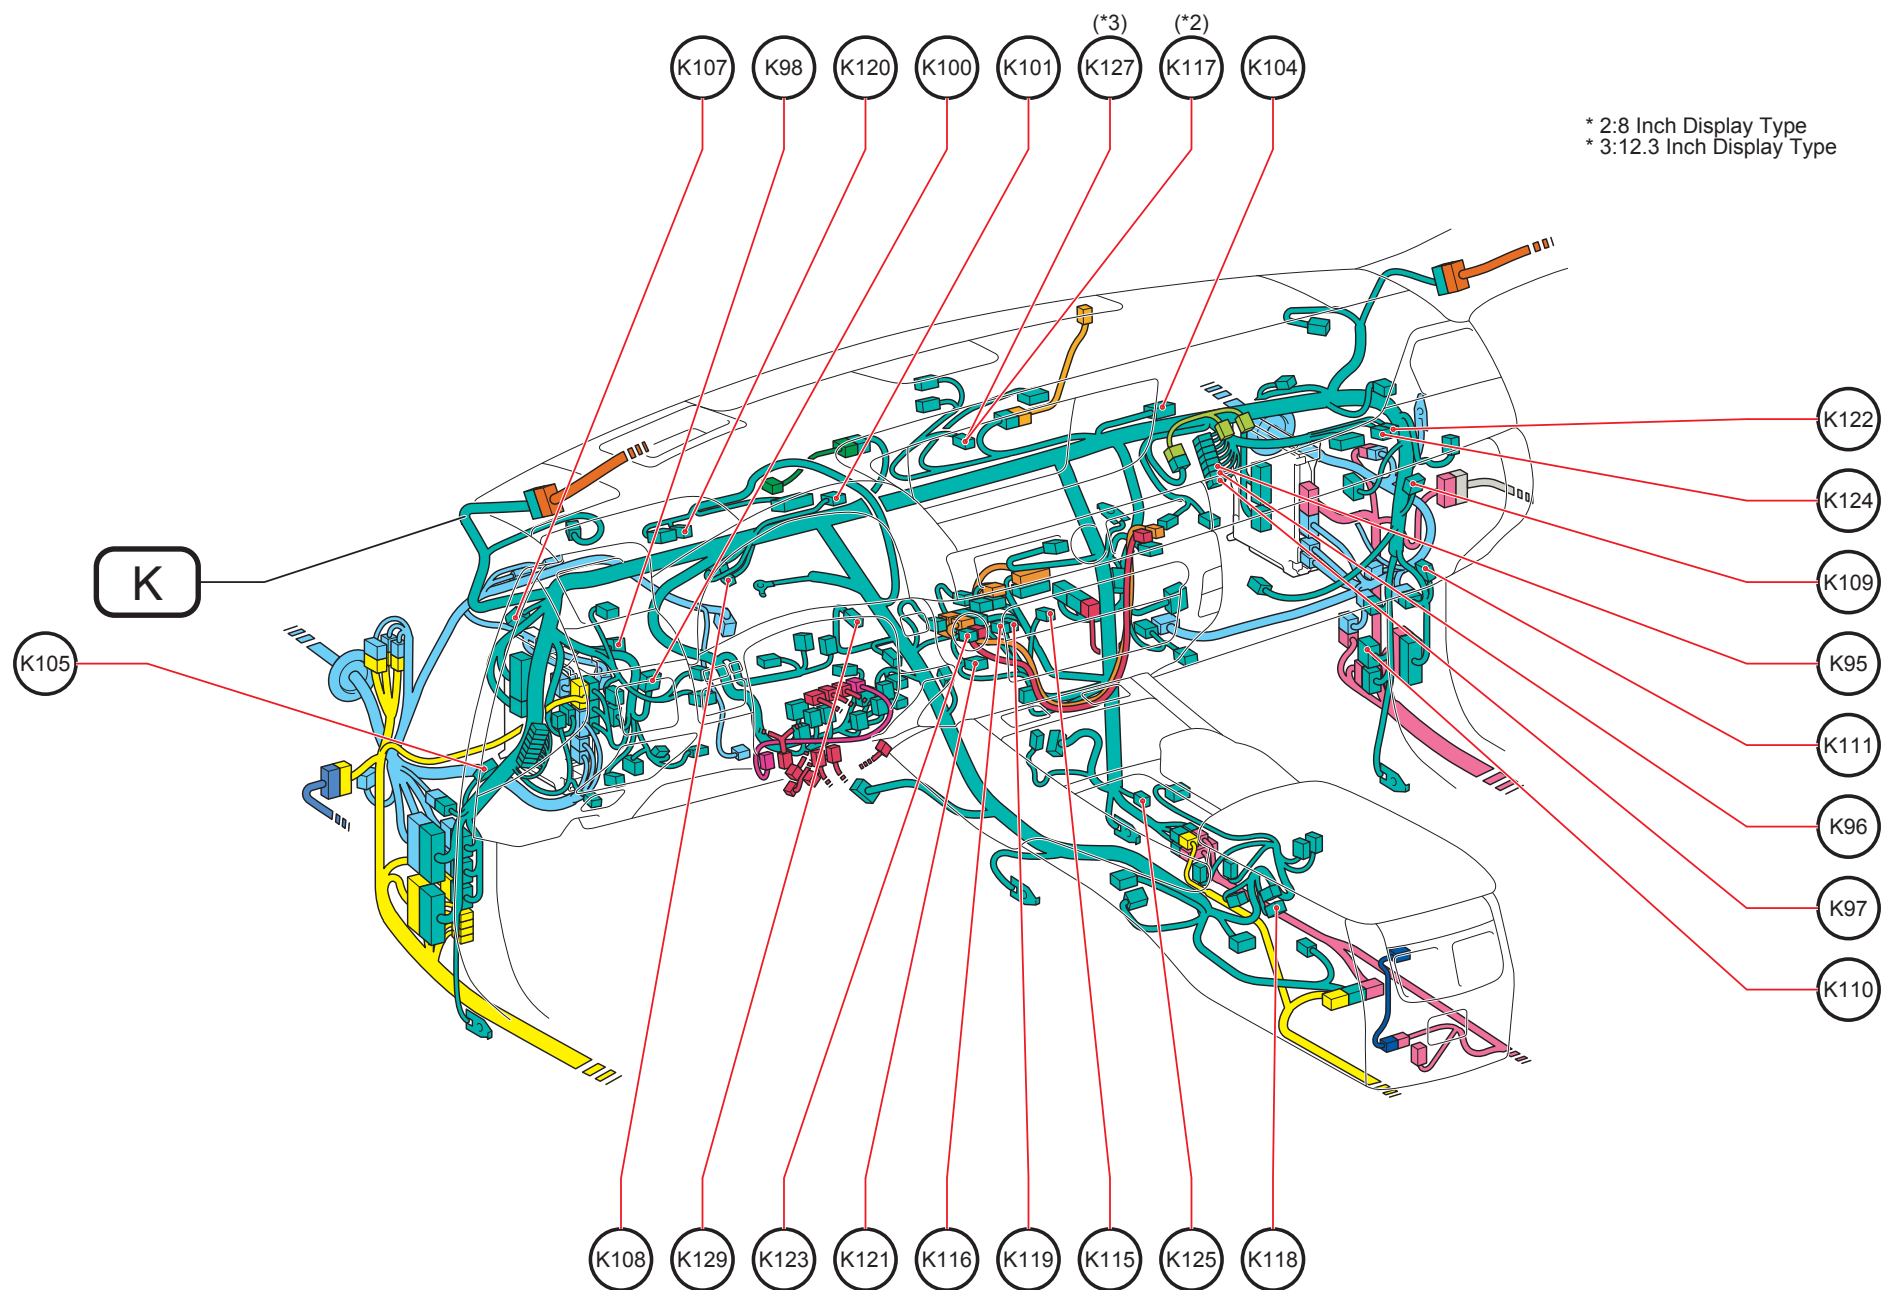

Position of Parts in Instrument Panel (LHD)


K95	No. 3 CAN Junction Connector
K96	No. 3 CAN Junction Connector
K97	No. 3 CAN Junction Connector
K98	No. 8 Junction Connector
K100	No. 9 Junction Connector
K101	No. 10 Junction Connector
K104	No. 11 Junction Connector
K105	No. 4 CAN Junction Connector
K107	No. 5 CAN Junction Connector
K108	No. 6 CAN Junction Connector
K109	No. 7 CAN Junction Connector
K110	No. 8 CAN Junction Connector
K111	No. 1 CAN Junction Terminal
K115	Radio Receiver Assembly
K116	Radio Receiver Assembly
K117	Multi-Display
K118	No. 1 Stereo Jack Adapter Assembly
K119	Radio Receiver Assembly
K120	Combination Meter Assembly
K121	Antenna Divider
K122	DCM (Telematics Transceiver)
K123	Radio Receiver Assembly
K124	DCM (Telematics Transceiver)
K125	No. 2 Antenna Cord Sub-Assembly
K127	Accessory Meter Assembly
K129	Satellite Switch Set

Position of Parts in Instrument Panel (LHD)

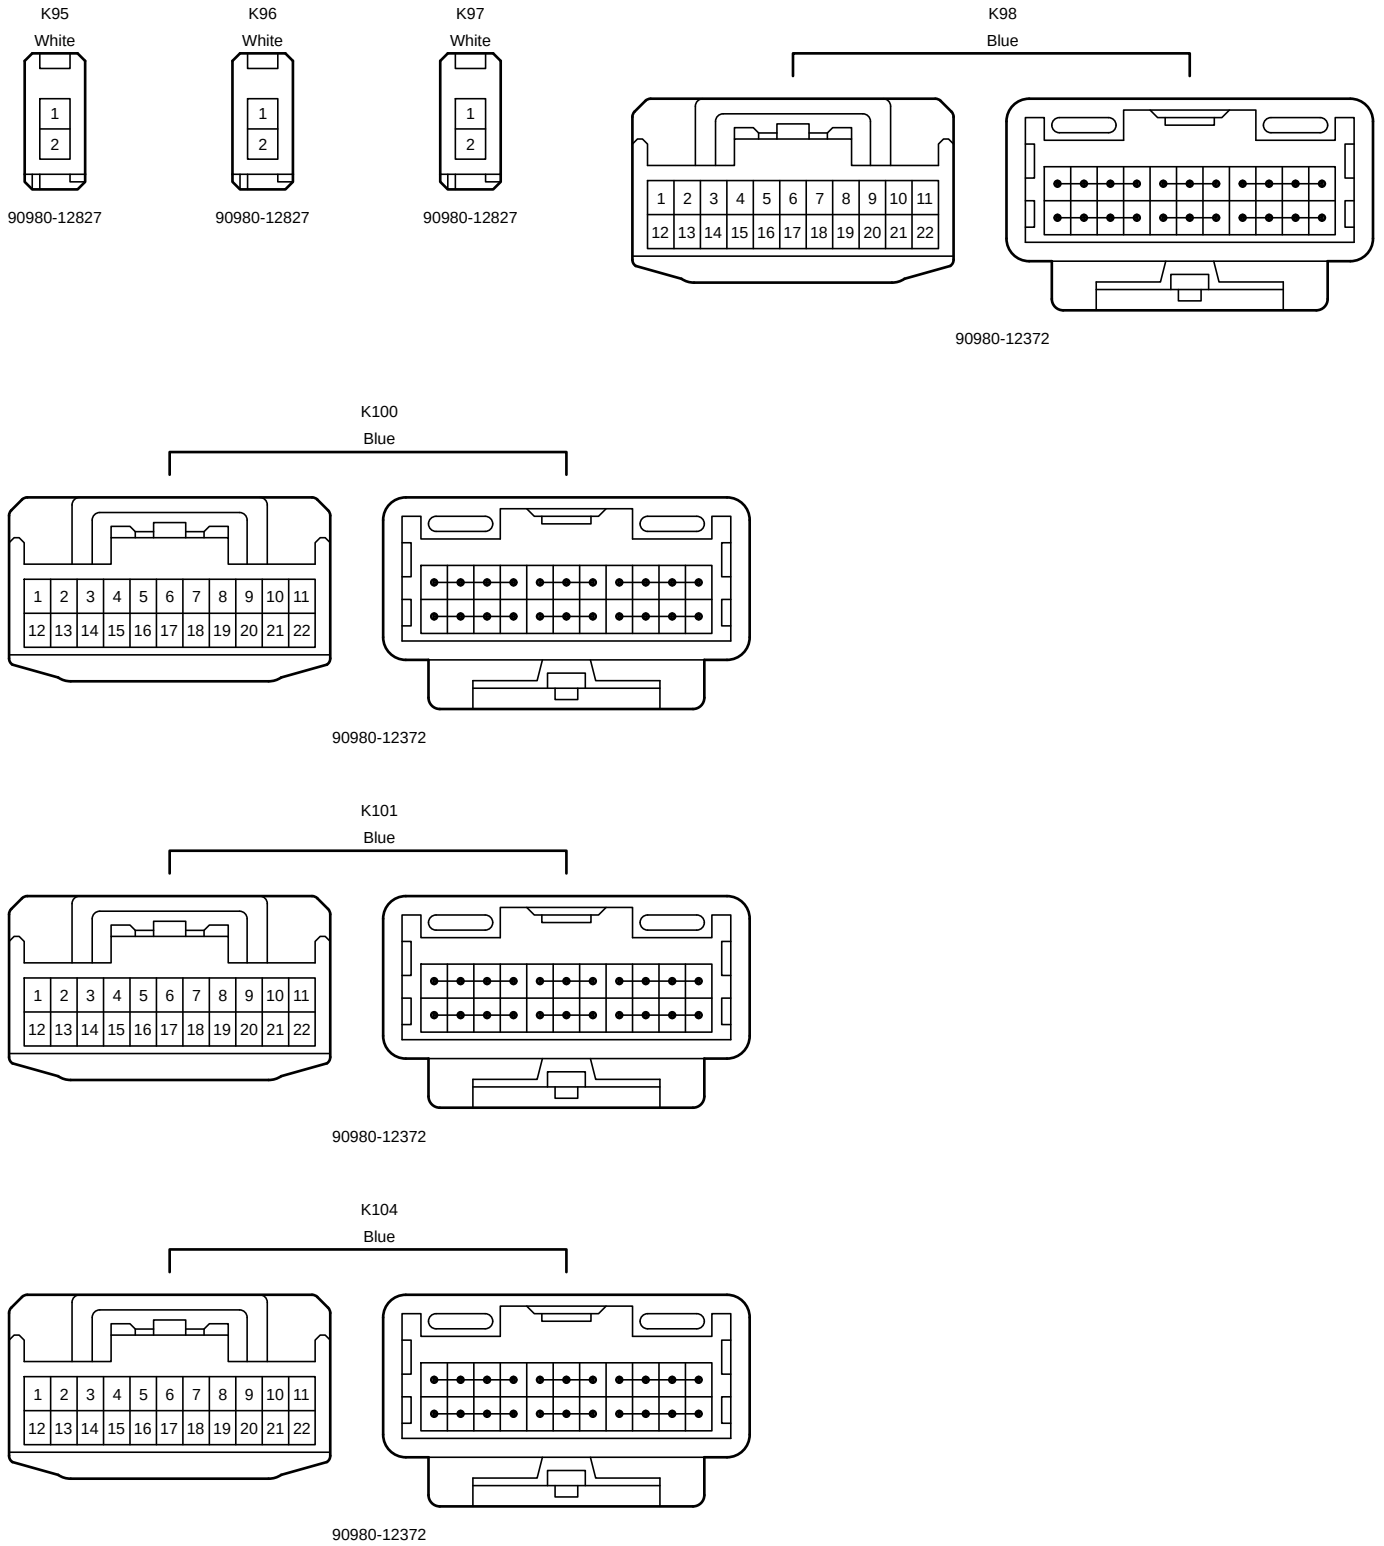


Position of Parts in Instrument Panel (LHD)

K105
Black

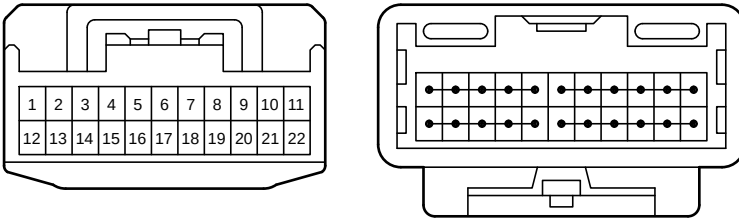


90980-12372

K107
Gray

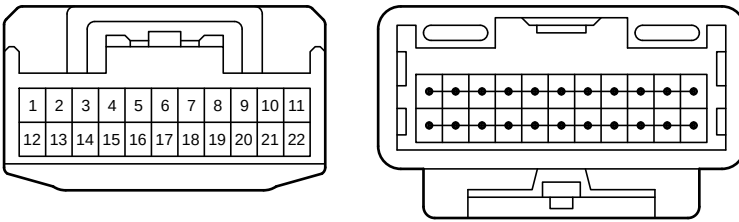


90980-12372

K108
Black

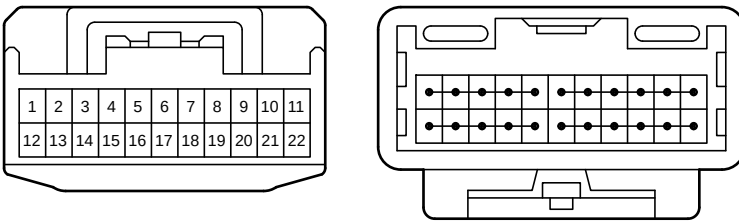

90980-12372

K109
Black

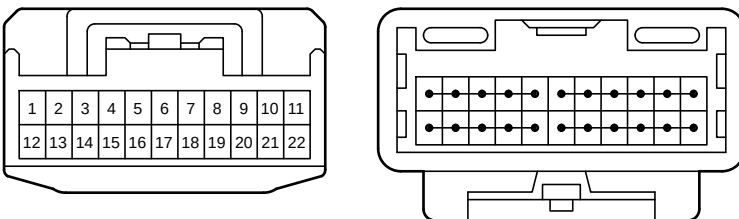

90980-12372

Position of Parts in Instrument Panel (LHD)

