


Position of Parts in Instrument Panel (LHD)


* 1:Refer to the Service Bulletin for the installation position of the parts.

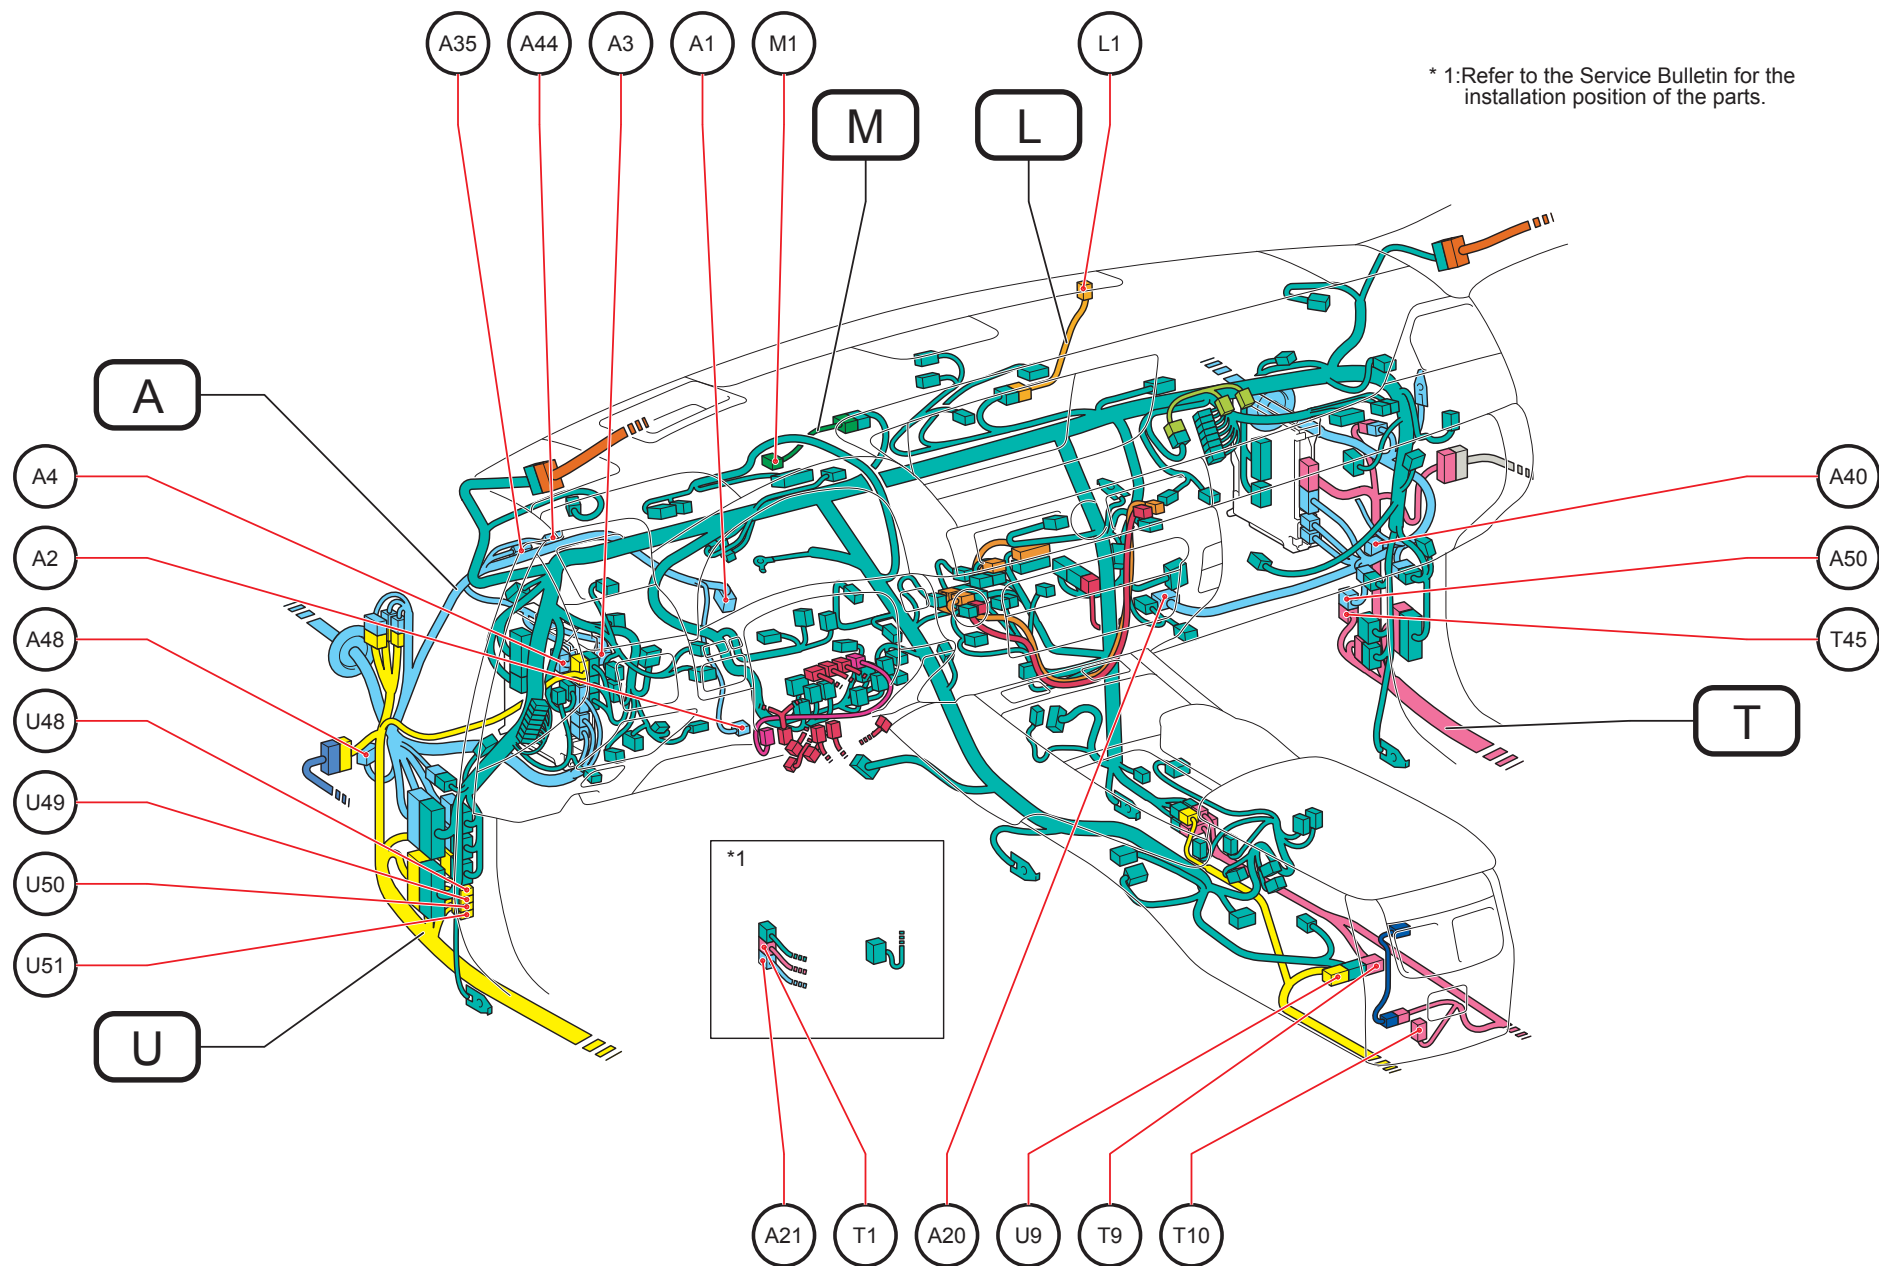


Position of Parts in Instrument Panel (LHD)

A1	Accelerator Pedal Sensor Assembly
A2	Kick Down Switch Assembly
A3	Stop Light Switch Assembly
A4	Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
A20	Blower Motor with Fan Sub-Assembly
A21	Certification ECU
A35	No. 3 Junction Connector
A40	No. 6 Junction Connector
A44	No. 23 Junction Connector
A48	Front Acceleration Sensor LH
A50	Absorber Control ECU
L1	Automatic Light Control Sensor
M1	Head Up Display (Combination Meter Mirror ECU)
T1	Certification ECU
T9	Airbag ECU Assembly
T10	Rear No. 1 Power Outlet Socket Assembly
T45	Absorber Control ECU
U9	Airbag ECU Assembly
U48	No. 9 CAN Junction Connector
U49	No. 9 CAN Junction Connector
U50	No. 9 CAN Junction Connector
U51	No. 9 CAN Junction Connector


Position of Parts in Instrument Panel (LHD)

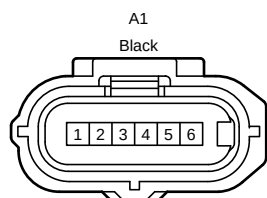


90980-12831

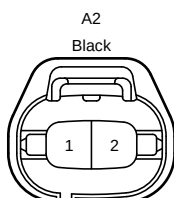


90980-11156

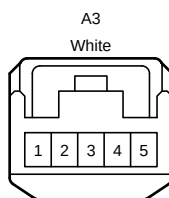


90980-12366

 


90980-10825

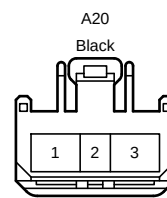


90980-11667

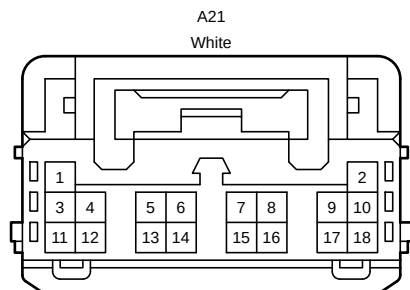


82824-52390

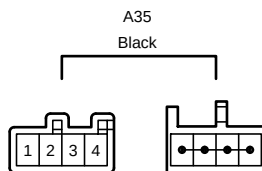


90980-11398

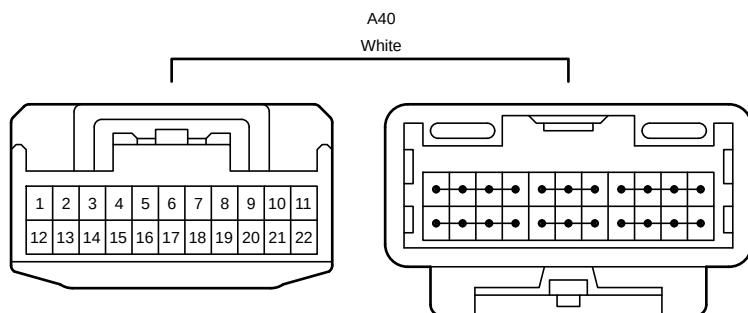


90980-12372

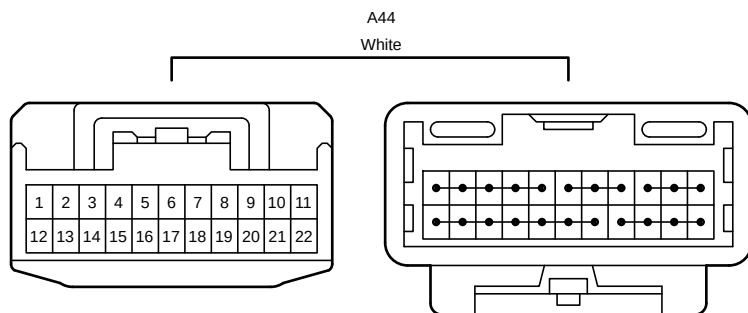


90980-12372

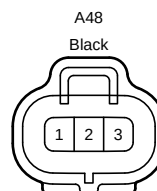


90980-10845

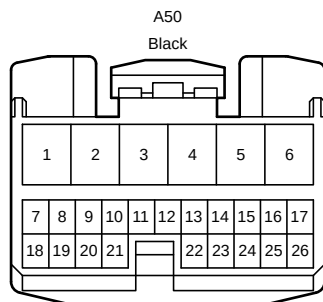

90980-12561

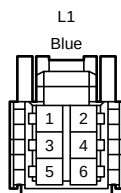


90980-12056

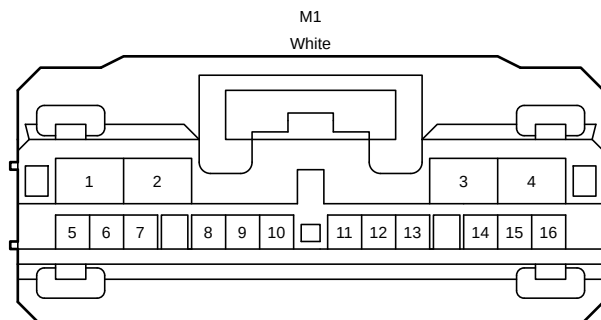


90980-12763


Position of Parts in Instrument Panel (LHD)

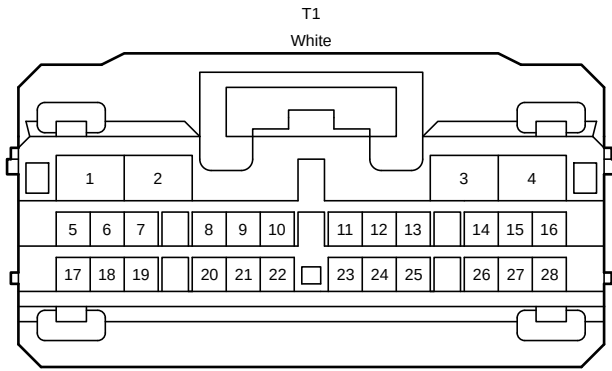


82824-52380

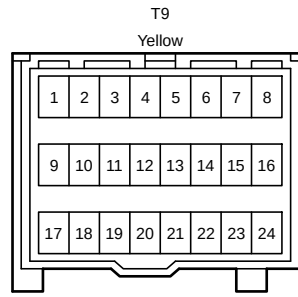


90980-12392

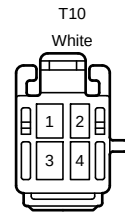


90980-11606

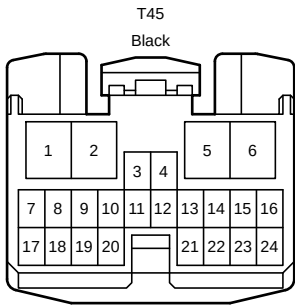


90980-12560

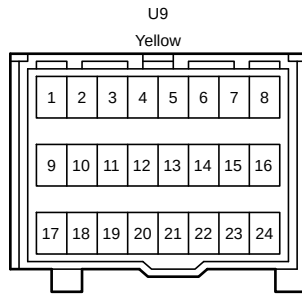


90980-12390

 


90980-12827

 

90980-12827

 

90980-12827

 

90980-12827