



Position of Parts in Instrument Panel (RHD)

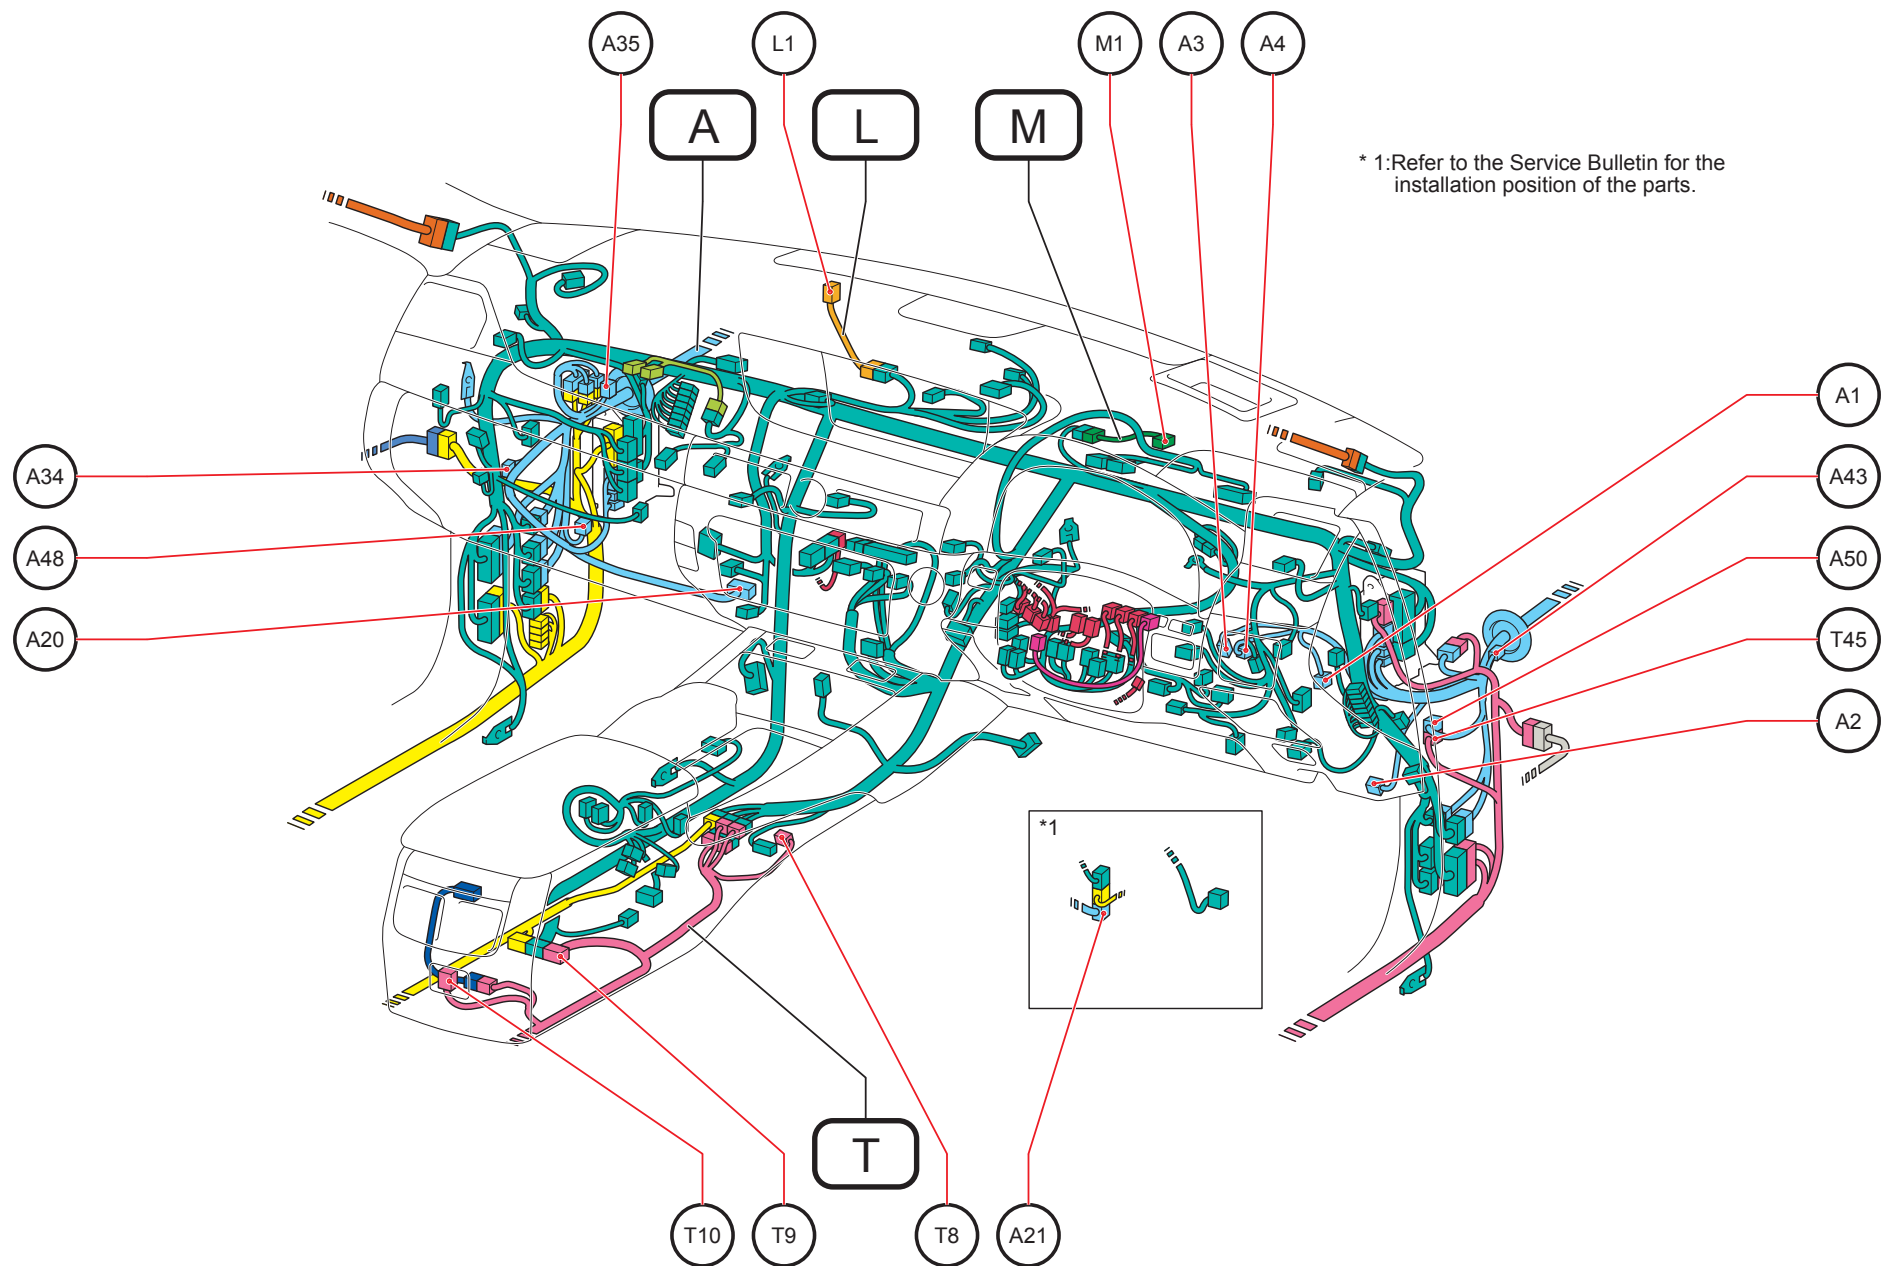


Position of Parts in Instrument Panel (RHD)

A1	Accelerator Pedal Sensor Assembly
A2	Kick Down Switch Assembly
A3	Stop Light Switch Assembly
A4	Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
A20	Blower Motor with Fan Sub-Assembly
A21	Certification ECU
A34	No. 2 Junction Connector
A35	No. 3 Junction Connector
A43	No. 22 Junction Connector
A48	Front Acceleration Sensor LH
A50	Absorber Control ECU
L1	Automatic Light Control Sensor
M1	Head Up Display (Combination Meter Mirror ECU)
T8	Transmission Control Switch (Transmission Floor Shift Assembly)
T9	Airbag ECU Assembly
T10	Rear No. 1 Power Outlet Socket Assembly
T45	Absorber Control ECU


Position of Parts in Instrument Panel (RHD)

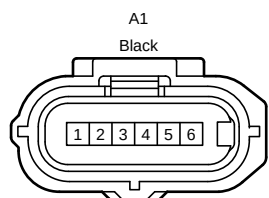


90980-12831

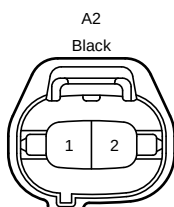


90980-11156

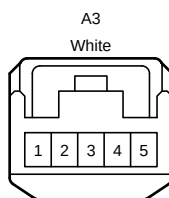


90980-12366

 


90980-10825

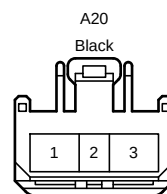


90980-11667

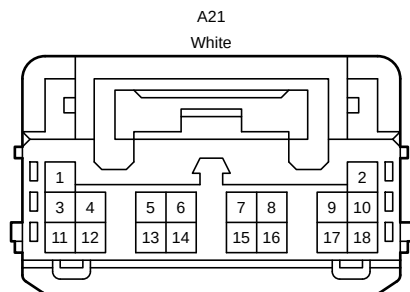


82824-52390

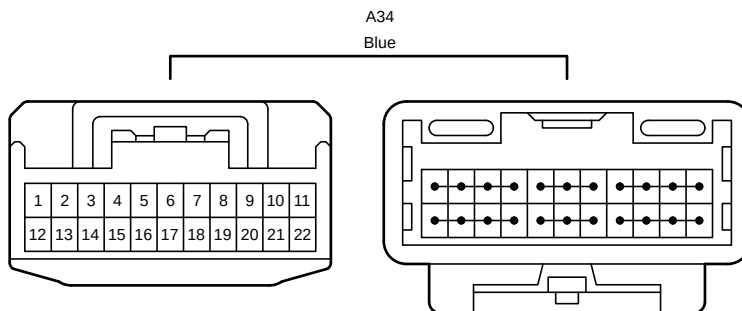


90980-12372

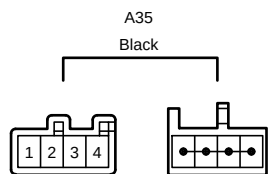


90980-11398

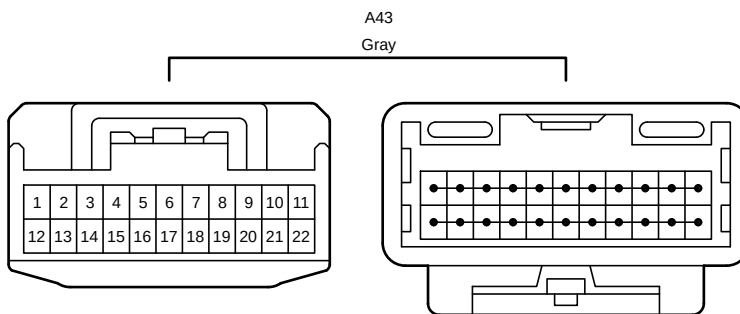


90980-12372

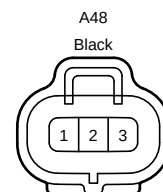


90980-10845

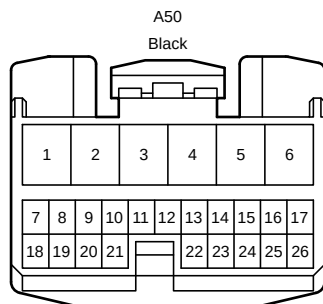


90980-12561

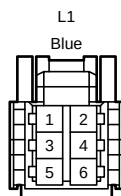


90980-12056

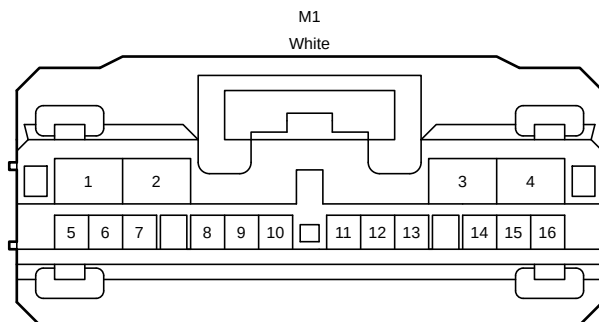


90980-12763

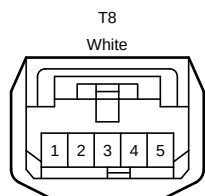


90980-12954

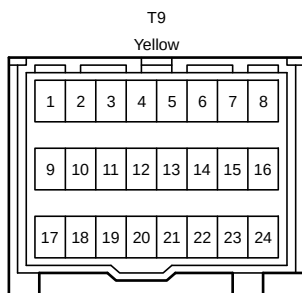

90980-12392

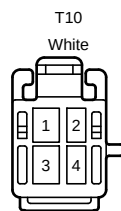

90980-11606

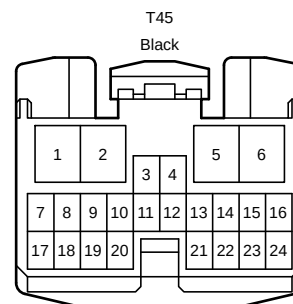

90980-12560