


Position of Parts in Seat <RHD Front Seat>

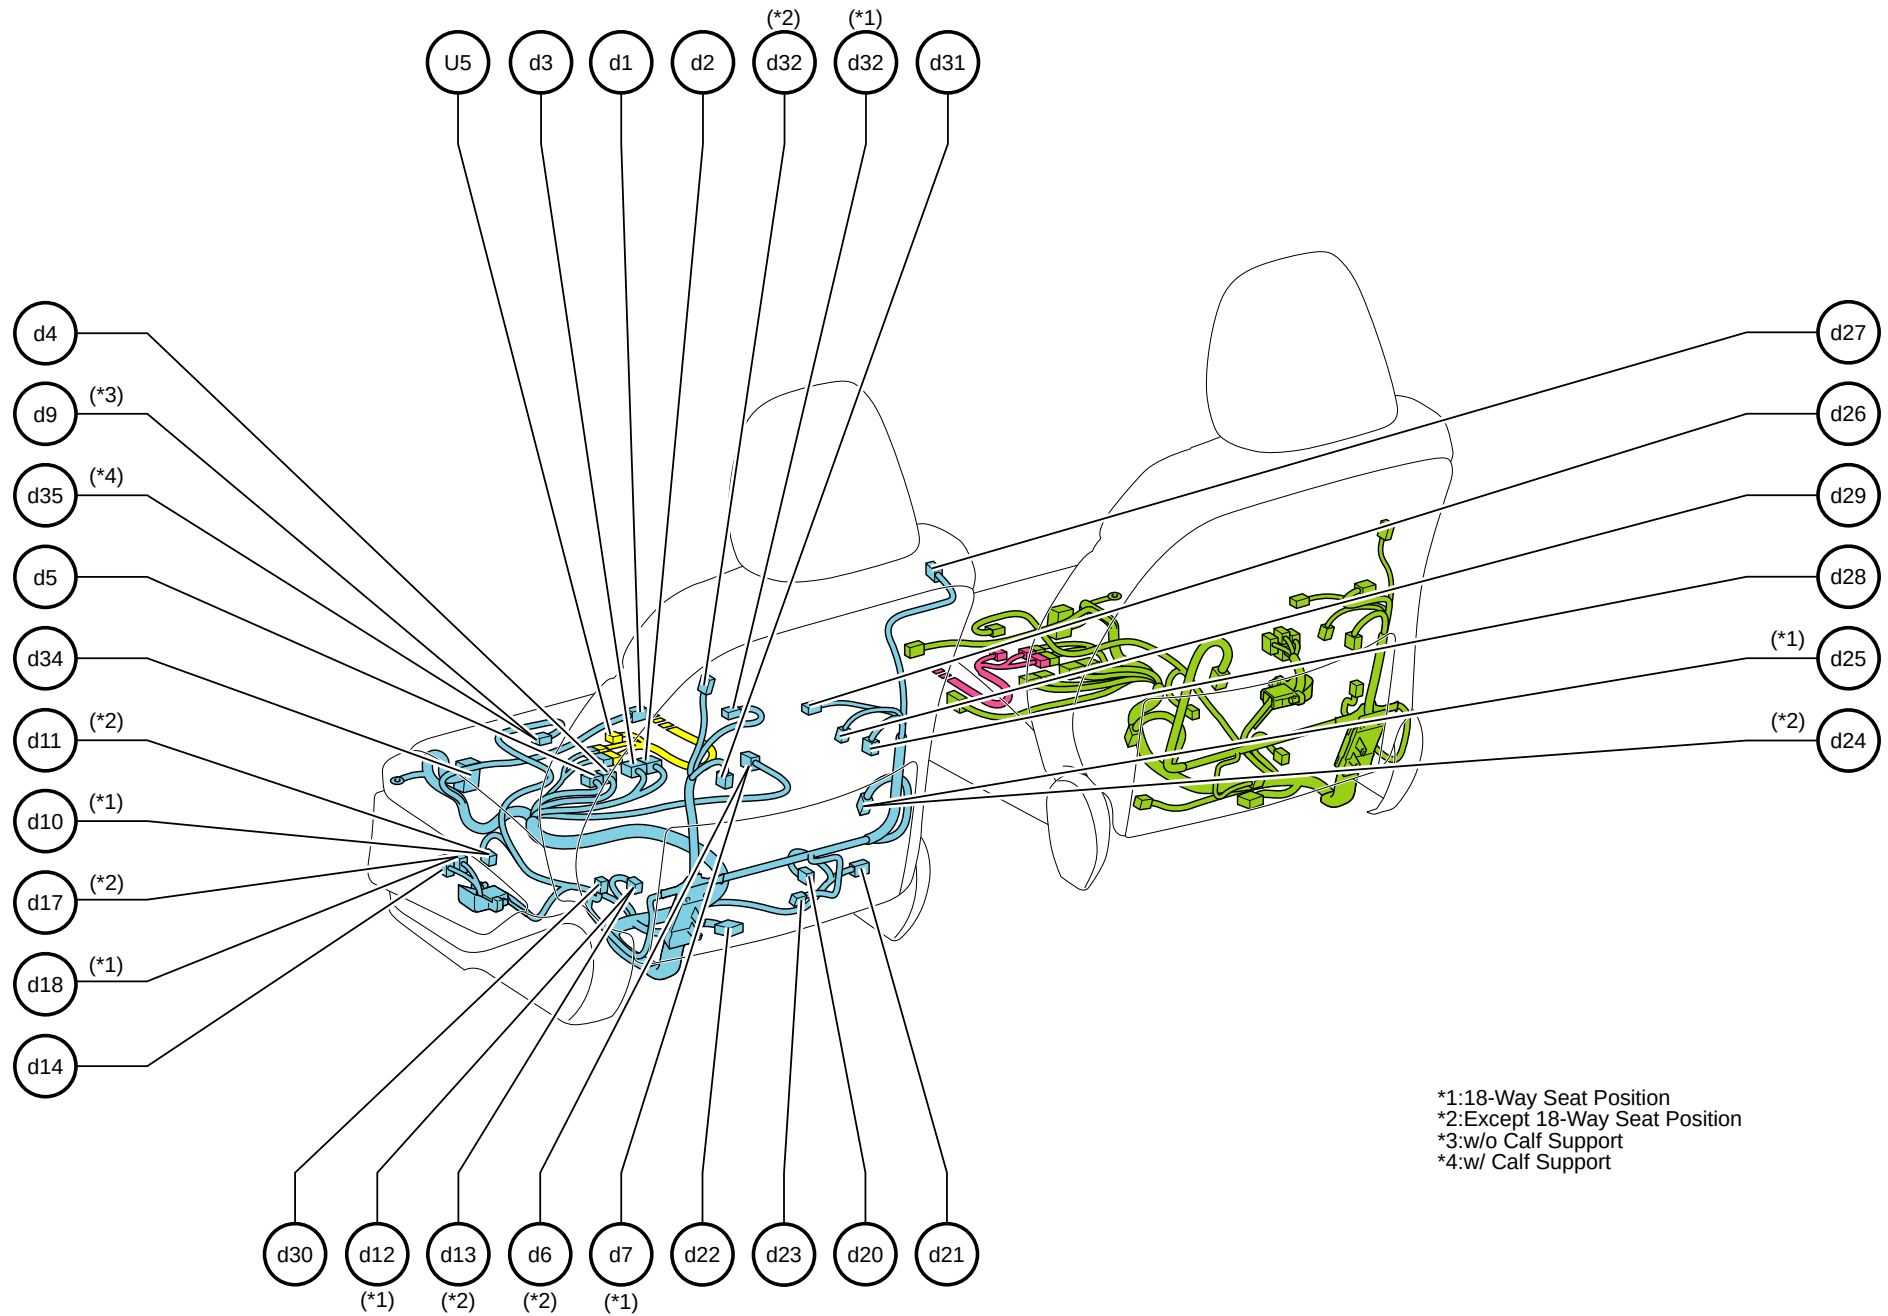

- U 5 Front Seat Inner Belt Assembly LH
- d 1 Front Seat Inner Belt Assembly LH
- d 2 Position Control ECU Assembly LH
- d 3 Position Control ECU Assembly LH
- d 4 Position Control ECU Assembly LH
- d 5 Position Control ECU Assembly LH
- d 6 Power Seat Slide Motor LH
- d 7 Power Seat Slide Motor LH
- d 9 Power Seat Cushion Motor LH
- d 10 Power Seat Tilt Motor LH
- d 11 Power Seat Tilt Motor LH
- d 12 Power Seat Lift Motor LH
- d 13 Power Seat Lift Motor LH
- d 14 Front Lumbar Power Seat Switch LH
- d 17 Front Power Seat Switch Assembly LH
- d 18 Front Power Seat Switch Assembly LH
- d 20 Occupant Detection Sensor LH (Separate Type Front Seat Cushion Pad)
- d 21 Seat Climate Control Blower LH
- d 22 Front Seat Heater Assembly LH
- d 23 Rear Foot Light LH (No. 1 Interior Illumination Light Assembly)
- d 24 Power Seat Reclining Motor LH
- d 25 Power Seat Reclining Motor LH
- d 26 Power Seat Shoulder Support Motor LH
- d 27 Slide and Reclining Switch LH (Power Seat Switch Assembly)
- d 28 Power Seat Pelvic Support Motor LH
- d 29 Seat Back Climate Control Blower LH
- d 30 Power Seat Side Support Motor LH
- d 31 Lumbar Support Motor LH
- d 32 Front Seat Airbag Assembly LH
- d 34 Junction Connector
- d 35 Power Seat Calf Support Motor LH

Position of Parts in Seat <RHD Front Seat>

