

F RELAY LOCATIONS

[Seat]

(Front Seat)

Position Control ECU Assembly LH

Position Control ECU Assembly RH

