


Position of Parts in Seat <LHD Front Seat>

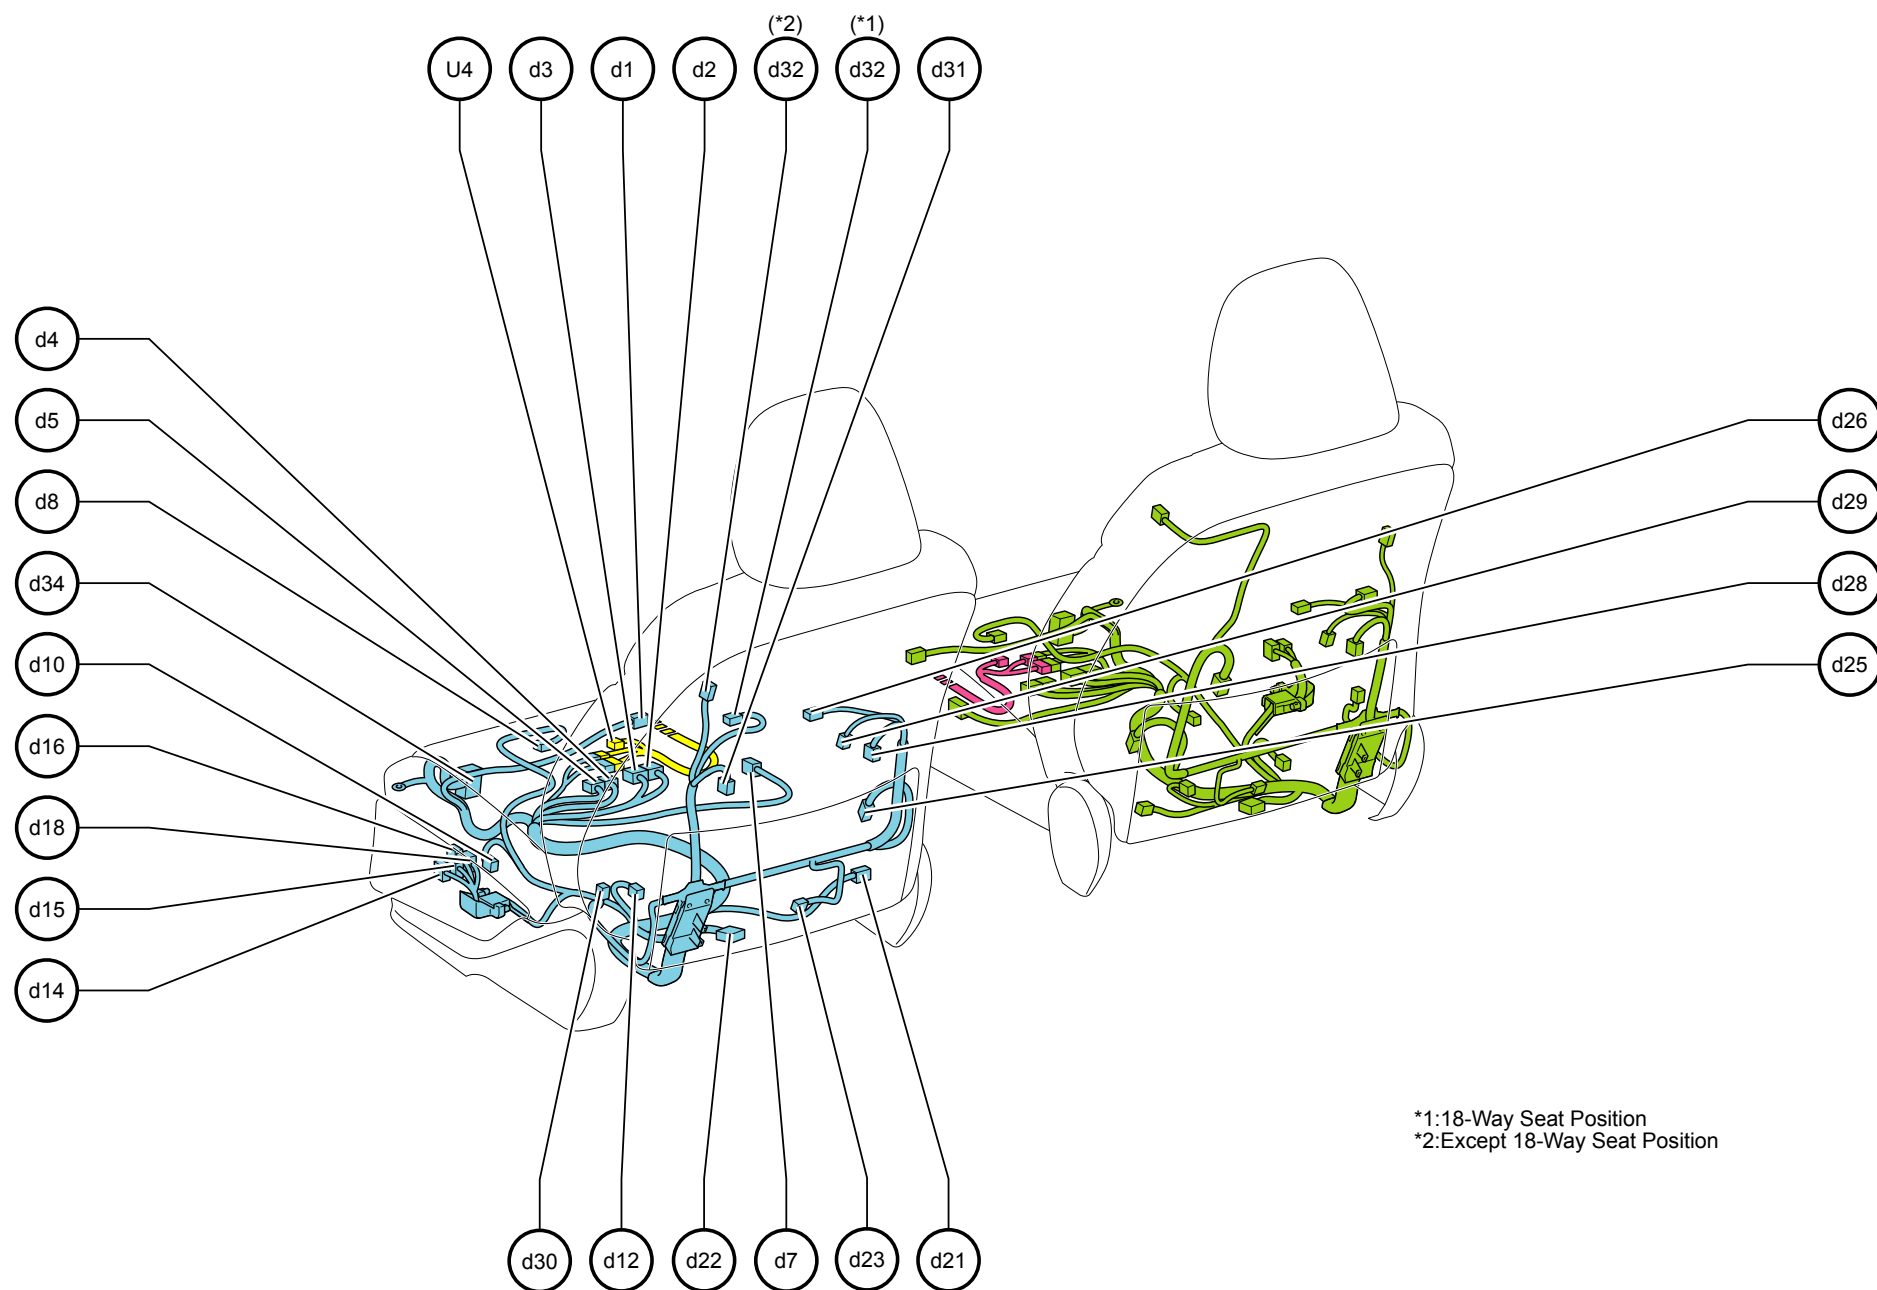

*1:18-Way Seat Position
 *2:Except 18-Way Seat Position

- U 4 Front Seat Inner Belt Assembly LH
- d 1 Front Seat Inner Belt Assembly LH
- d 2 Position Control ECU Assembly LH
- d 3 Position Control ECU Assembly LH
- d 4 Position Control ECU Assembly LH
- d 5 Position Control ECU Assembly LH
- d 7 Power Seat Slide Motor LH
- d 8 Power Seat Cushion Motor LH
- d 10 Power Seat Tilt Motor LH
- d 12 Power Seat Lift Motor LH
- d 14 Front Lumbar Power Seat Switch LH
- d 15 Power Seat Switch Assembly LH
- d 16 Power Seat Switch Assembly LH
- d 18 Front Power Seat Switch Assembly LH
- d 21 Seat Climate Control Blower LH
- d 22 Front Seat Heater Assembly LH
- d 23 Rear Foot Light LH (No. 1 Interior Illumination Light Assembly)
- d 25 Power Seat Reclining Motor LH
- d 26 Power Seat Shoulder Support Motor LH
- d 28 Power Seat Pelvic Support Motor LH
- d 29 Seat Back Climate Control Blower LH
- d 30 Power Seat Side Support Motor LH
- d 31 Lumbar Support Motor LH
- d 32 Front Seat Airbag Assembly LH
- d 34 Junction Connector

Position of Parts in Seat <LHD Front Seat>

