



Position of Parts in Engine Compartment <LHD 2GR-FKS>

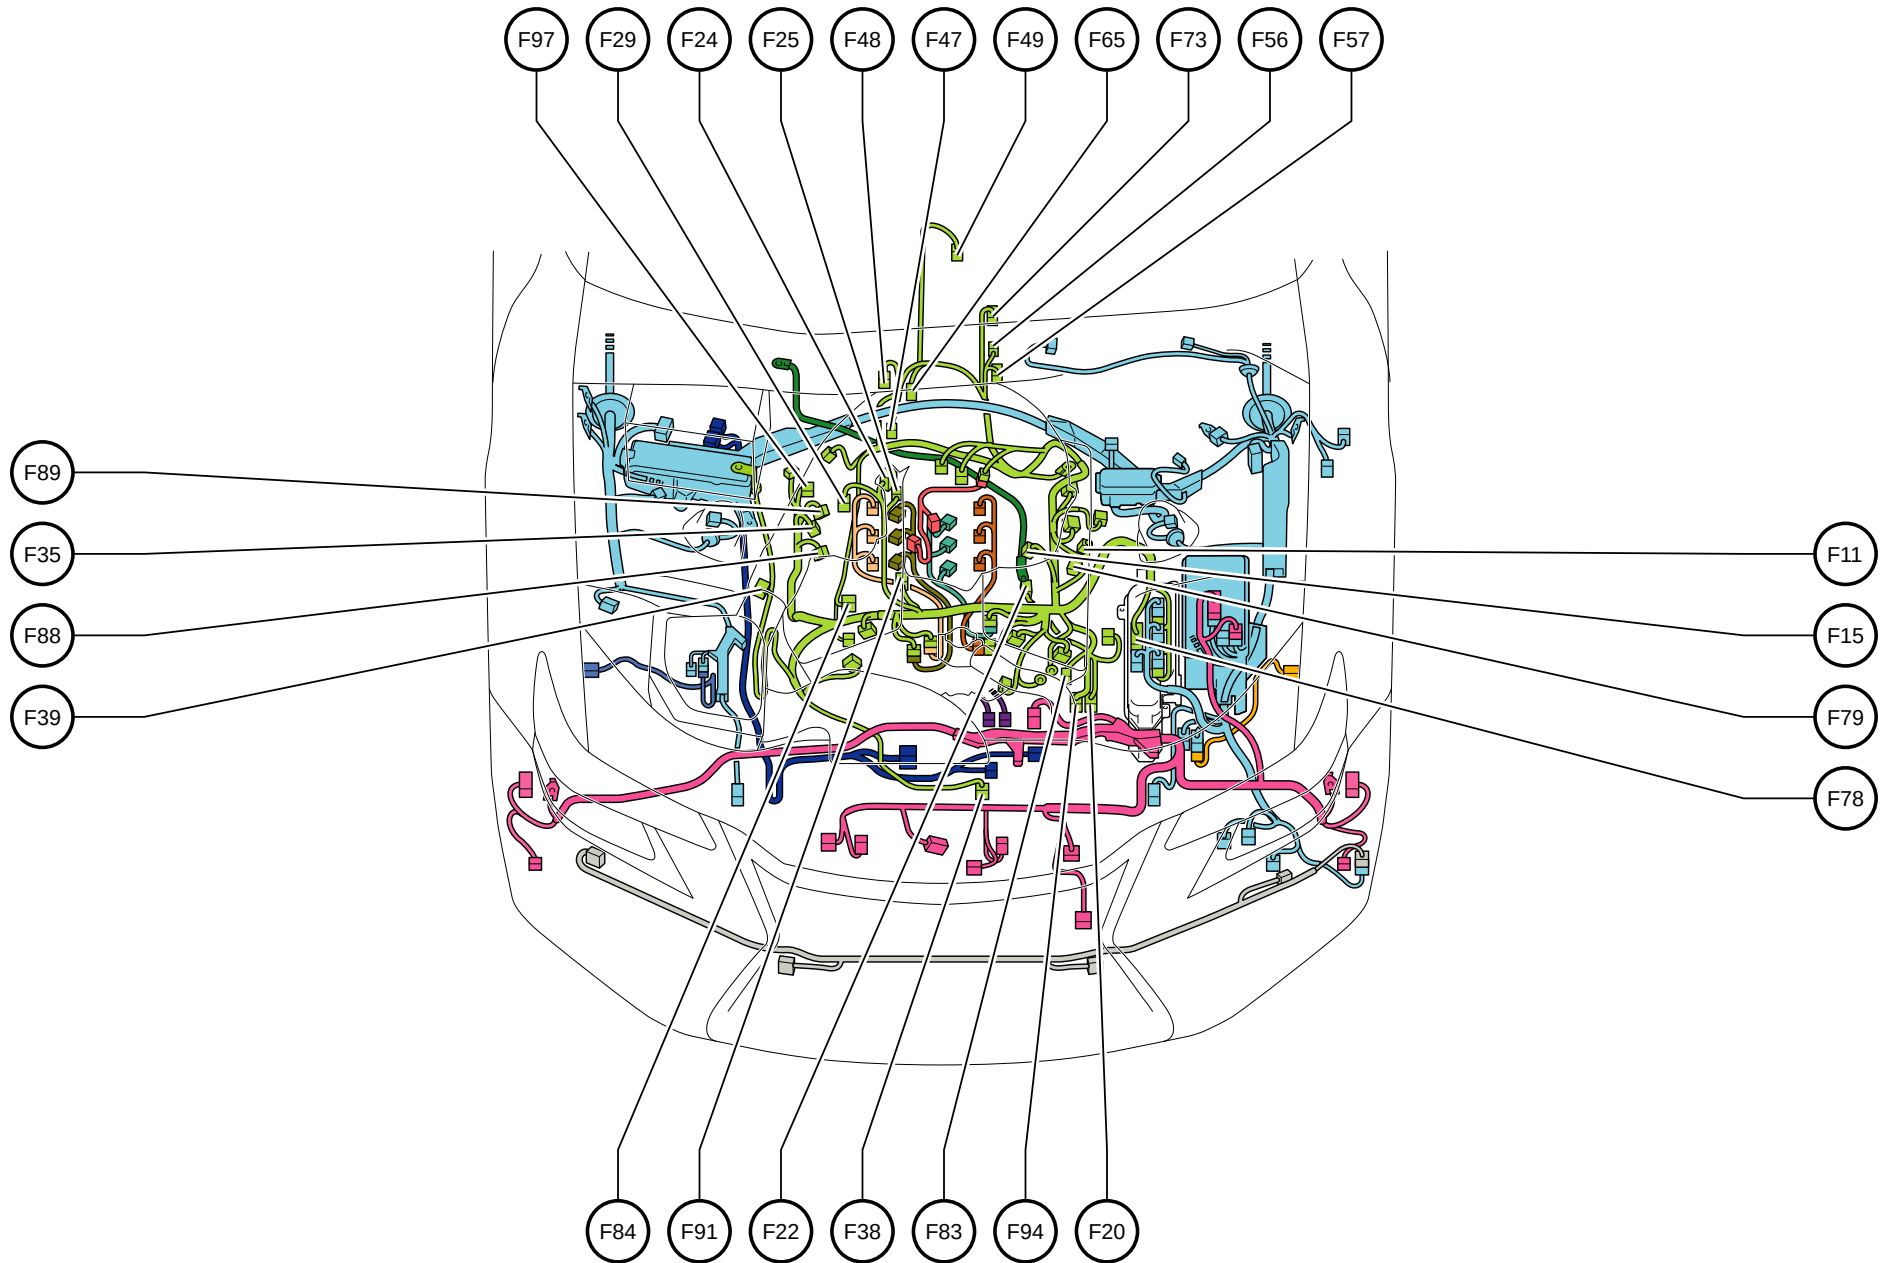


- F 11 VVT Sensor (Bank 2 Exhaust Side)
- F 15 VVT Sensor (Bank 2 Intake Side)
- F 20 Cooler Compressor Assembly
- F 22 Starter Assembly
- F 24 Throttle Body Assembly with Motor
- F 25 Purge VSV
- F 29 VVT Sensor (Bank 1 Intake Side)
- F 35 VVT Sensor (Bank 1 Exhaust Side)
- F 38 Engine Oil Pressure Switch Assembly
- F 39 Intake Mass Air Flow Meter Sub-Assembly
- F 47 Transmission Revolution Sensor (Turbine)
- F 48 Park/Neutral Position Switch Assembly
- F 49 4WD Linear Solenoid (Transfer Transmission Wire)
- F 56 Transmission Revolution Sensor (Counter Gear)
- F 57 ECT Solenoid (Transmission Wire)
- F 65 Park/Neutral Position Switch Assembly
- F 73 ECT Solenoid (Transmission Wire)
- F 78 ECM
- F 79 Ignition Coil Assembly No. 2
- F 83 Generator Assembly
- F 84 Crank Position Sensor
- F 88 Ignition Coil Assembly No. 1
- F 89 Ignition Coil Assembly No. 3
- F 91 Fuel Pressure Sensor (Low Pressure Side)
- F 94 Cooler Compressor Assembly
- F 97 Ignition Coil Assembly No. 5

Position of Parts in Engine Compartment <LHD 2GR-FKS>

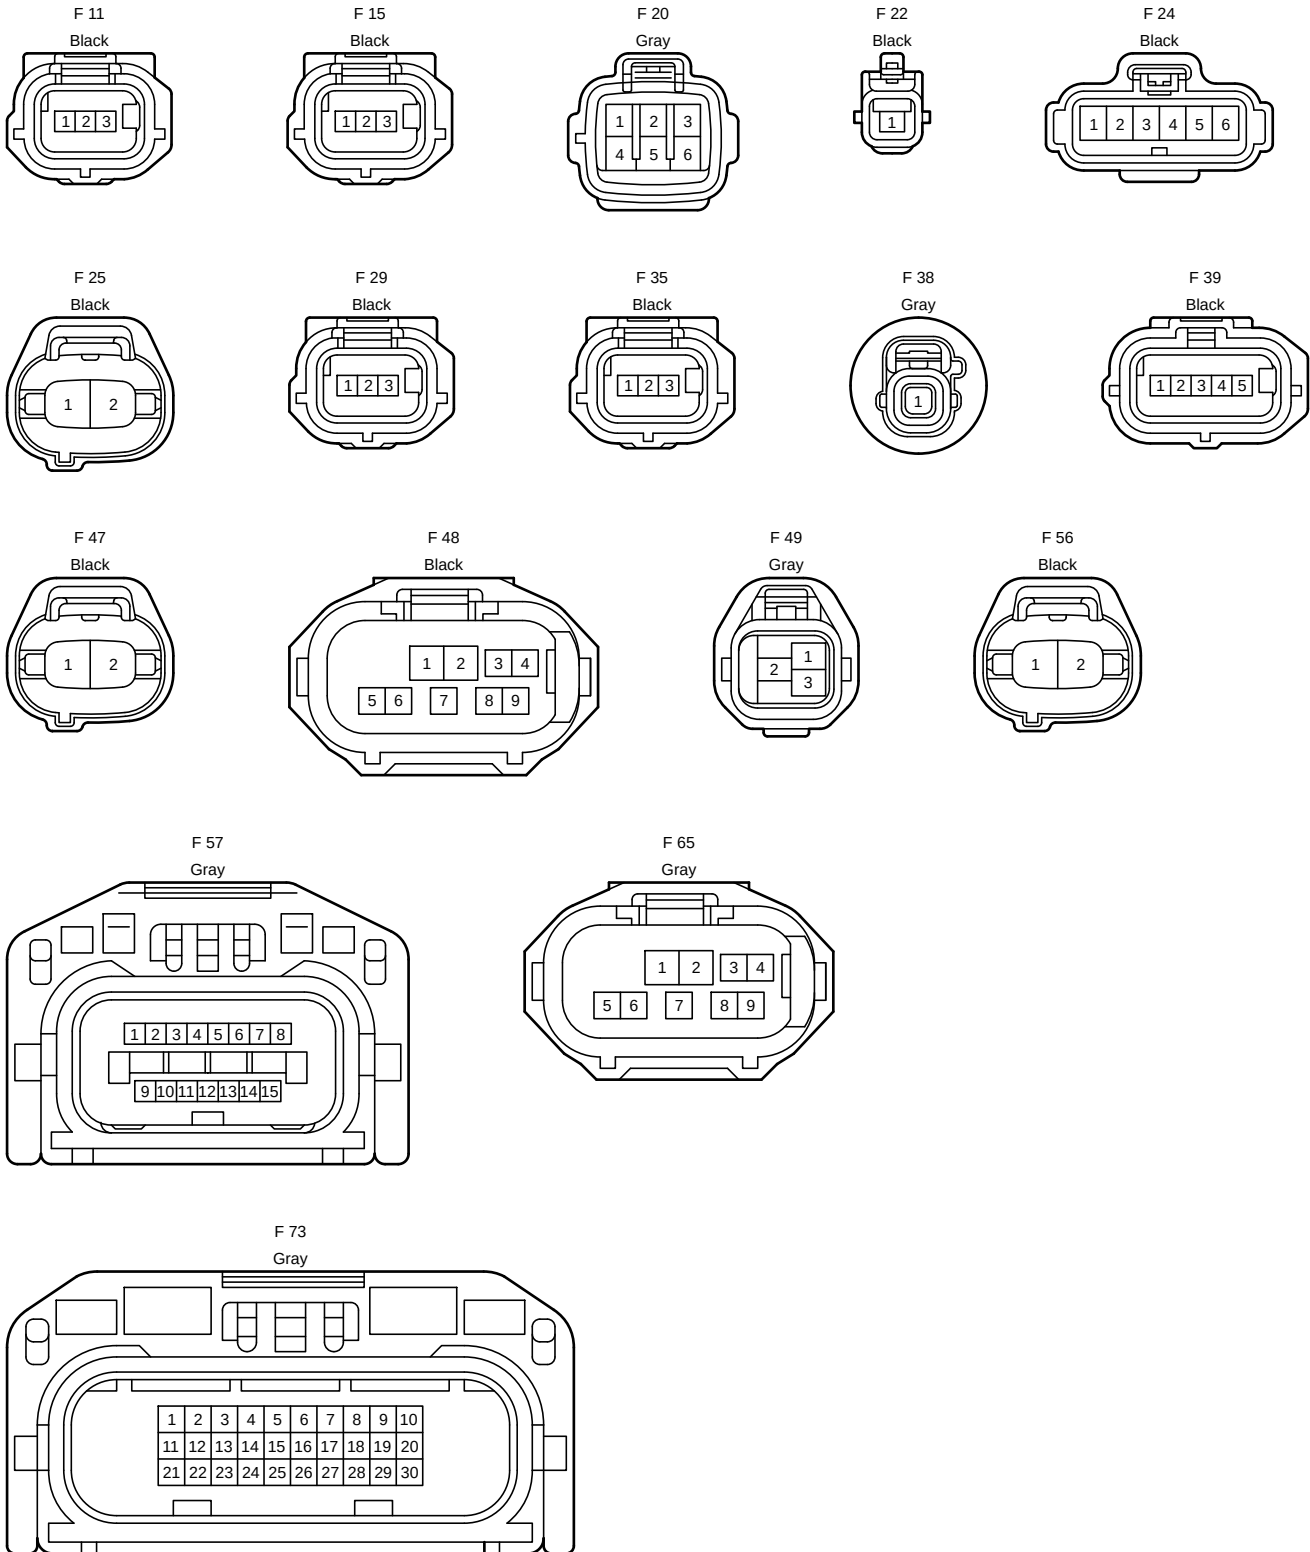


Position of Parts in Engine Compartment <LHD 2GR-FKS>


F 78
Black

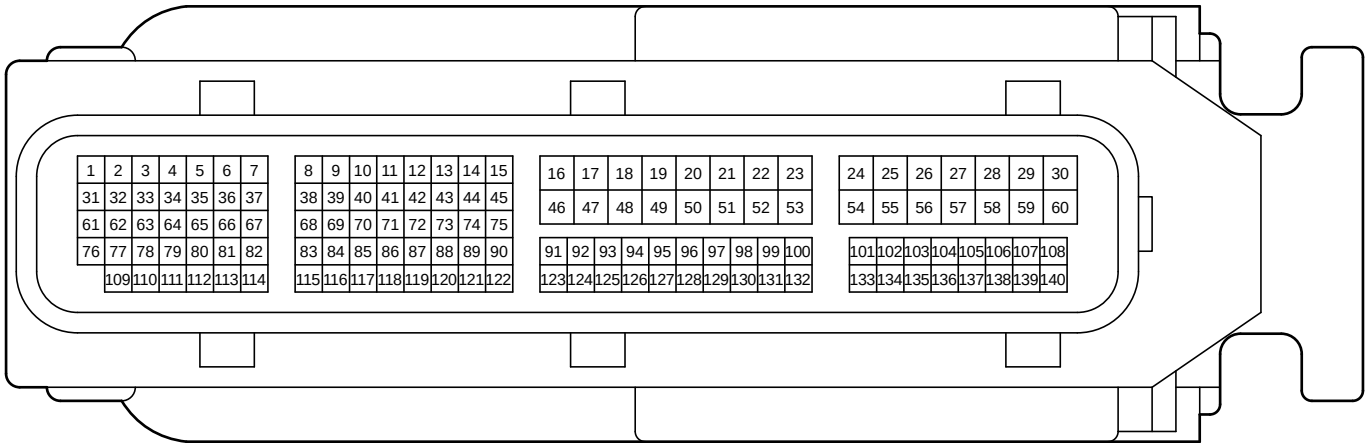


F 79
Gray

 


F 83
Black

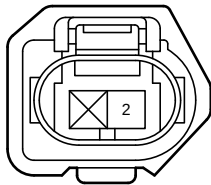


F 84
Black

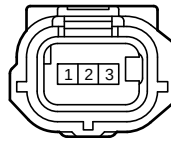


F 88
Black

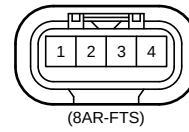


F 88
Gray

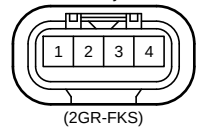


F 89
Black

 

F 91
Black

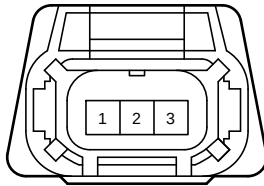

F 94
Gray

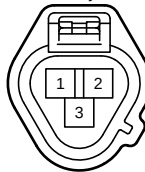

F 97
Gray

