


Position of Parts in Engine Compartment <LHD 2GR-FKS>

* 5: Before Sep. 2018 Production
 * 6: From Sep. 2018 Production

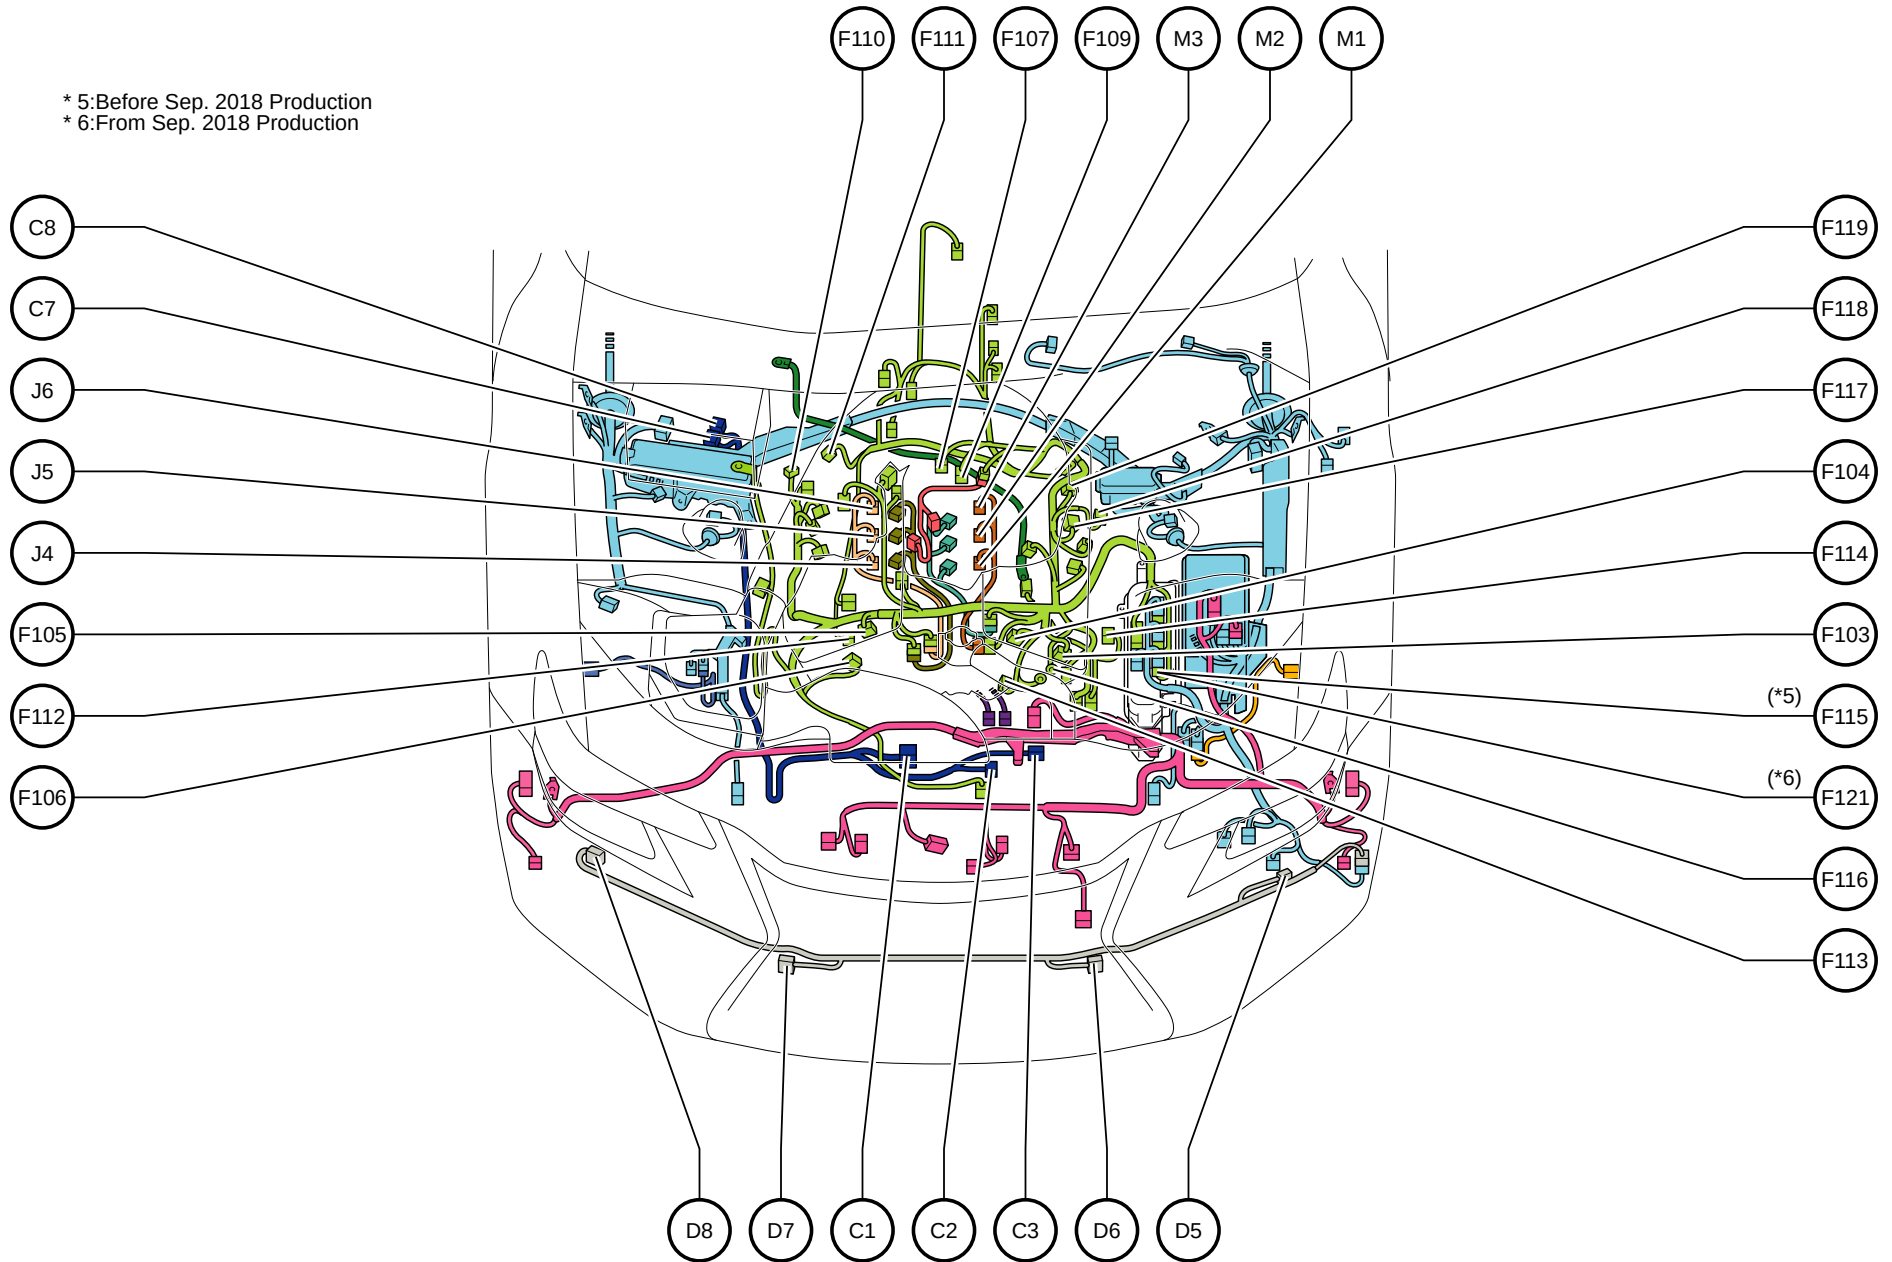

- C 1 Power Steering Motor (Power Steering Link Assembly)
- C 2 Power Steering Motor (Power Steering Link Assembly)
- C 3 Power Steering Torque Sensor (Power Steering Link Assembly)
- C 7 Power Steering ECU Assembly
- C 8 Power Steering ECU Assembly

- D 5 Front No. 1 Ultrasonic Sensor LH
- D 6 Front No. 1 Ultrasonic Sensor Center LH
- D 7 Front No. 1 Ultrasonic Sensor Center RH
- D 8 Front No. 1 Ultrasonic Sensor RH


- F 103 Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- F 104 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- F 105 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- F 106 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- F 107 Fuel Pressure Sensor (High Pressure Side)
- F 109 E.F.I. Engine Coolant Temperature Sensor
- F 110 Fuel Pump Assembly
- F 111 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- F 112 Engine Oil Level Sensor
- F 113 Water Inlet with Thermostat Sub-Assembly
- F 114 Cooler Compressor Assembly
- F 115 Junction Connector
- F 116 Generator Assembly
- F 117 Ignition Coil Assembly No. 4
- F 118 No. 2 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- F 119 Ignition Coil Assembly No. 6
- F 121 Junction Connector

- J 4 Fuel Injector Assembly No. 1 (for Port Injection)
- J 5 Fuel Injector Assembly No. 3 (for Port Injection)
- J 6 Fuel Injector Assembly No. 5 (for Port Injection)


- M 1 Fuel Injector Assembly No. 2 (for Port Injection)
- M 2 Fuel Injector Assembly No. 4 (for Port Injection)
- M 3 Fuel Injector Assembly No. 6 (for Port Injection)

Position of Parts in Engine Compartment <LHD 2GR-FKS>


C 1
Gray

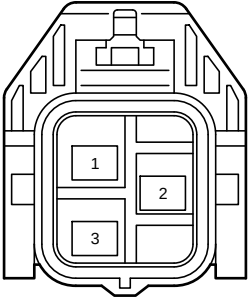


C 2
Gray

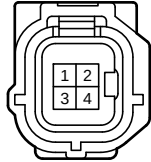


C 3
Gray

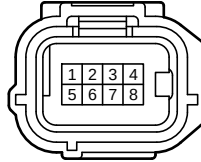


C 7
Black

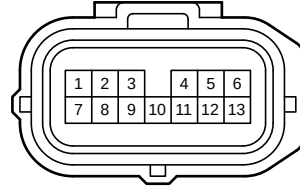


C 8
Black

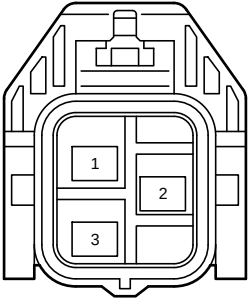


D 5
Black

 


D 6
Black

 


D 7
Black

 


D 8
Black

 


F103
Black

 


F104
Black

 


F105
Black

 


F106
Black

 


F107
Black

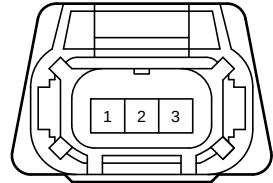

F109
Black

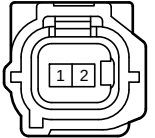

F110
Gray

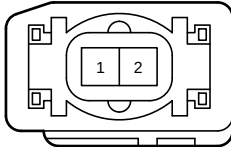


F111
Gray




F112
Gray




F113
Black

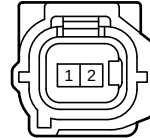


F114
Black

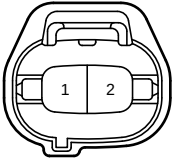


F115
Blue

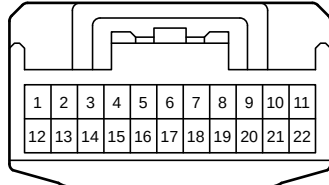

F116

 


F117
Black

 


F118
Gray



 
F119
Gray




F121
Black

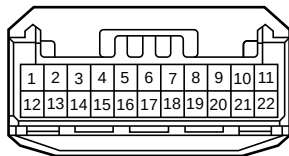


J 4
Black

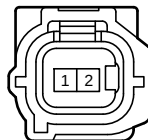

J 5
Black

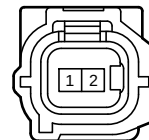


J 6
Black

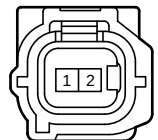

Position of Parts in Engine Compartment <LHD 2GR-FKS>


M 1

Black

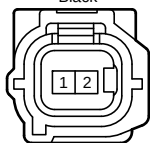

M 2

Black

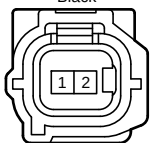

M 3

Black

