

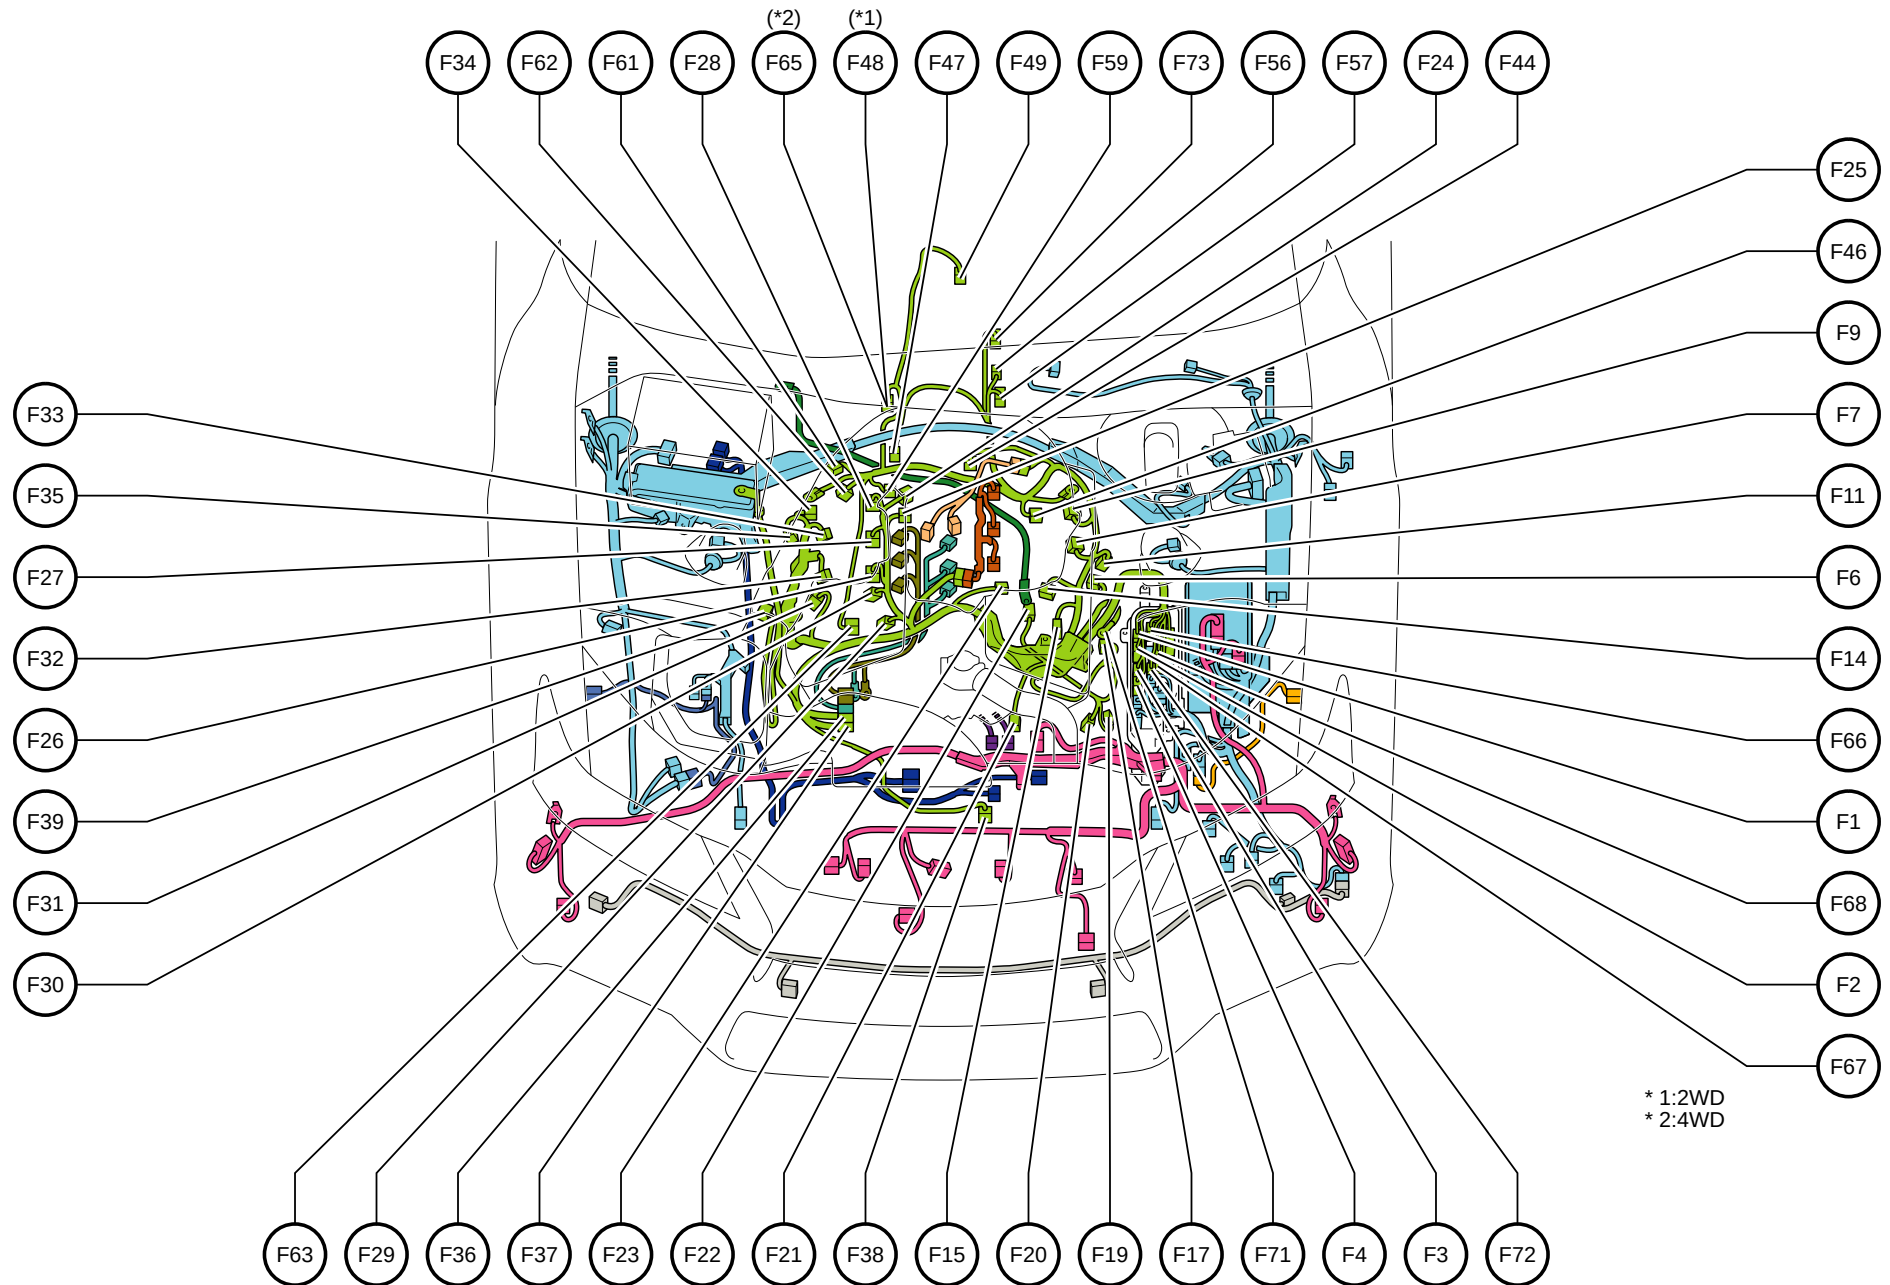
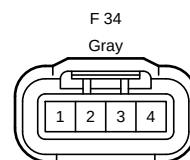
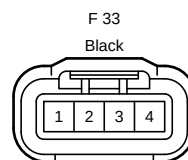
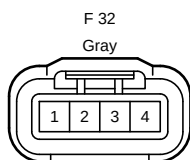
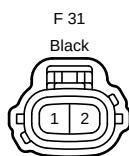
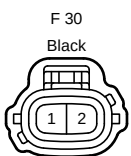
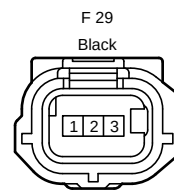
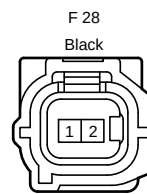
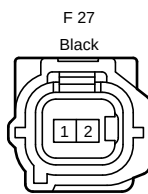
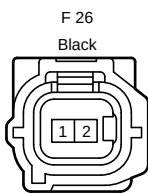
 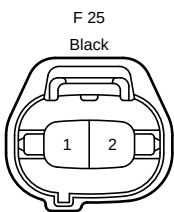
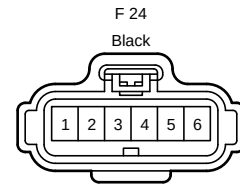

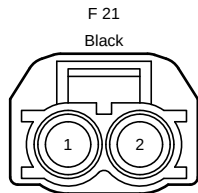
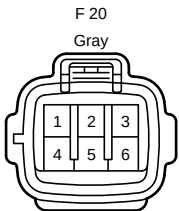
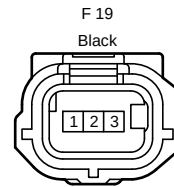
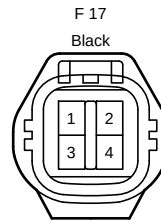
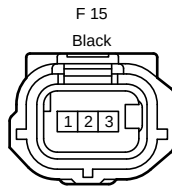
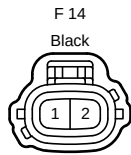
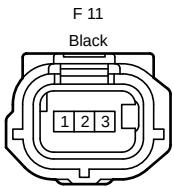
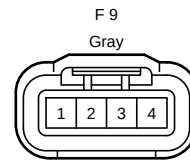
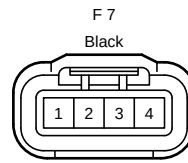
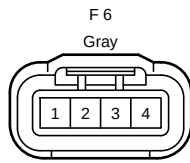
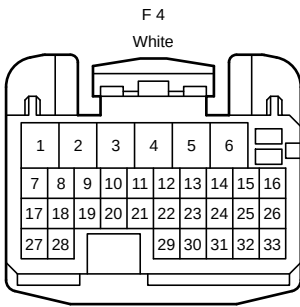
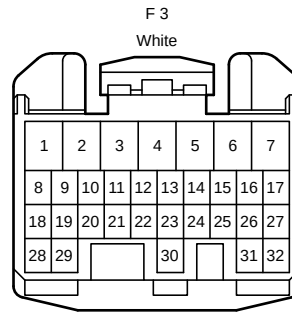


Position of Parts in Engine Compartment <LHD 2GR-FSE>

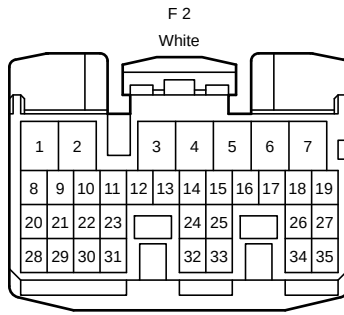


- F 1 ECM
- F 2 ECM
- F 3 ECM
- F 4 ECM
- F 6 Ignition Coil Assembly No. 2
- F 7 Ignition Coil Assembly No. 4
- F 9 Ignition Coil Assembly No. 6
- F 11 VVT Sensor (Bank 2 Exhaust Side)
- F 14 Cam Timing Oil Control Valve Assembly LH (Bank 2 Exhaust Side)
- F 15 VVT Sensor (Bank 2 Intake Side)
- F 17 Generator Assembly
- F 19 Cooler Compressor Assembly
- F 20 Cooler Compressor Assembly
- F 21 Crank Position Sensor
- F 22 Starter Assembly
- F 23 Cam Timing Oil Control Valve Assembly LH (Bank 2 Intake Side)
- F 24 Throttle Body Assembly with Motor
- F 25 Purge VSV
- F 26 Fuel Injector Assembly No. 1 (for Port Injection)
- F 27 Fuel Injector Assembly No. 3 (for Port Injection)
- F 28 Fuel Injector Assembly No. 5 (for Port Injection)
- F 29 VVT Sensor (Bank 1 Intake Side)
- F 30 Cam Timing Oil Control Valve Assembly RH (Bank 1 Intake Side)
- F 31 Cam Timing Oil Control Valve Assembly RH (Bank 1 Exhaust Side)
- F 32 Ignition Coil Assembly No. 1
- F 33 Ignition Coil Assembly No. 3
- F 34 Ignition Coil Assembly No. 5
- F 35 VVT Sensor (Bank 1 Exhaust Side)
- F 36 Injector Driver
- F 37 Injector Driver
- F 38 Engine Oil Pressure Switch Assembly
- F 39 Intake Mass Air Flow Meter Sub-Assembly
- F 44 Fuel Pressure Sensor
- F 46 No. 2 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- F 47 Transmission Revolution Sensor (Turbine)
- F 48 Park/Neutral Position Switch Assembly
- F 49 4WD Linear Solenoid (Transfer Transmission Wire)
- F 56 Transmission Revolution Sensor (Counter Gear)
- F 57 ECT Solenoid (Transmission Wire)
- F 59 E.F.I. Engine Coolant Temperature Sensor
- F 61 Fuel Pump Assembly
- F 62 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- F 63 Engine Oil Level Sensor
- F 65 Park/Neutral Position Switch Assembly
- F 66 Junction Connector
- F 67 Junction Connector
- F 68 Junction Connector
- F 71 Generator Assembly
- F 72 Transmission Control ECU Assembly
- F 73 ECT Solenoid (Transmission Wire)

Position of Parts in Engine Compartment <LHD 2GR-FSE>

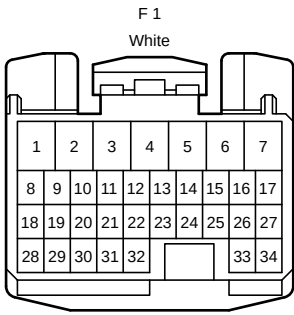

Position of Parts in Engine Compartment <LHD 2GR-FSE>

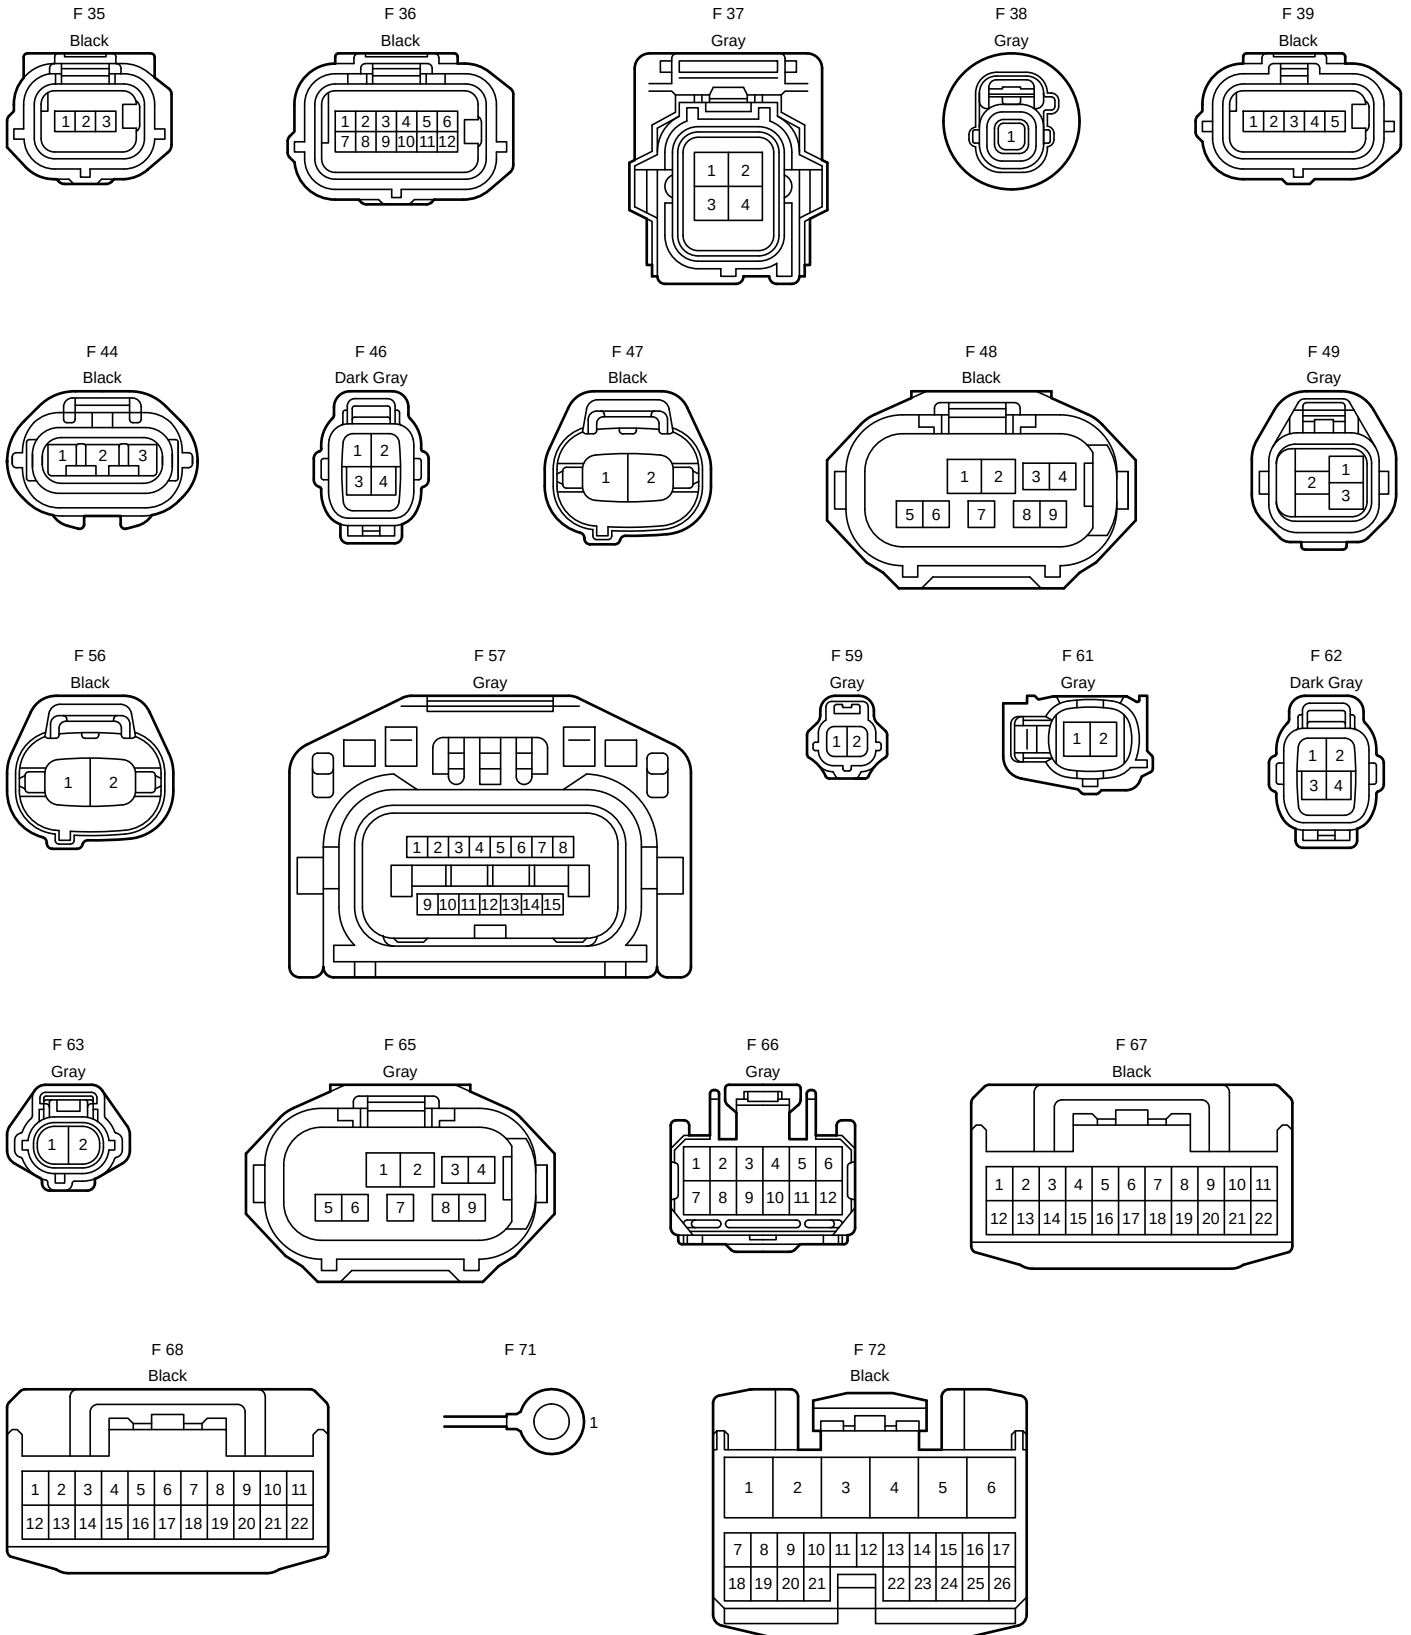

F 73
Gray

