



Position of Parts in Body <LHD>

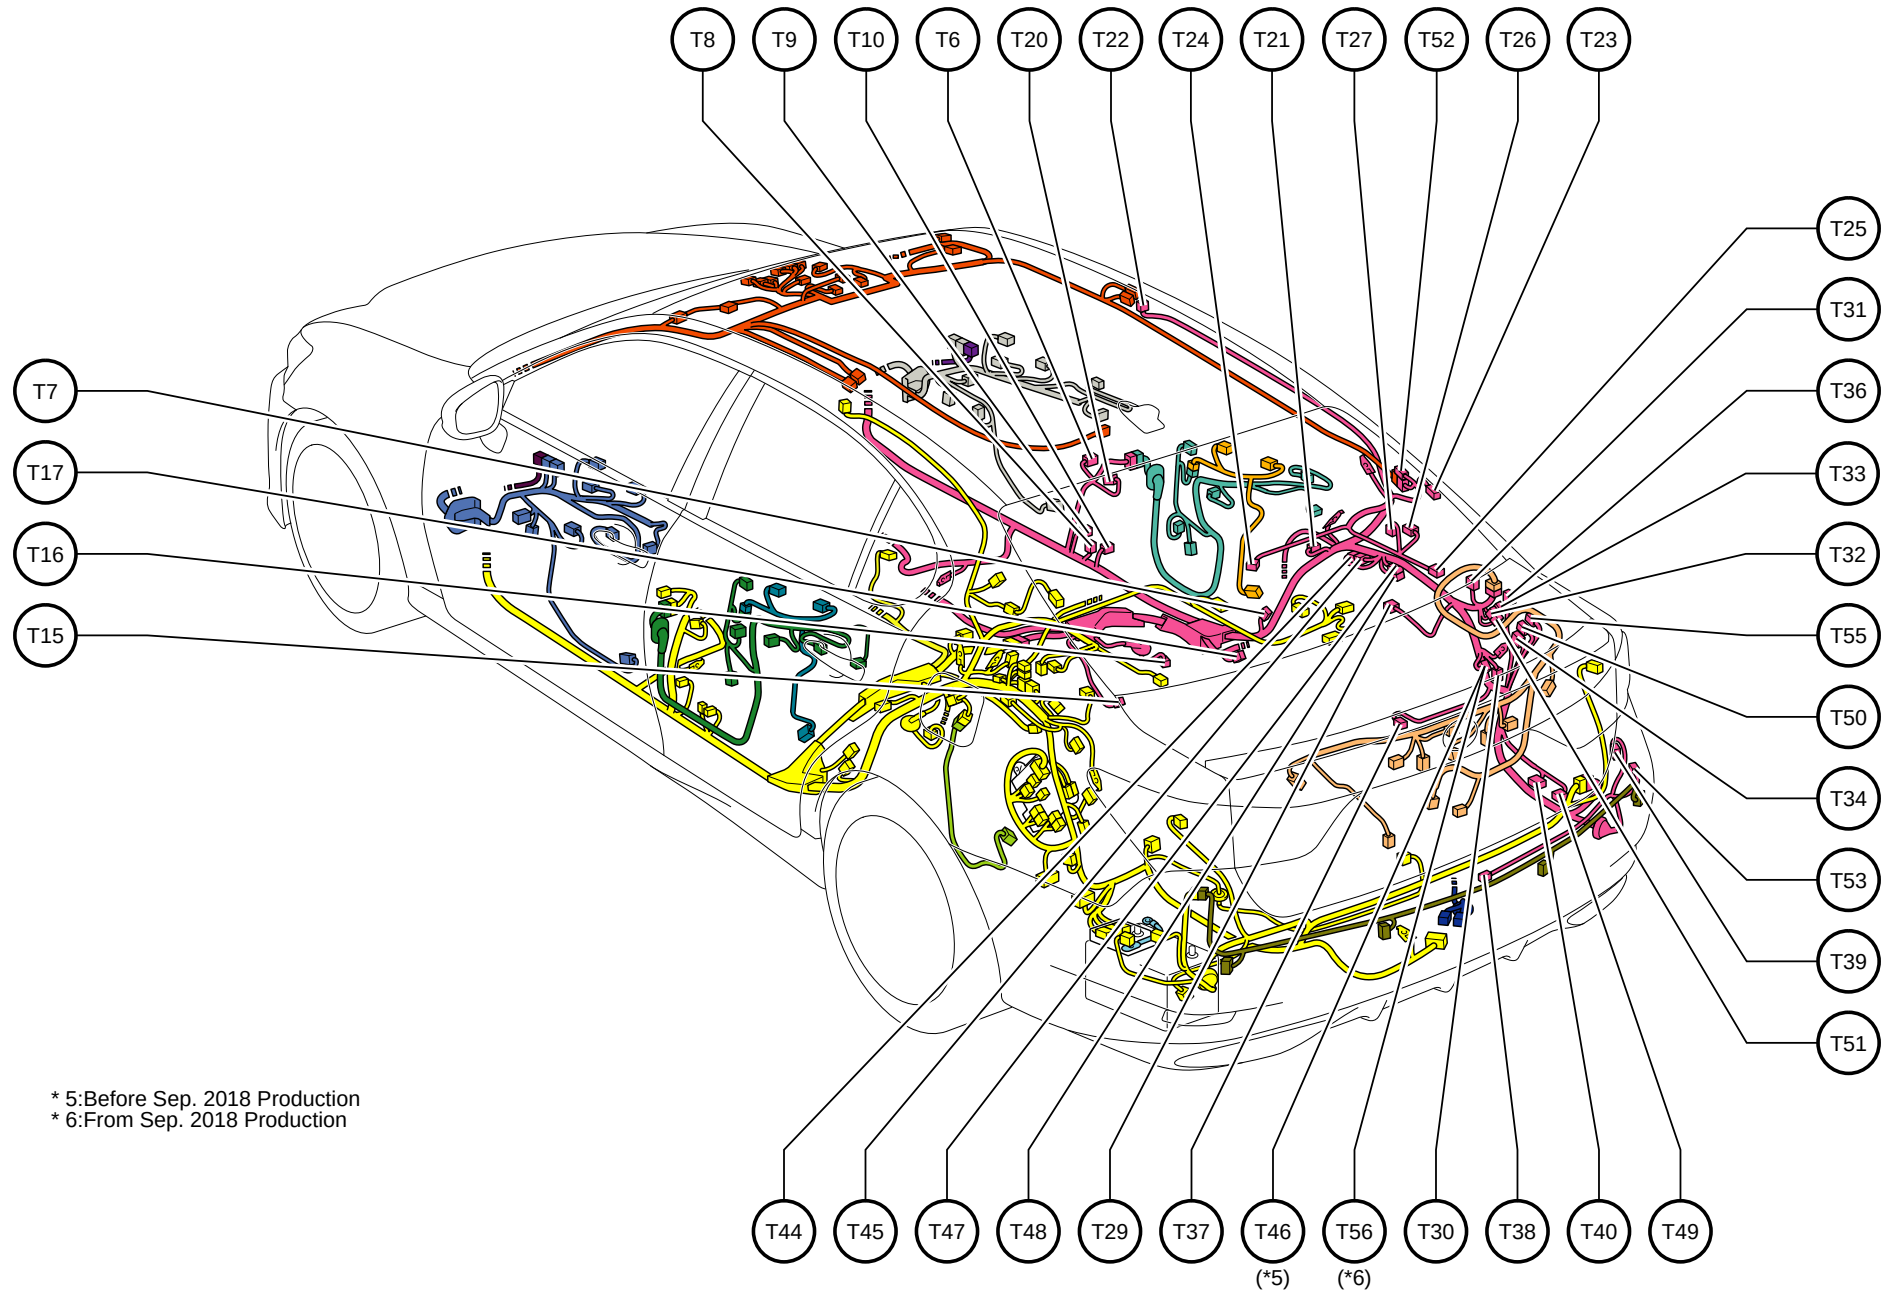

* 5:Before Sep. 2018 Production
 * 6:From Sep. 2018 Production

T	6	Front Door Courtesy Light Switch Assembly RH
T	7	Rear Airbag Sensor RH
T	8	Front Seat Outer Belt Assembly RH
T	9	Front Seat Outer Belt Assembly RH
T	10	Front Seat Outer Belt Assembly RH
T	15	Rear Seat Inner Belt with Center Assembly RH
T	16	No. 2 Fuel Sender Gage Assembly
T	17	Rear Side Airbag Squib Circuit RH
T	20	Side Airbag Sensor Assembly RH
T	21	Rear Door Courtesy Light Switch Assembly RH
T	22	Curtain Shield Airbag Assembly RH
T	23	Rear Window Defogger (Back Window Glass)
T	24	Rear No. 3 Speaker Assembly
T	25	Rear Header Speaker Assembly RH
T	26	Rear Seat 3 Point Type Belt Assembly Outer RH
T	27	Rear Seat 3 Point Type Belt Assembly Outer RH
T	29	Rear Absorber Control Actuator RH
T	30	Rear Speed Sensor RH
T	31	Rear Acceleration Sensor RH
T	32	Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)
T	33	Door Control Receiver Assembly
T	34	No. 1 Night View ECU
T	36	Theft Warning Siren Assembly
T	37	No. 3 Indoor Electrical Key Antenna Assembly
T	38	Rear Electrical Key Antenna
T	39	Blind Spot Monitor Sensor RH
T	40	Stereo Component Amplifier Assembly
T	44	Junction Connector
T	45	Junction Connector
T	46	Junction Connector
T	47	Junction Terminal
T	48	Junction Terminal
T	49	Stereo Component Amplifier Assembly
T	50	No. 1 Night View ECU
T	51	Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)
T	52	Amplifier Antenna Assembly
T	53	Blind Spot Monitor Sensor RH
T	55	Vehicle Approaching Speaker Controller
T	56	Junction Connector

Position of Parts in Body <LHD>

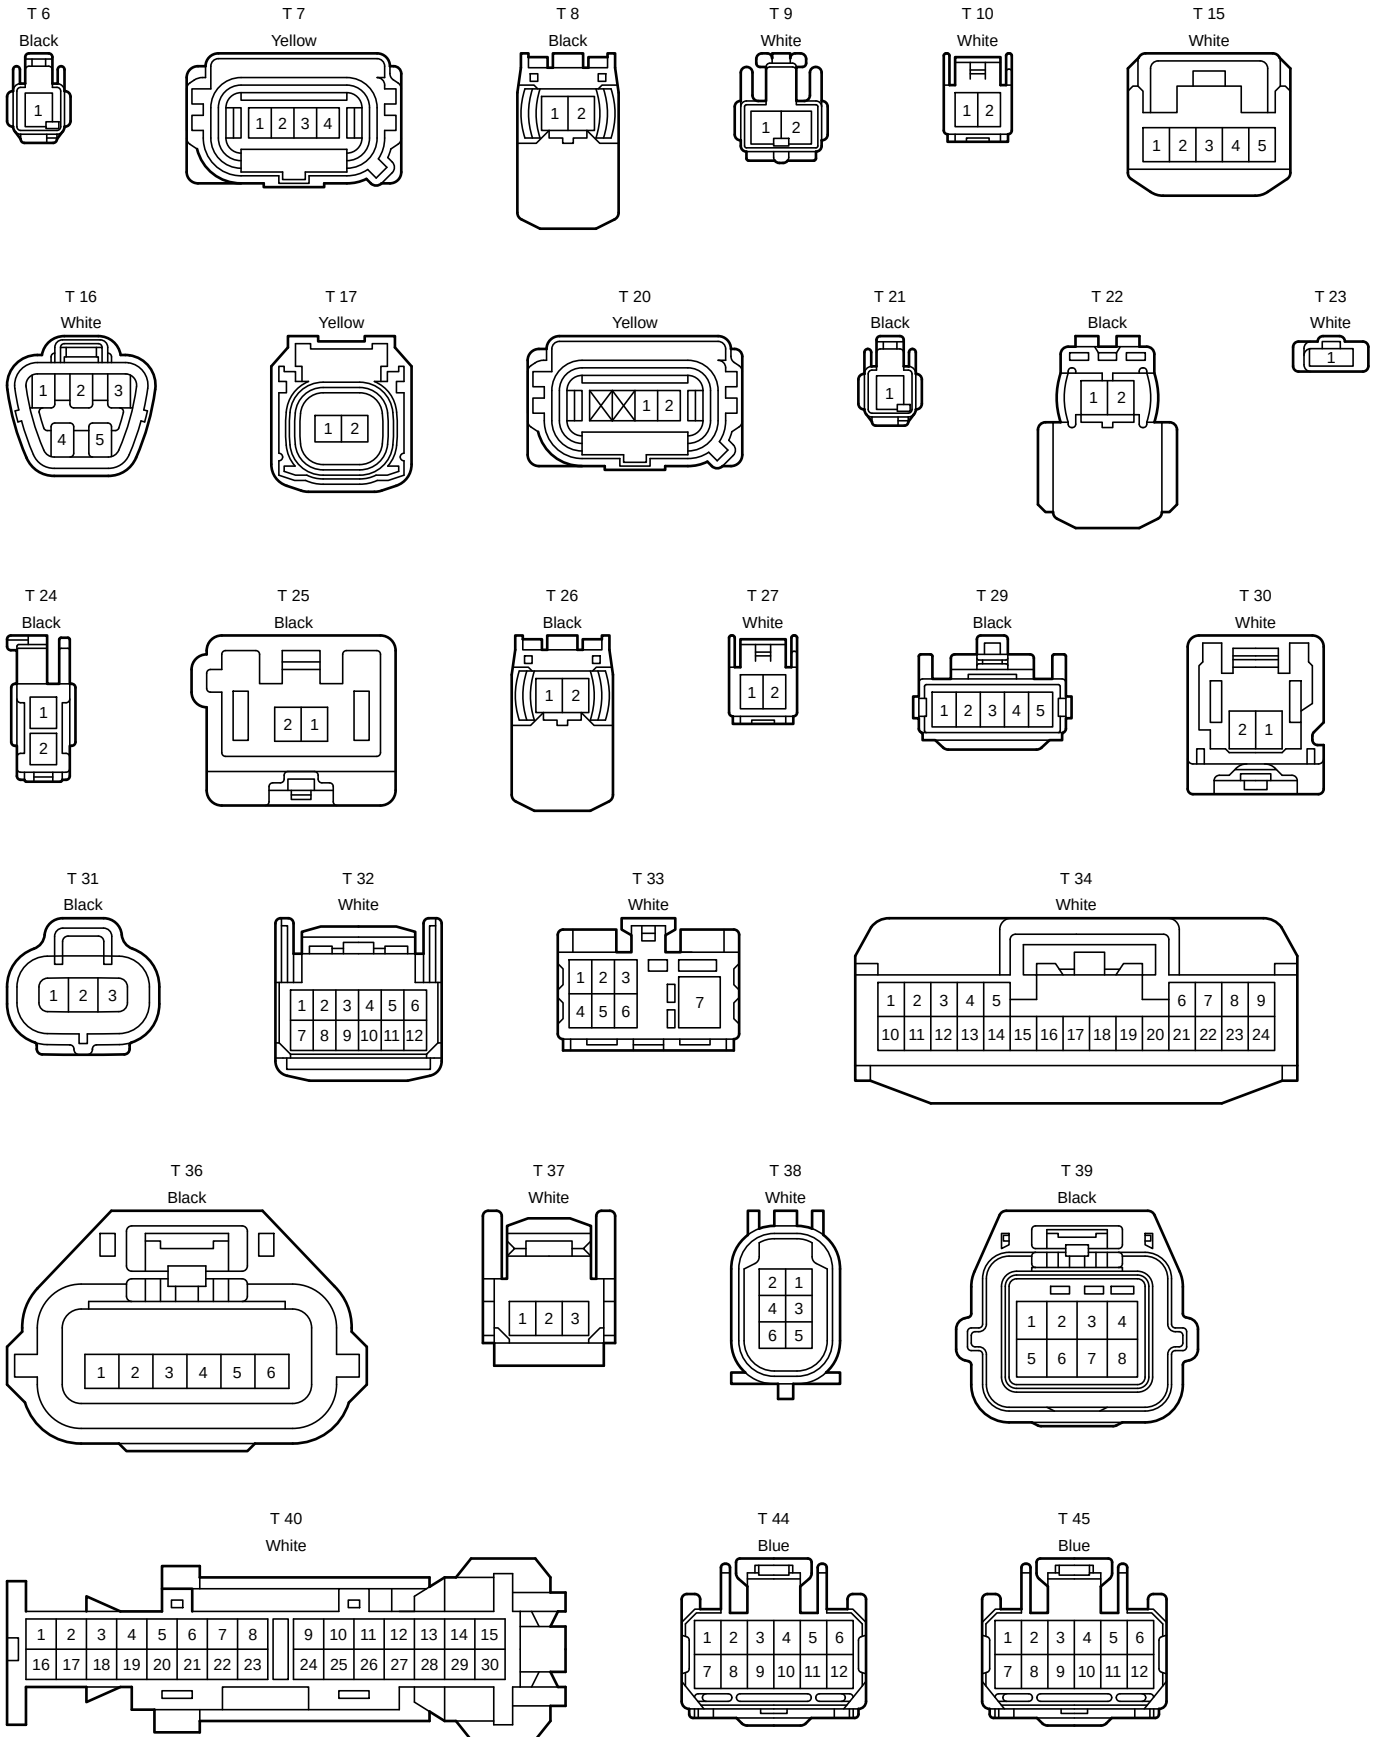

Position of Parts in Body <LHD>

