



Position of Parts in Instrument Panel <LHD>

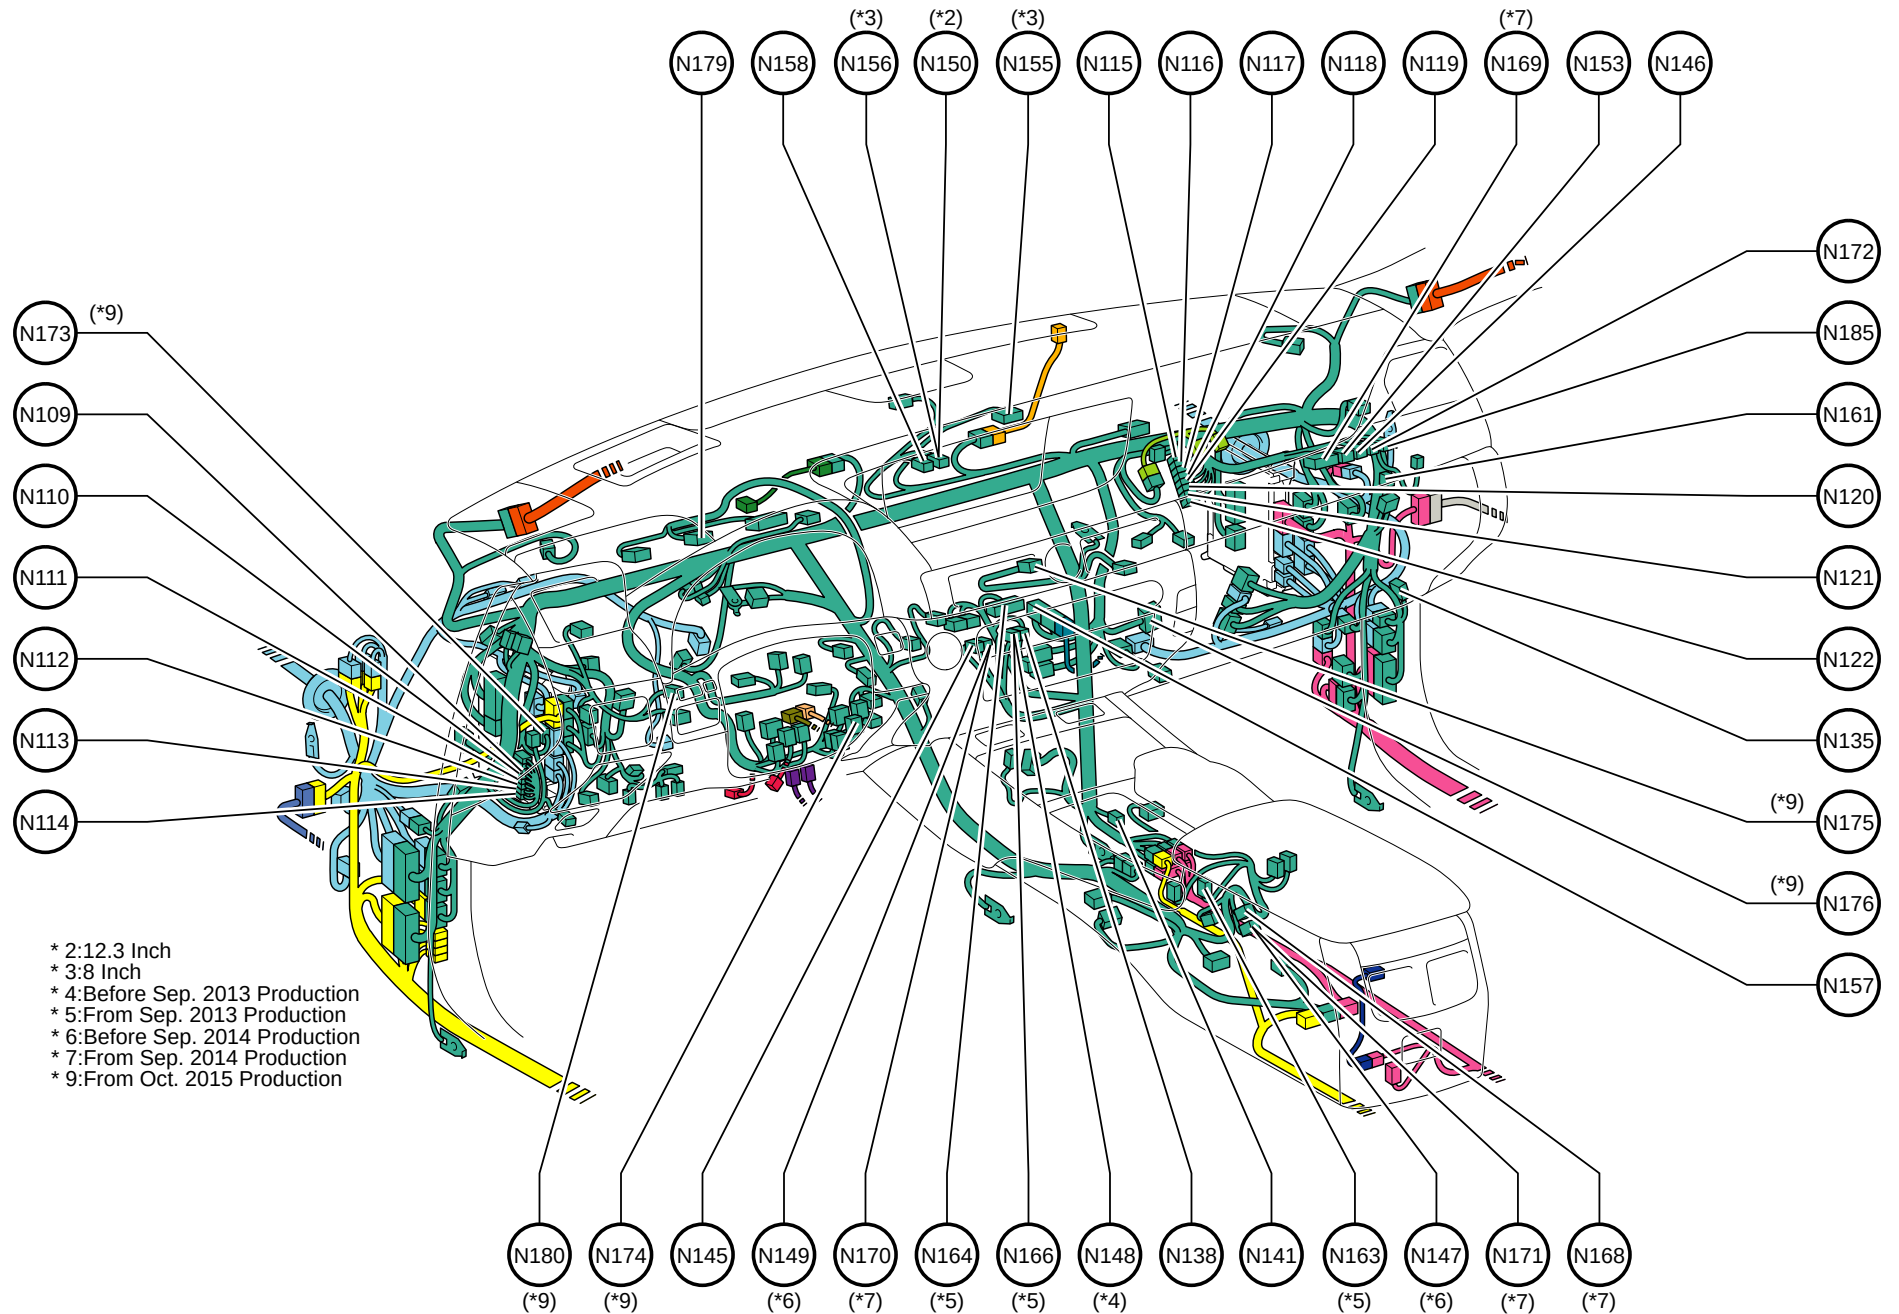

N 109	Junction Connector
N 110	Junction Connector
N 111	Junction Connector
N 112	Junction Connector
N 113	Junction Connector
N 114	Junction Connector
N 115	Junction Connector
N 116	Junction Connector
N 117	Junction Connector
N 118	Junction Connector
N 119	Junction Connector
N 120	Junction Connector
N 121	Junction Connector
N 122	Junction Connector
N 135	Junction Terminal
N 138	Multi-Media Module Receiver Assembly
N 141	No. 2 Antenna Cord Sub-Assembly
N 145	Multi-Media Module Receiver Assembly
N 146	Telematics Transceiver
N 147	Stereo Jack Adapter Assembly
N 148	Multi-Media Module Receiver Assembly
N 149	Multi-Media Module Receiver Assembly
N 150	Accessory Meter Assembly
N 153	Telematics Transceiver
N 155	Multi-Display
N 156	Multi-Display
N 157	A/C Amplifier Assembly
N 158	Accessory Meter Assembly
N 161	Junction Connector
N 163	Shift Position Indicator
N 164	Multi-Media Module Receiver Assembly
N 166	Multi-Media Module Receiver Assembly
N 168	Stereo Jack Adapter Assembly
N 169	Telematics Transceiver
N 170	Multi-Media Module Receiver Assembly
N 171	Stereo Jack Adapter Assembly
N 172	Telematics Transceiver
N 173	Driving Support ECU Assembly
N 174	Spiral Cable Sub-Assembly
N 175	Clock Assembly
N 176	Network Gateway ECU
N 179	Combination Meter Assembly
N 180	Trip Switch
N 185	Telematics Transceiver

Position of Parts in Instrument Panel <LHD>

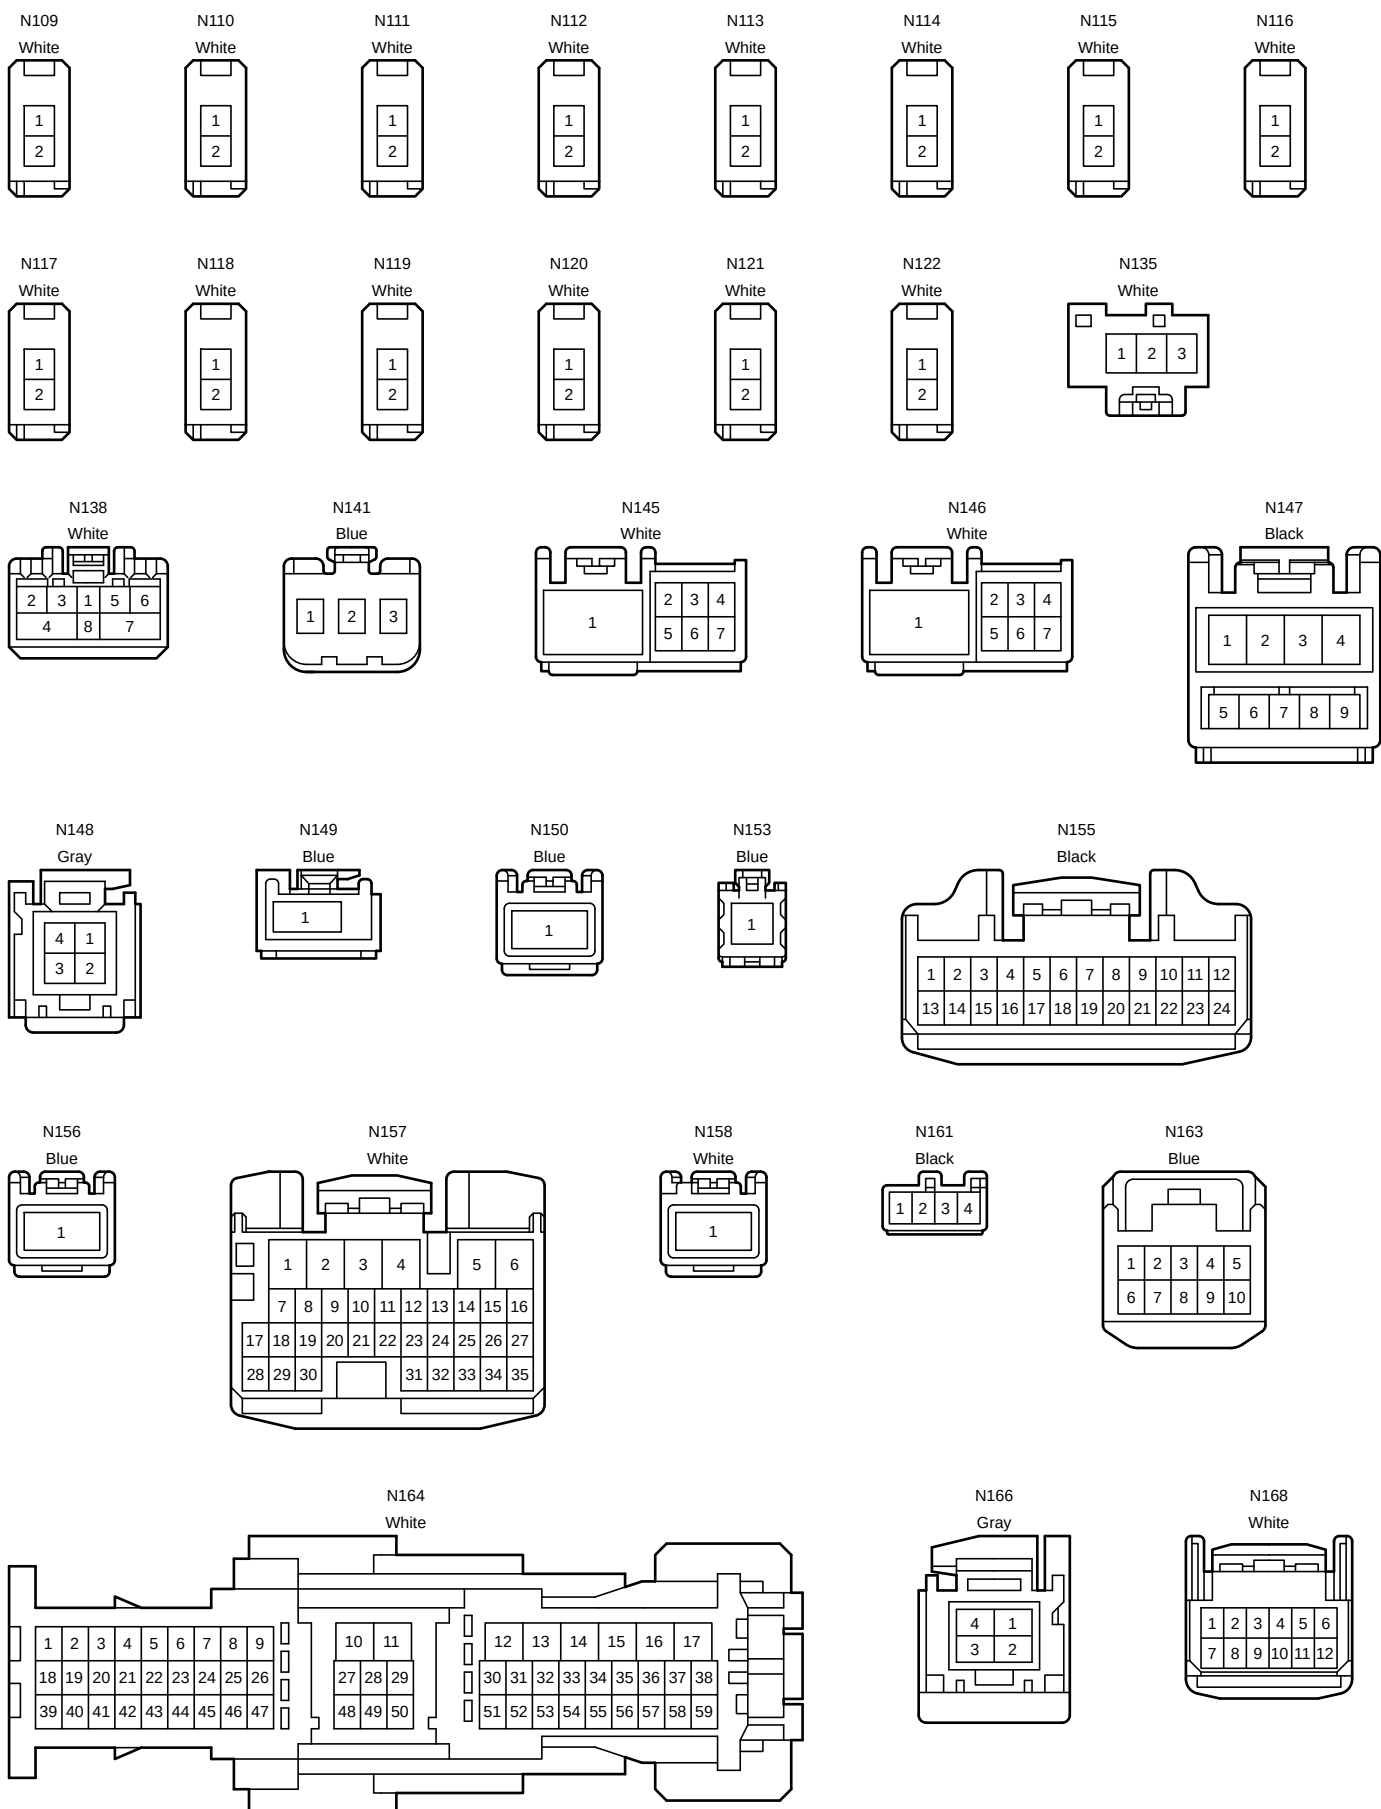

Position of Parts in Instrument Panel <LHD>

