



Position of Parts in Instrument Panel <RHD>

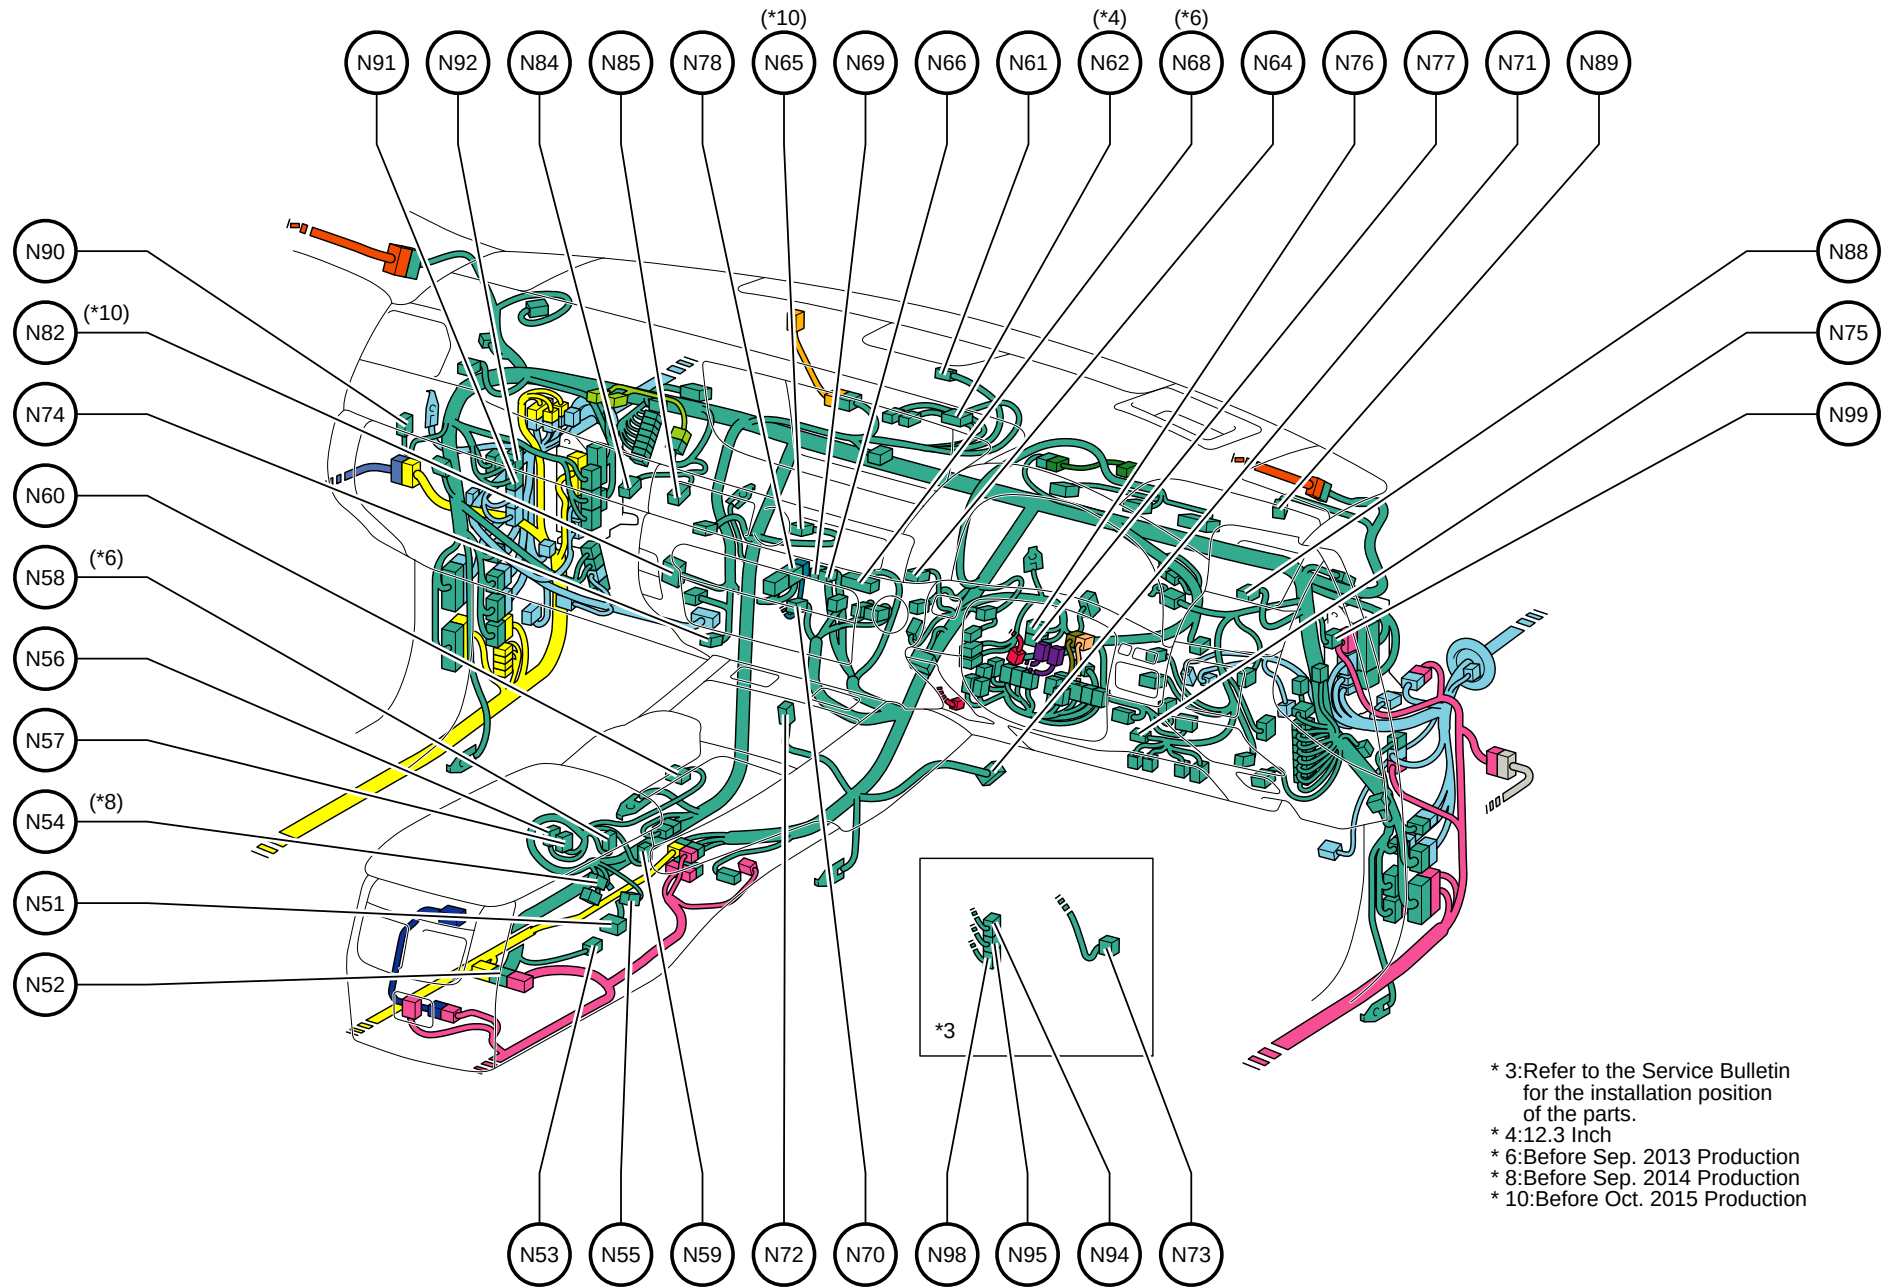

* 3: Refer to the Service Bulletin for the installation position of the parts.
 * 4: 12.3 Inch
 * 6: Before Sep. 2013 Production
 * 8: Before Sep. 2014 Production
 * 10: Before Oct. 2015 Production

N 51 Yaw Rate Sensor
N 52 Airbag Sensor Assembly
N 53 No. 1 Indoor Electrical Key Antenna Assembly
N 54 Stereo Jack Adapter Assembly
N 55 Power Outlet Socket Assembly
N 56 Rear Sunshade Switch Assembly
N 57 Back Sonar or Clearance Sonar Switch Assembly
N 58 Shift Position Indicator
N 59 Combination Switch Assembly
N 60 Remote Operation Switch
N 61 Front No. 3 Speaker Assembly
N 62 Accessory Meter Assembly
N 64 No. 2 Instrument Panel Register Assembly
N 65 Clock Assembly
N 66 Multi-Media Module Receiver Assembly
N 68 Multi-Media Module Receiver Assembly
N 69 Multi-Media Module Receiver Assembly
N 70 No. 1 Ion Generator Sub-Assembly
N 71 Rear Oxygen Sensor (Bank 1 Sensor 2)
N 72 Refreshing Seat Switch
N 73 ID Code Box
N 74 Lower No. 2 Instrument Panel Airbag Assembly
N 75 Front Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
N 76 Quick Heater Assembly
N 77 Quick Heater Assembly
N 78 A/C Amplifier Assembly
N 82 Network Gateway ECU
N 84 Luggage Door Opening Cancel Switch Assembly
N 85 Glove Box Light (Interior Illumination Light Sub Assembly)
N 88 No. 1 Instrument Panel Register Assembly
N 89 Front No. 2 Speaker Assembly RH
N 90 Airbag Cut Off Switch Cylinder Sub-Assembly
N 91 Power Management Control ECU
N 92 Power Management Control ECU
N 94 Certification ECU
N 95 Certification ECU
N 98 Certification ECU
N 99 Tire Pressure Monitor Initiator Driver

Position of Parts in Instrument Panel <RHD>

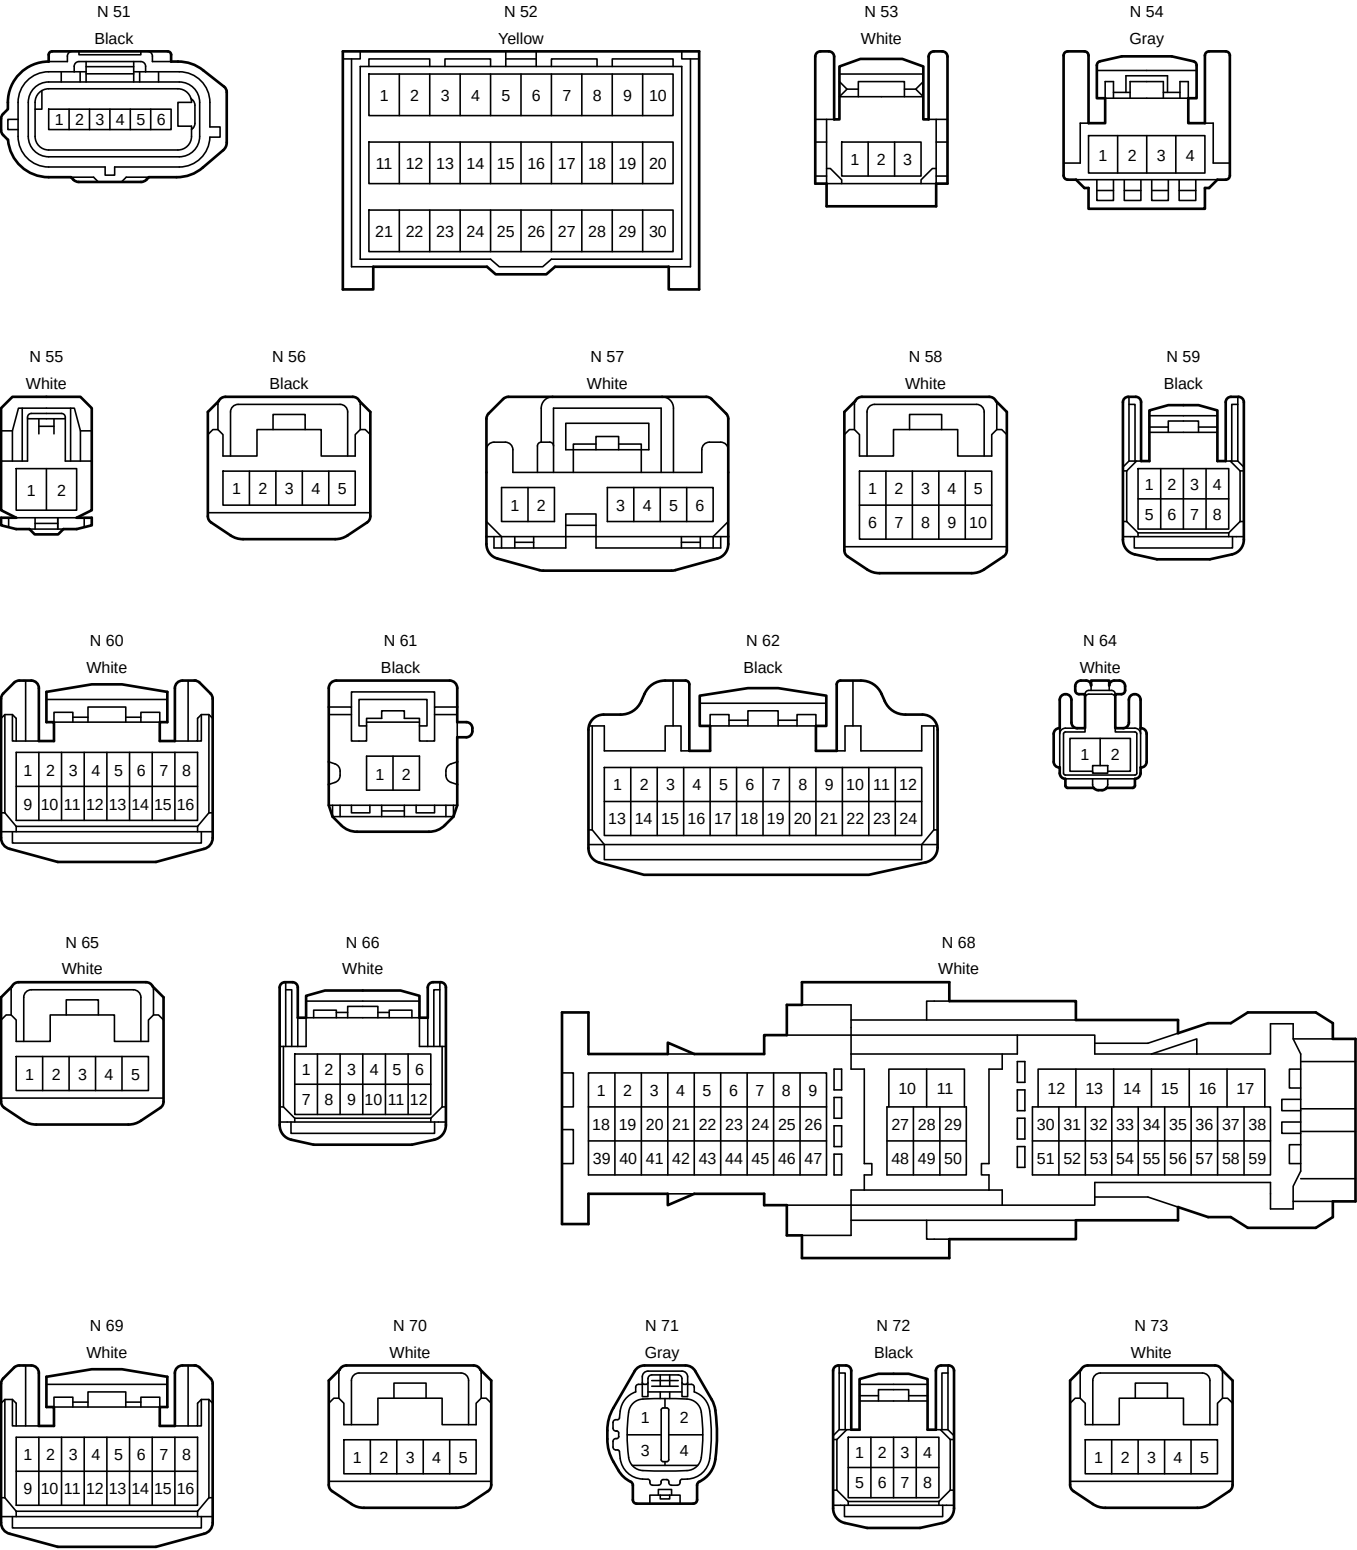

Position of Parts in Instrument Panel <RHD>

