

INSPECTION

INSPECT NEUTRAL START SWITCH CONTINUITY

([See page DI-192](#))