

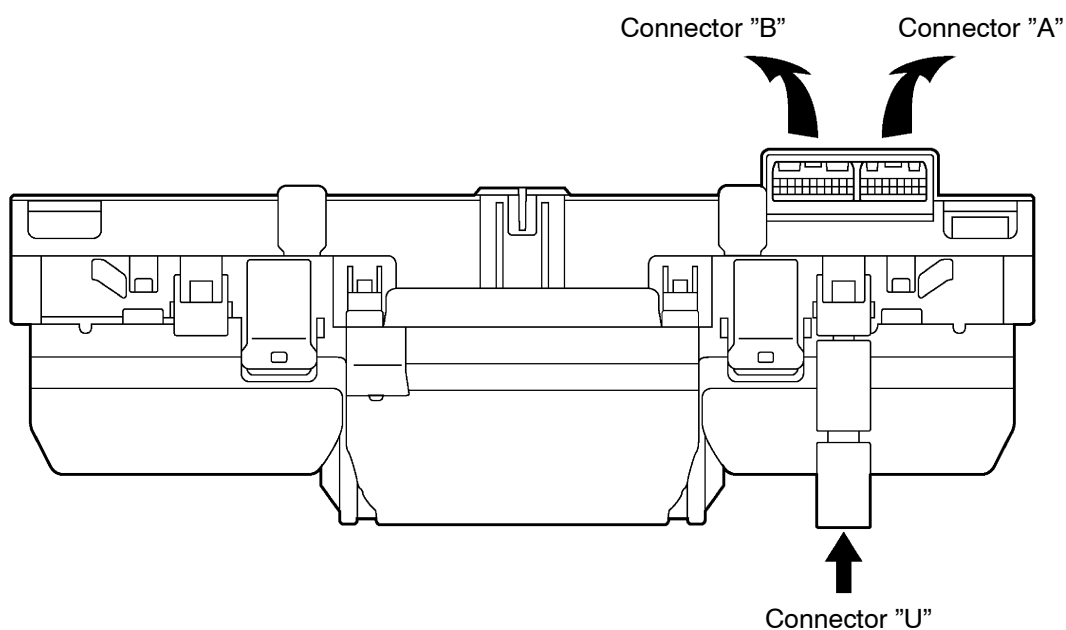


CIRCUIT


LHD Models

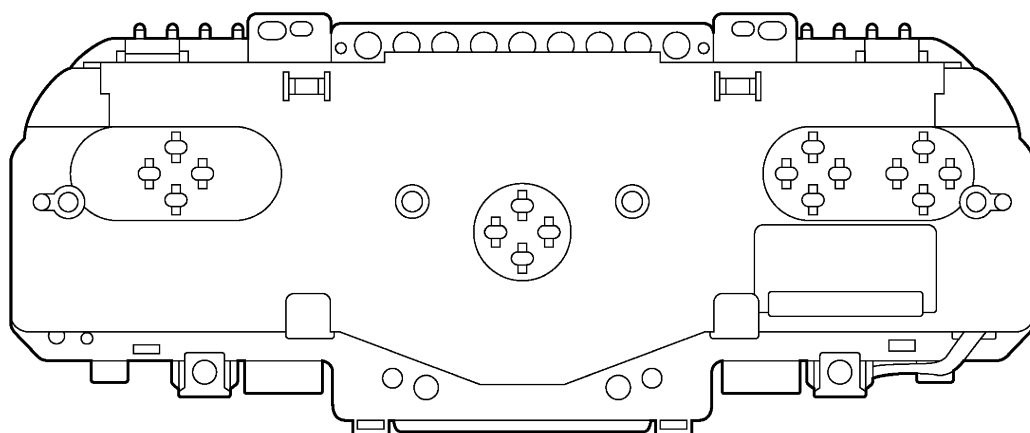

Combination Meter Wiring Circuit Connectors

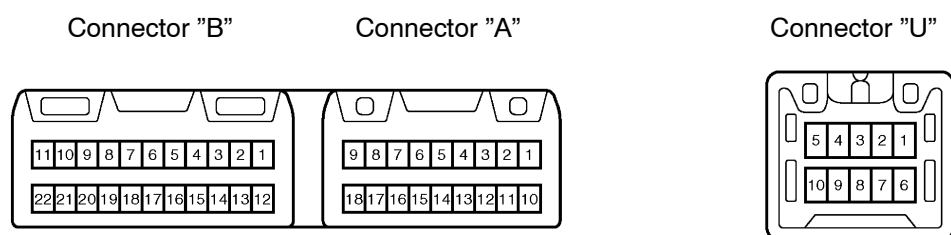


RHD Models

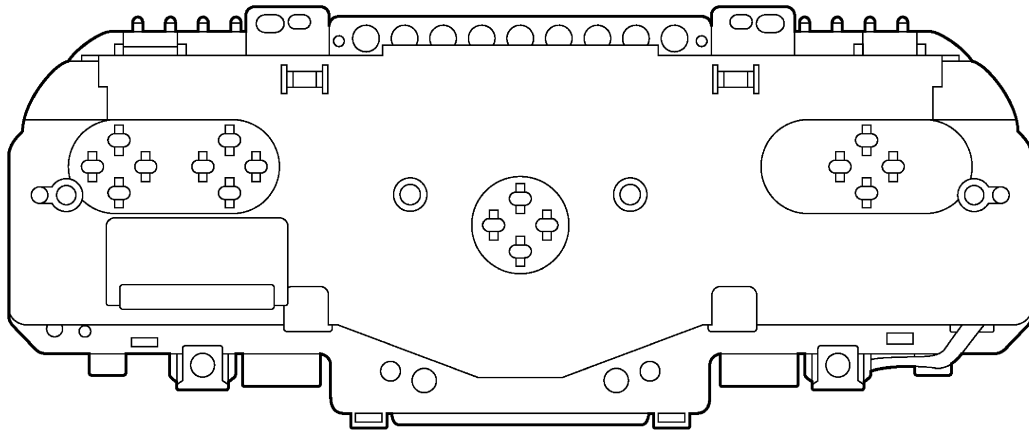

Connector "A"

Connector "B"

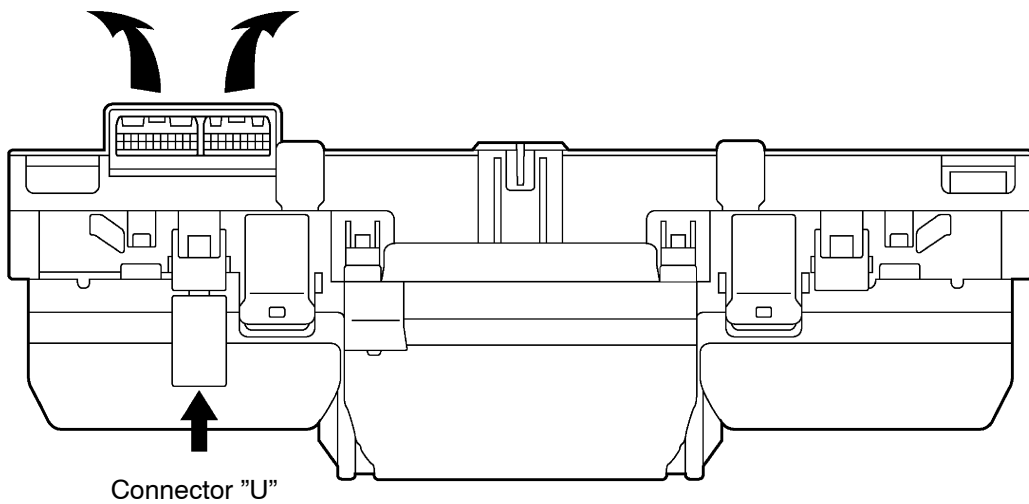



Connector "U"

Combination Meter Wiring Circuit Connectors

Connector "B"

Connector "A"


Connector "U"

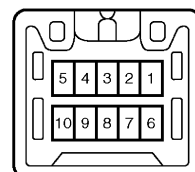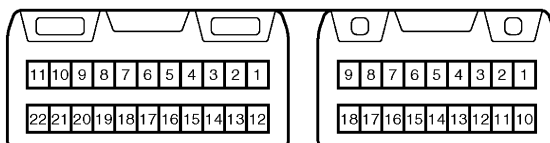

- Ⓢ:Speedometer
- Ⓣ:Tachometer
- ⓕ:Fuel Receiver Gauge
- Ⓦ:Water Temperature Receiver Gauge





• Combination Meter Wiring Circuit - 2

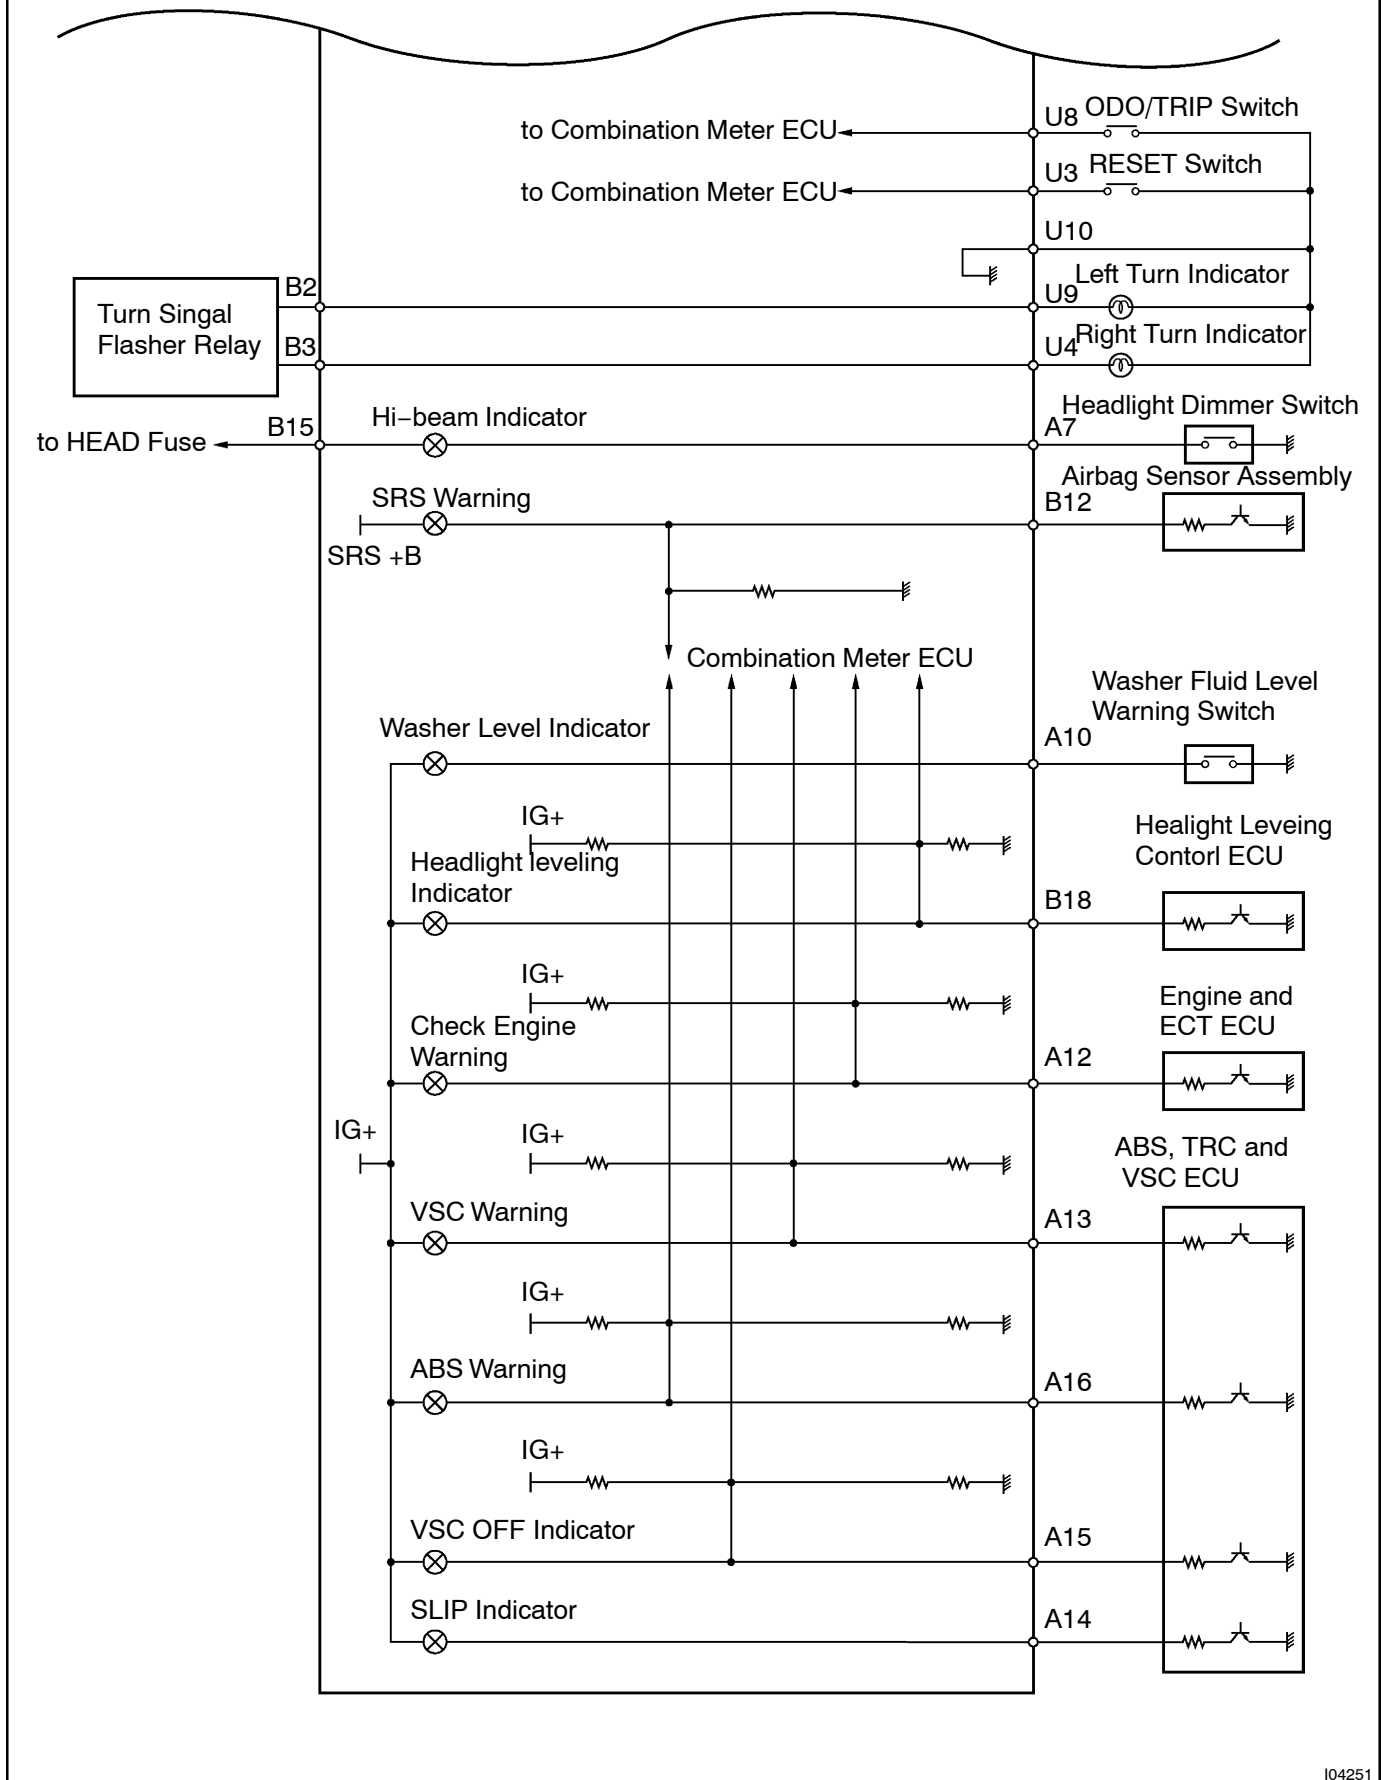

I04251


No.		Wiring connector side
A	1	Clock (Passenger seat belt warning light)
	2	Tilt and telescopic ECU
	3	Fuel main sender gauge
	4	Fuel sub sender gauge
	5	ABS, TRC and VSC ECU (Speed signal)
	6	Speed control unit
	7	Headlight dimmer switch
	8	Ground
	10	Window washer level warning switch
	11	Body control No.2 ECU
	12	Engine and ECT ECU
	13	ABS, TRC and VSC ECU (VSC warning light)
	14	ABS, TRC and VSC ECU (SLIP warning light)
	15	ABS, TRC and VSC ECU (VSC OFF warning light)
	16	ABS, TRC and VSC ECU (ABS warning light)
	17	ABS, TRC and VSC ECU (Brake warning light)
B	1	GAUGE fuse
	2	Turn signal flasher (Left turn side)
	3	Turn signal flasher (Right turn side)
	4	Light control rheostat (+B)
	5	Light control rheostat (Signal)
	6	Light control rheostat (Ground)
	9	Illuminations
	12	Airbag sensor assembly
	13	MPX+B fuse
	14	DOVE+B fuse
	15	HEAD-RH fuse
	16	Igniter
	18	Headlight beam leveling control ECU
	22	Ground
U	1	Telltale light assembly (IG+)
	3	Telltale light assembly (ODO/TRIP switch)
	4	Telltale light assembly (Right turn signal)
	8	Telltale light assembly (RESET switch)
	9	Telltale light assembly (Left turn signal)
	10	Ground

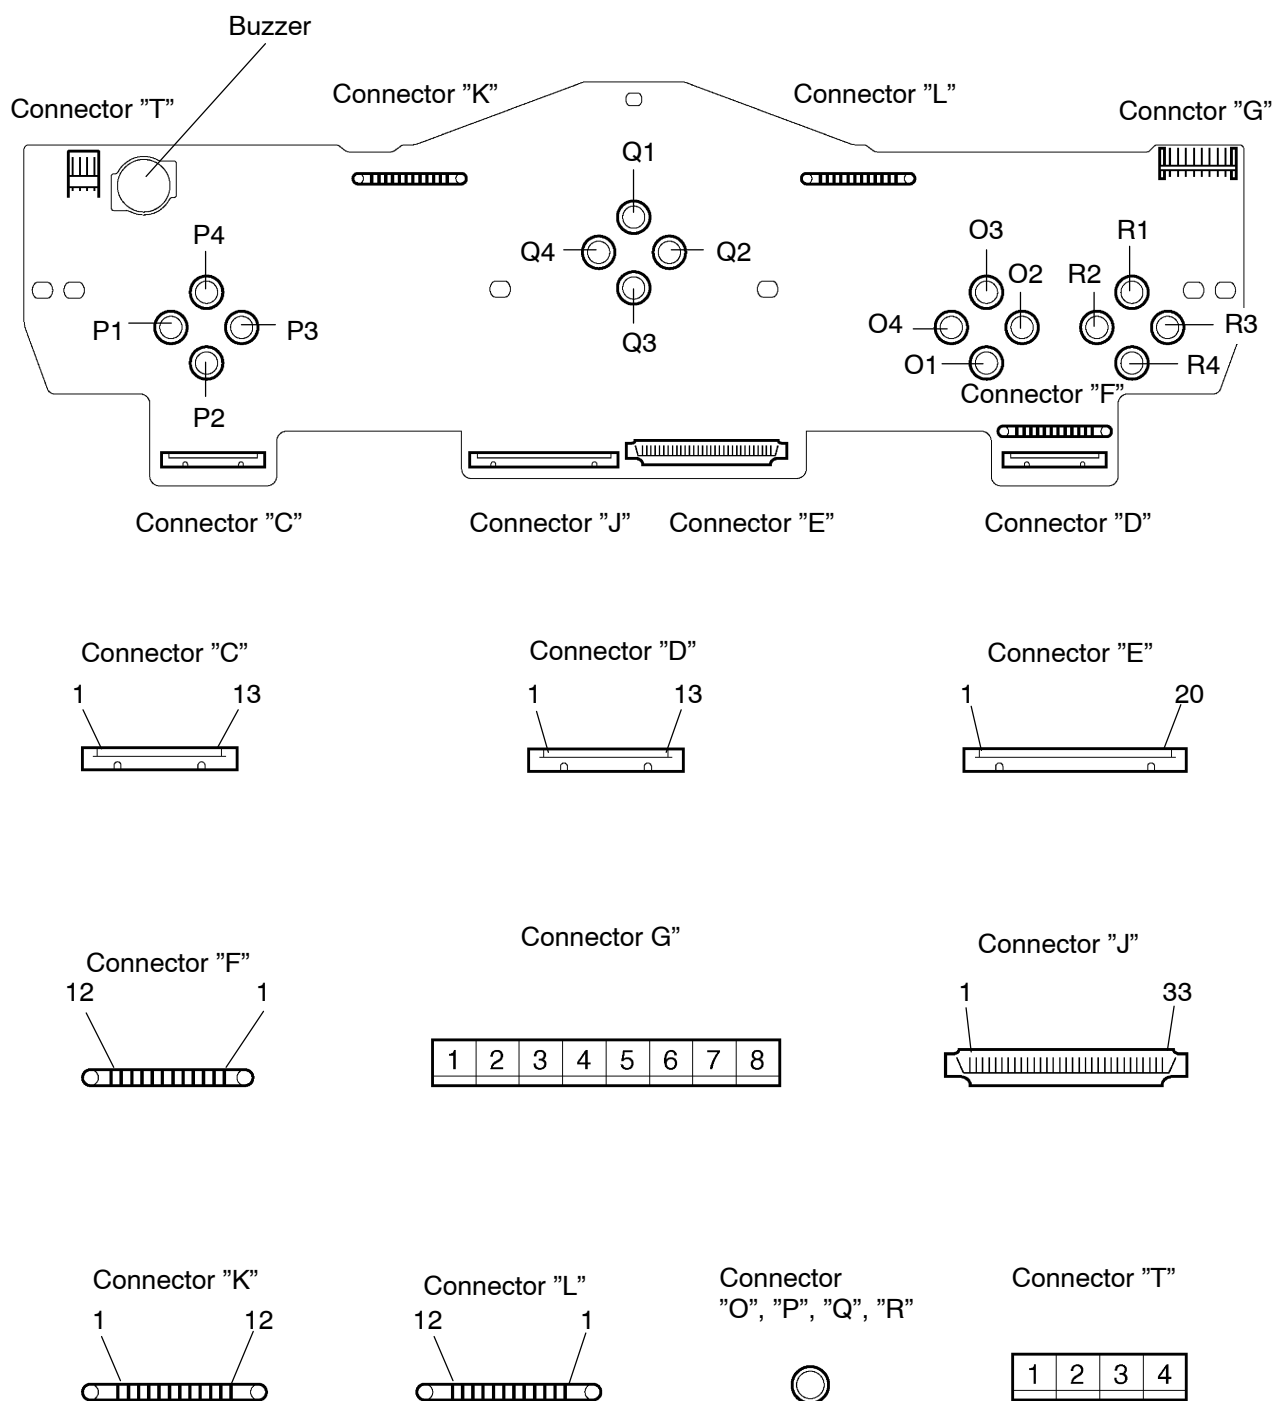
LHD Models:**• Combination Meter ECU Plate**

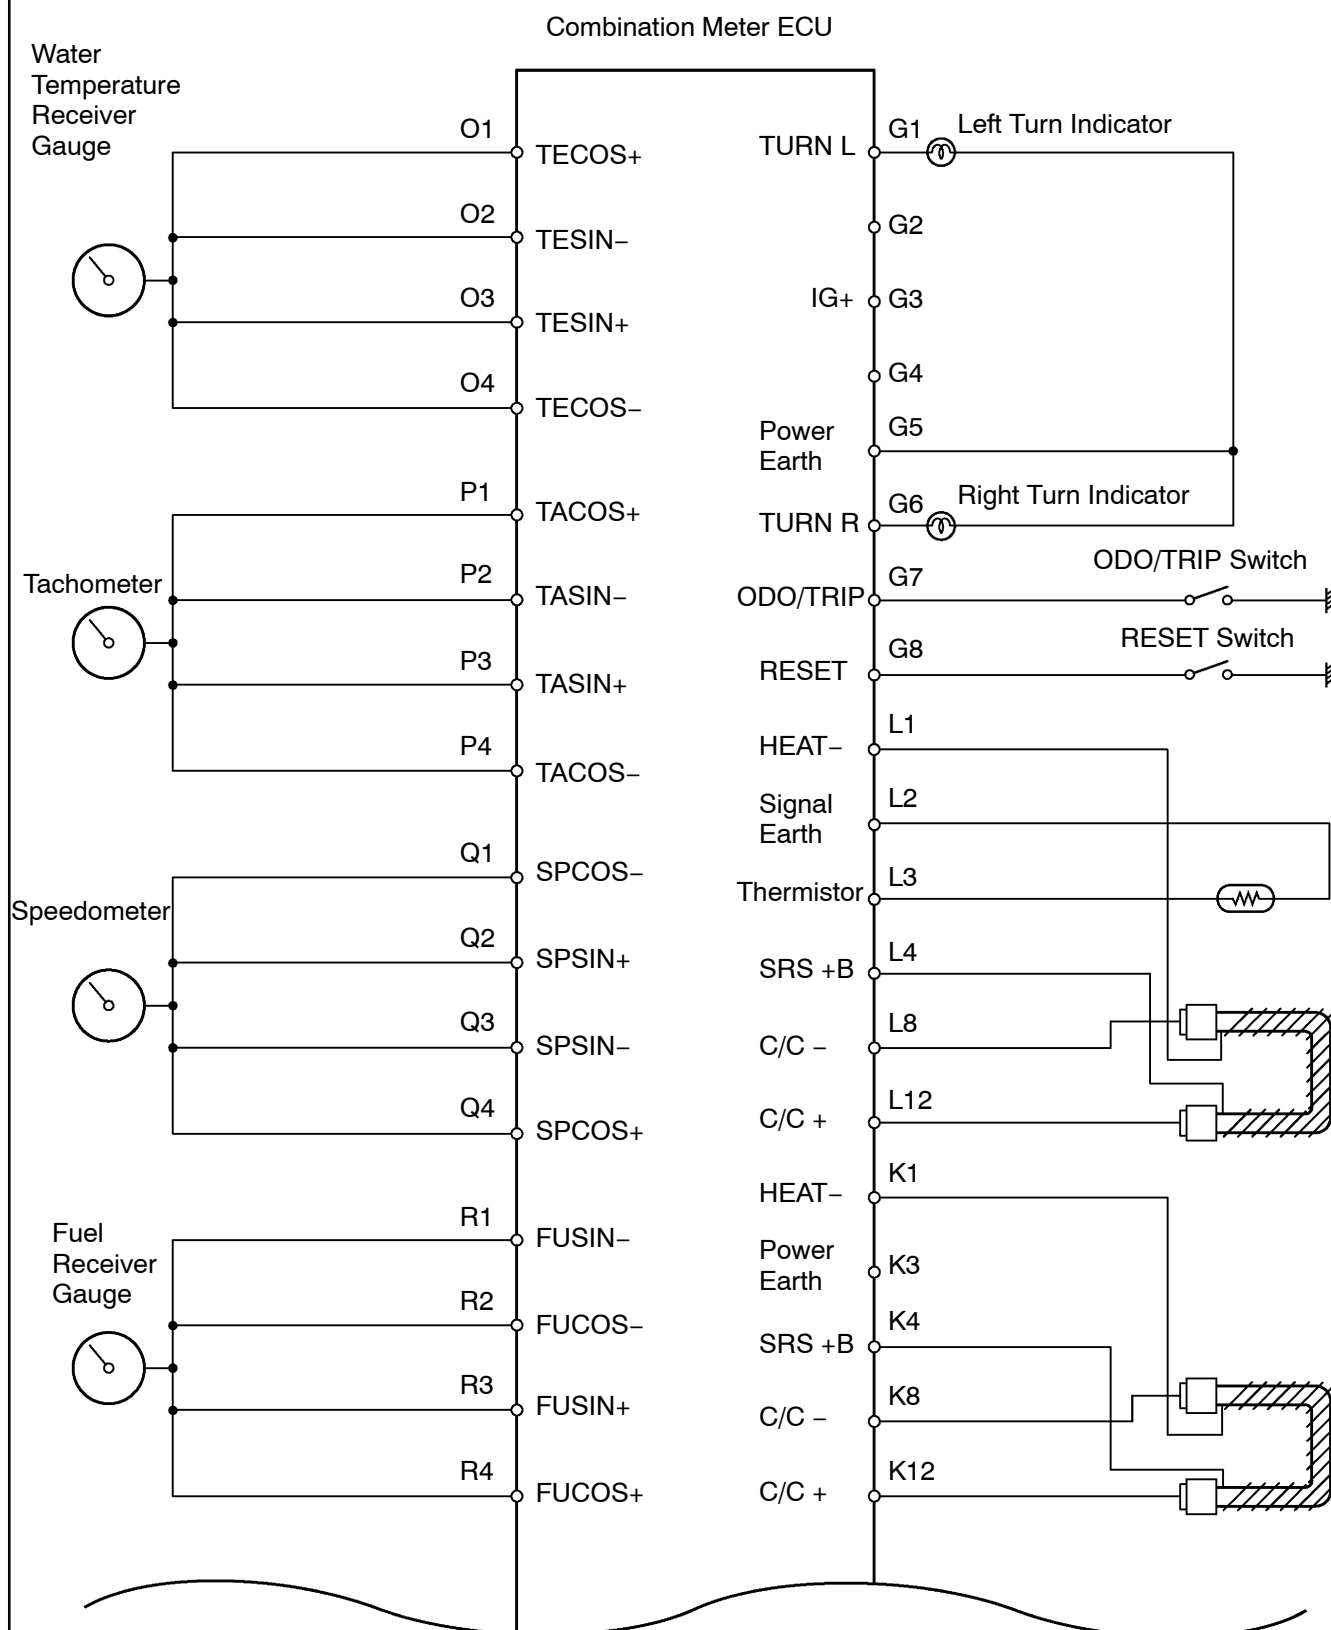
LHD Models:**• Meter Circuit Plate - 1**

LHD Models:**• Meter Circuit Plate - 2**

Combination Meter ECU

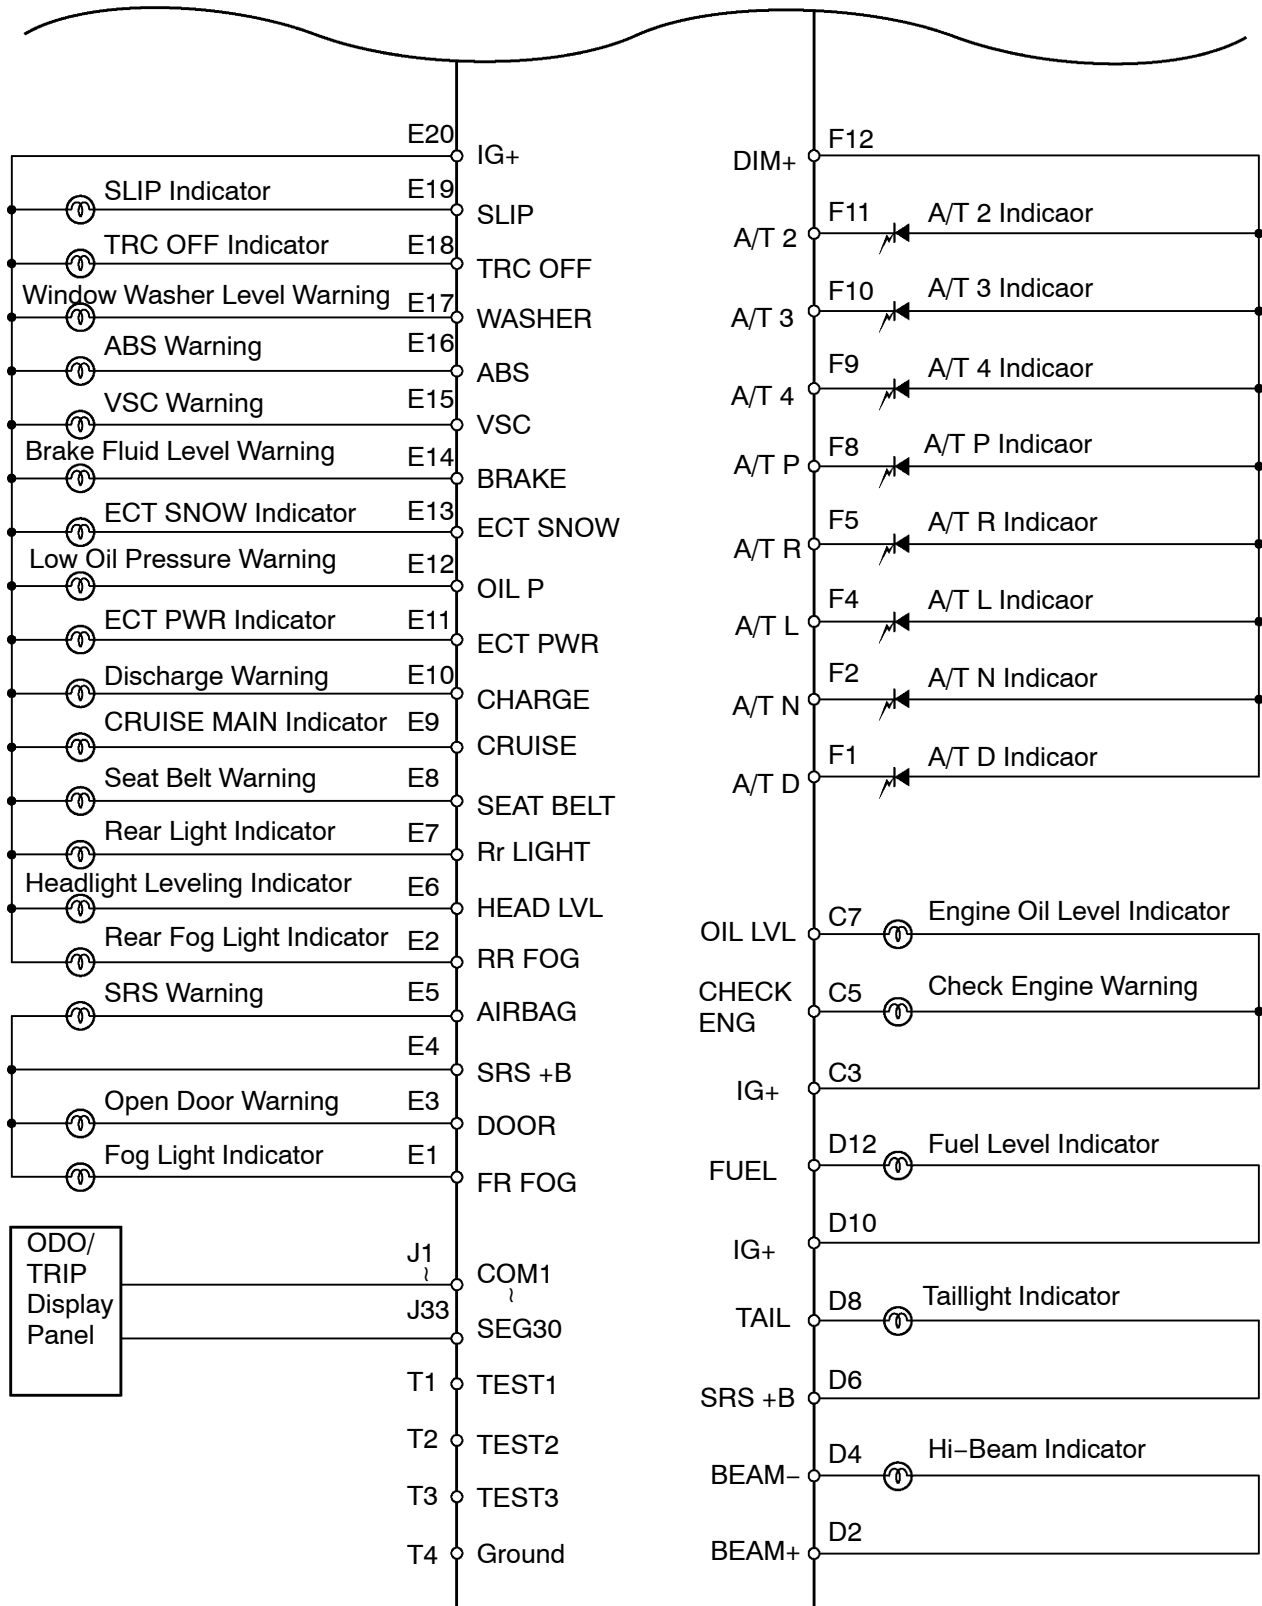

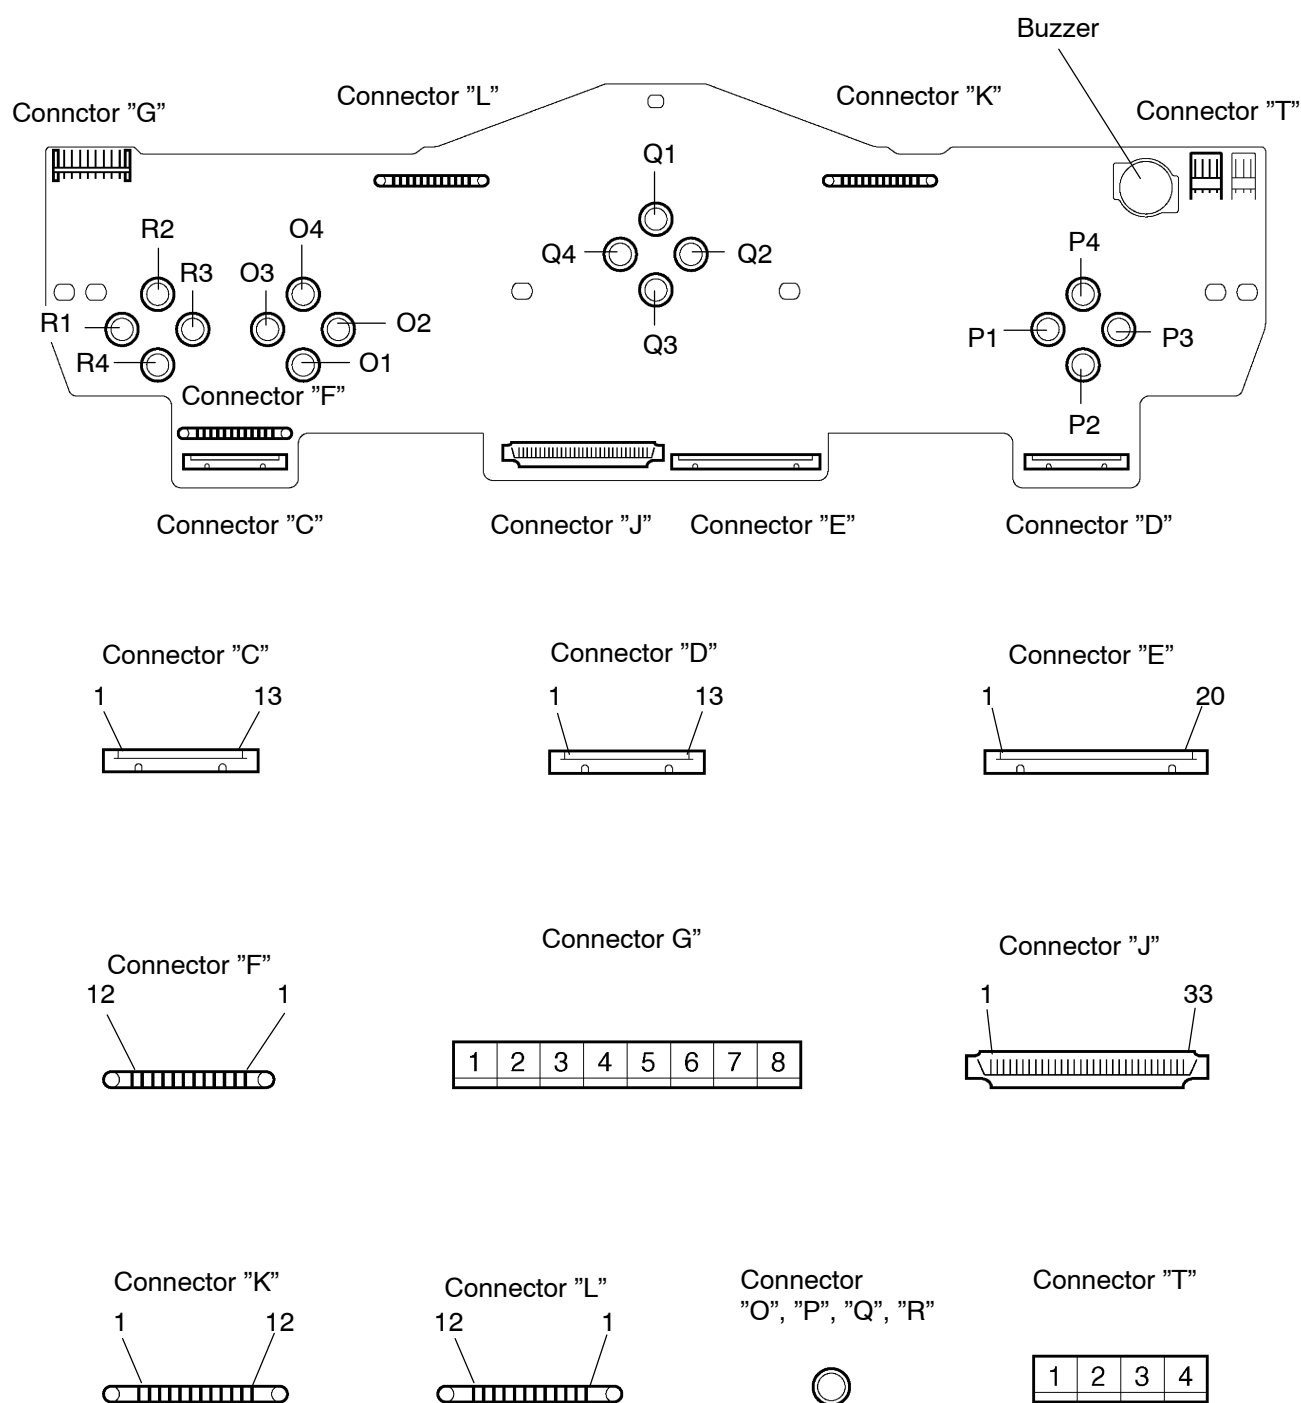RHD Models:**• Combination Meter ECU Plate**

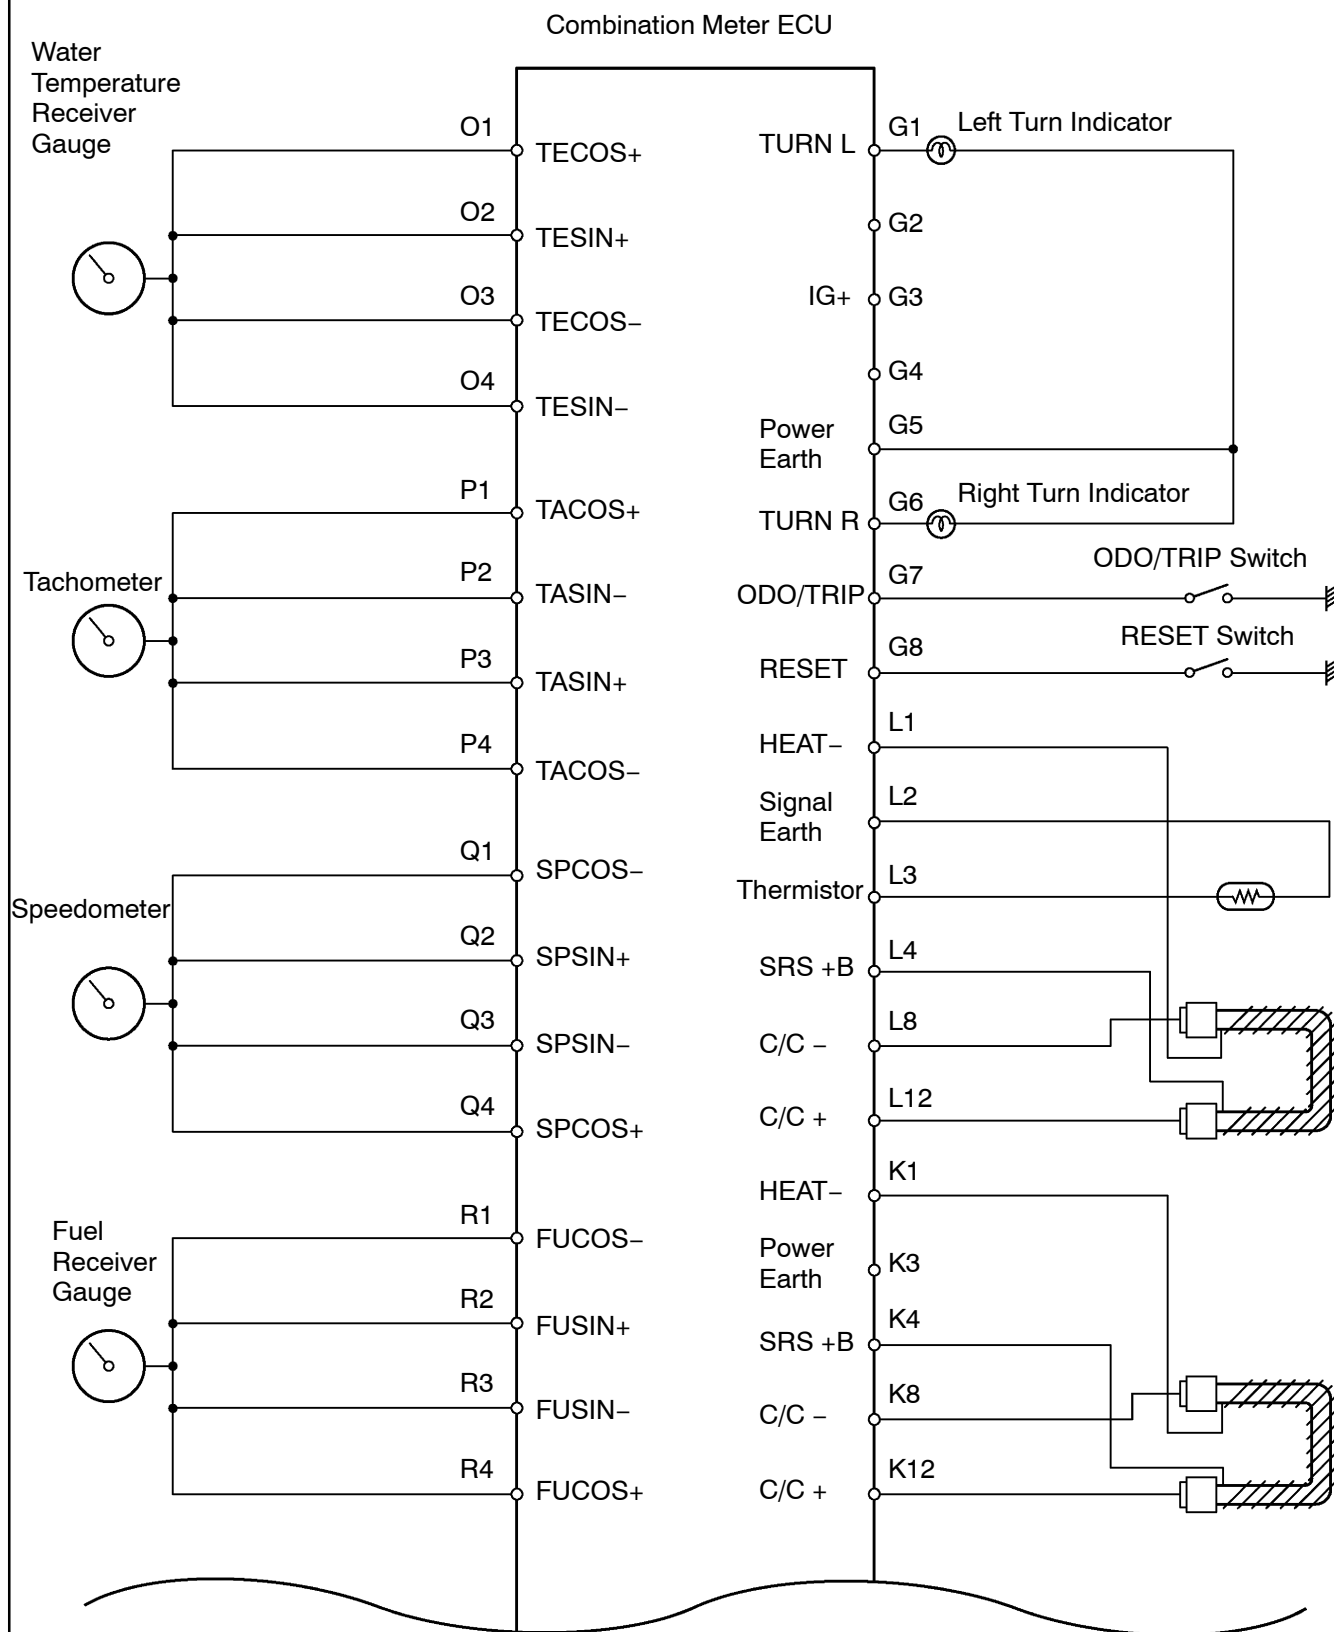RHD Models:**• Meter Circuit Plate - 1**

RHD Models:**• Meter Circuit Plate – 2**

Combination Meter ECU

