


Power Seat Motor

WIRING DIAGRAM

(): RHD models

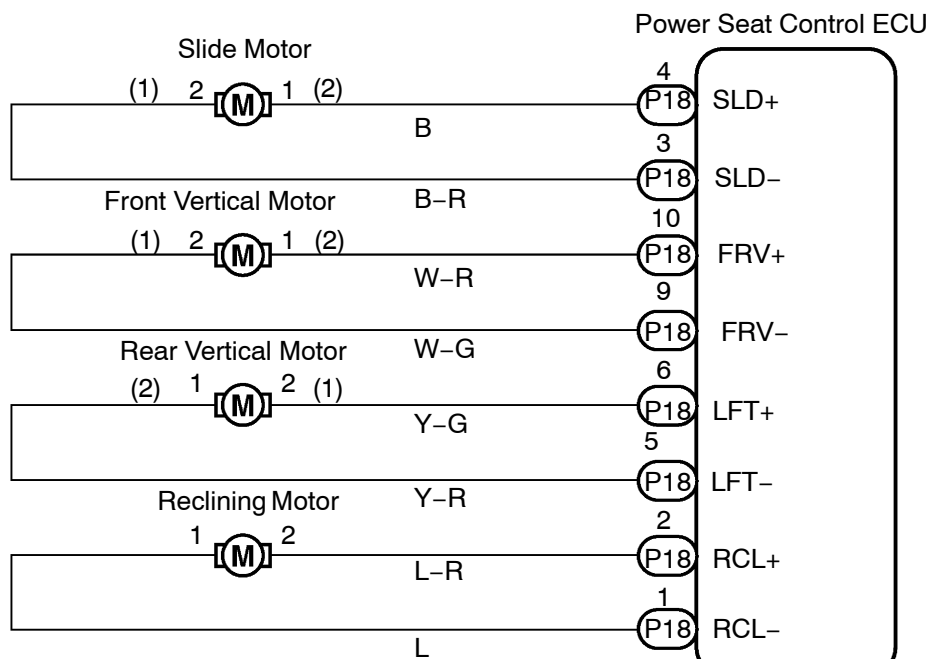

I04314

INSPECTION PROCEDURE

HINT:

If there is not the LEXUS hand-held tester, begin with STEP 2.

1 Perform active test.

PREPARATION:

- Connect the LEXUS hand-held tester to the DLC3.
- Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the LEXUS hand-held tester .

CHECK:

Check that "Power seat motor" operates as the LEXUS hand-held tester directs.

OK:

The seat operates normally.

OK

Proceed to next circuit inspection shown in problem symptoms table ([See page DI-522](#)).

NG

2 Check power seat motor. ([See page BE-181](#))

NG

Replace the motor.

OK

3 Check harness and connector between Power Seat Position ECU and motor ([See page IN-19](#)).

OK

Repair or replace harness or connector.

NG

Proceed to next circuit inspection shown in problem symptoms table ([See page DI-522](#)).