


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the body No.1 ECU.

WIRING DIAGRAM

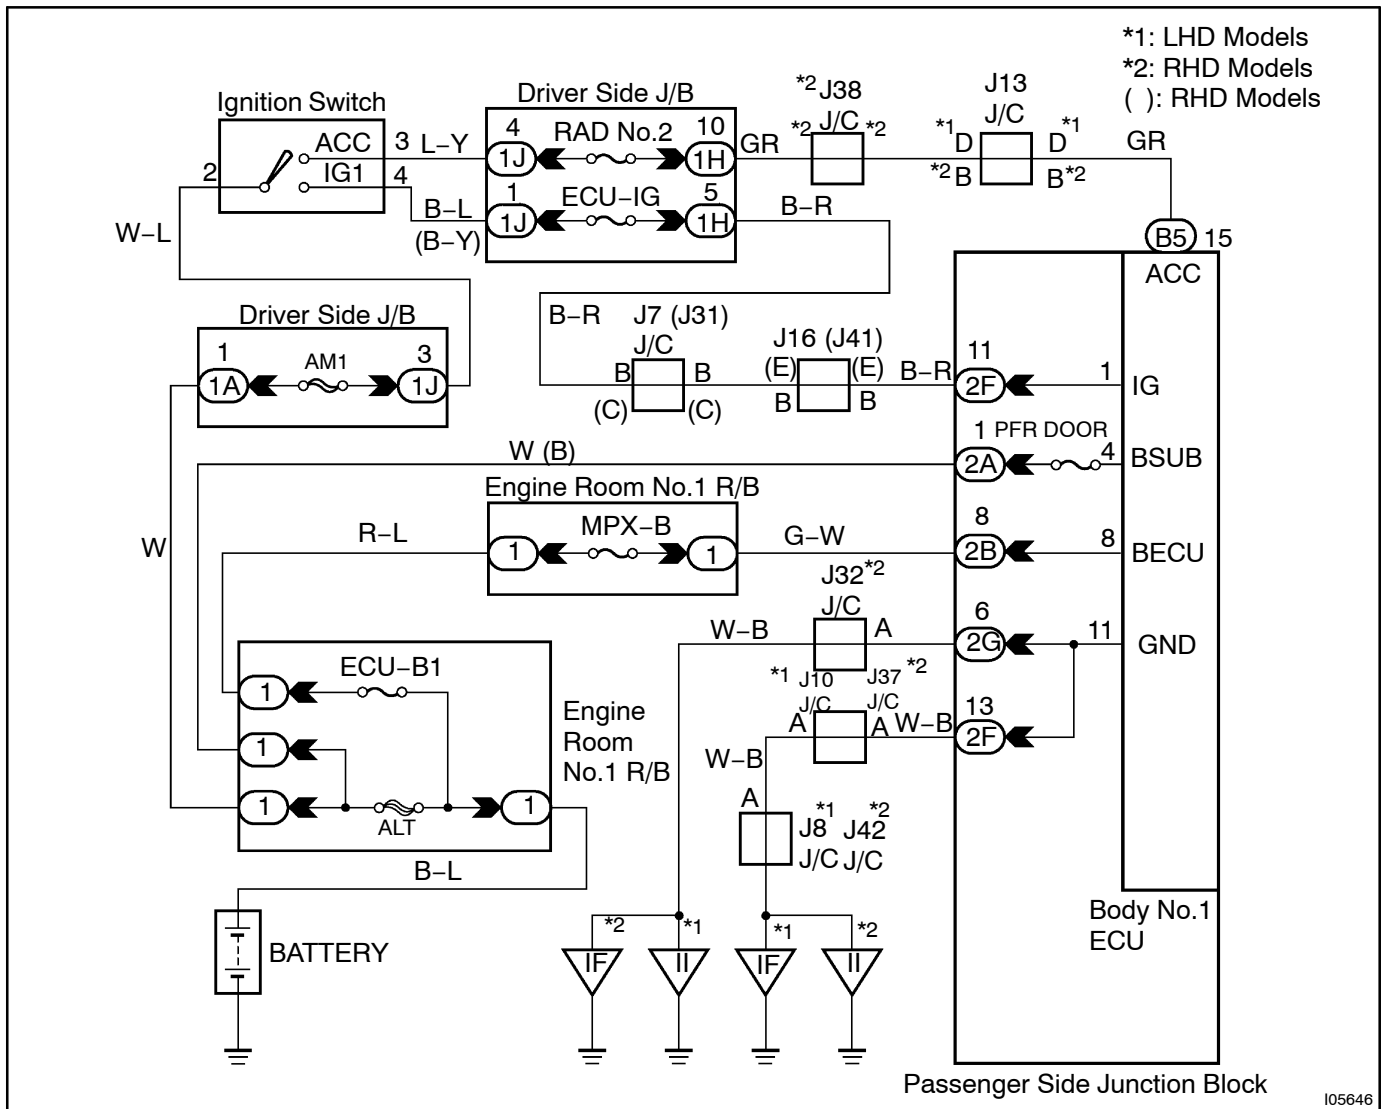

I05646

INSPECTION PROCEDURE

1	Check MPX-B, RADIO No.2, DOOR (FL) and GAUGE fuse.
----------	---

CHECK:

Check continuity of MPX-B, RADIO No. 2, DOOR (FL), and GAUGE fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminals BECU, BSUB, IG, and ACC and GND of body No.1 ECU connector.
----------	--

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the body No.1 ECU connector.

CHECK:

Measure voltage between terminals IG, ACC, and GND.

OK:**Voltage: 10 – 14V**

OK

Proceed to next circuit inspection shown on matrix chart. ([See page DI-616](#))

NG

3	Check wireharness and connector between body No.1 ECU and body ground.
----------	---

NG

Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between body No.1 ECU and battery.