


## Luggage courtesy switch circuit

### CIRCUIT DESCRIPTION

The luggage courtesy switch goes on when luggage compartment door is opened and goes off when luggage compartment door is closed.

### WIRING DIAGRAM

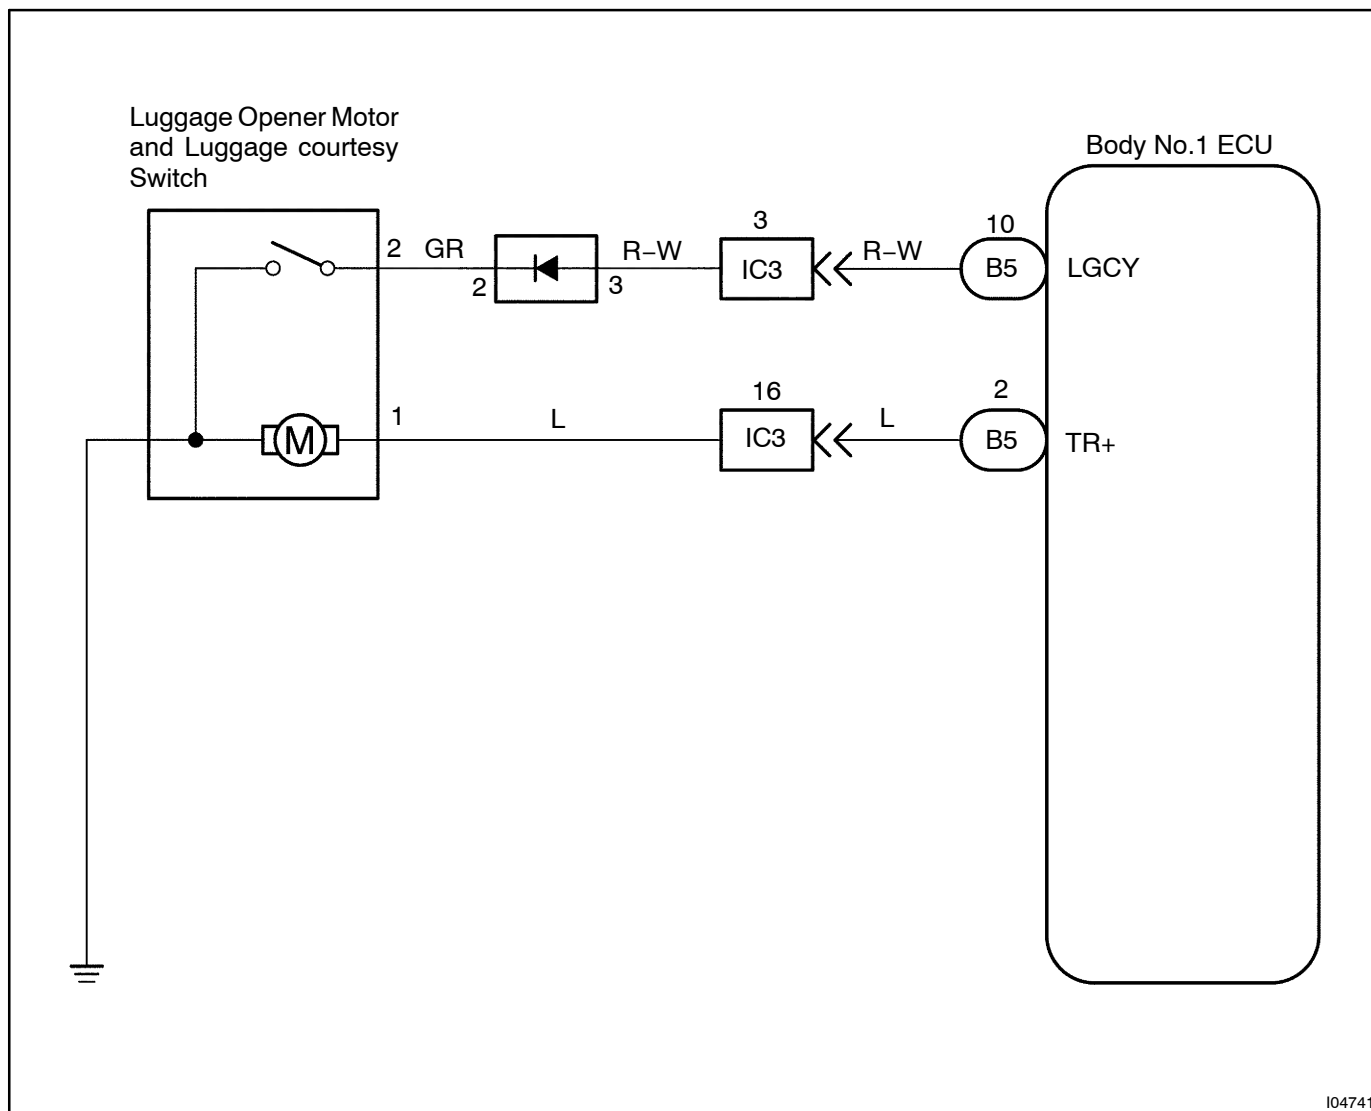

I04741

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

|   |                                                             |
|---|-------------------------------------------------------------|
| 1 | Check luggage courtesy switch using LEXUS hand-held tester. |
|---|-------------------------------------------------------------|

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

### CHECK:

Check the luggage courtesy switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-616](#)).

NG

|   |                                                                   |
|---|-------------------------------------------------------------------|
| 2 | Check luggage courtesy switch ( <a href="#">See page BE-66</a> ). |
|---|-------------------------------------------------------------------|

NG

Replace the luggage courtesy switch.

OK

|   |                                                                                    |
|---|------------------------------------------------------------------------------------|
| 3 | Check wireharness and connector between luggage courtesy switch and body No.1 ECU. |
|---|------------------------------------------------------------------------------------|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
([See page DI-628](#))