


Power window master switch circuit

CIRCUIT DESCRIPTION

Power window master switch circuit can be checked using DTC check. (See page DI-836)

WIRING DIAGRAM

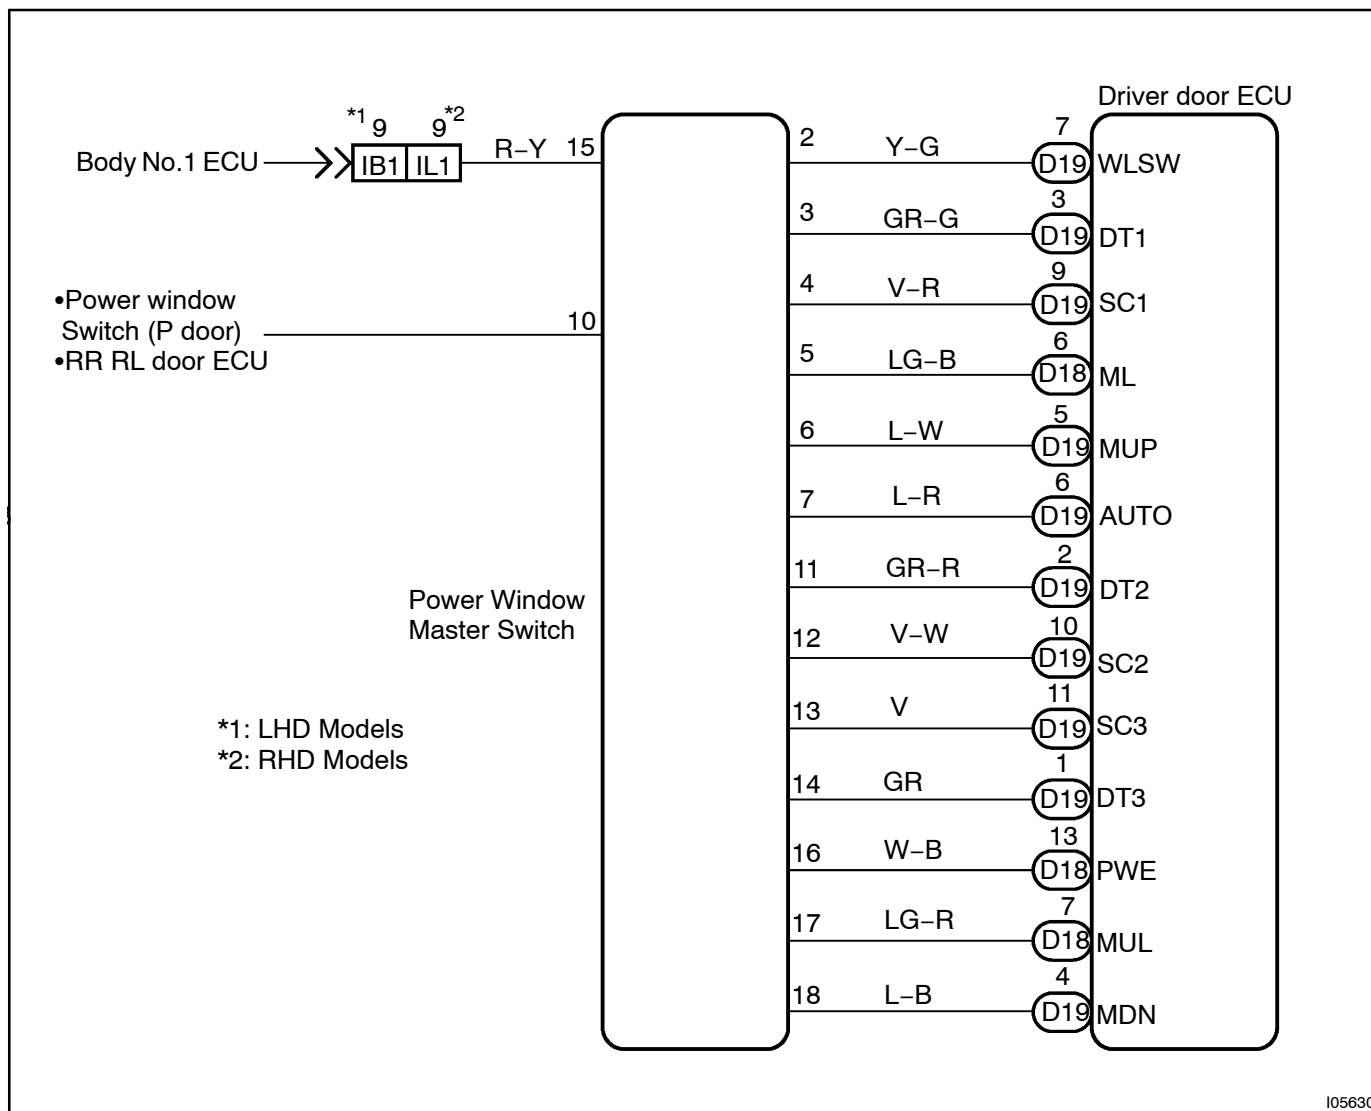

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check the power window master switch circuit using DTC check.
(See page DI-836) |
|---|--|

OK

Proceed to next circuit inspection shown on problem symptom table.
(See page DI-616, DI-706)

OK

- | | |
|---|---|
| 2 | Check the power window master switch. (See page BE-134) |
|---|---|

NG

Replace the power window master switch.

OK

- | | |
|---|---|
| 3 | Check wireharness and connector between power window master switch and driver door ECU. |
|---|---|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table.
(See page DI-616, DI-706)