


## Door lock control switch circuit

### CIRCUIT DESCRIPTION

Door lock control switch circuit can be checked using DTC check. (Refer to [DI-836](#))

### WIRING DIAGRAM

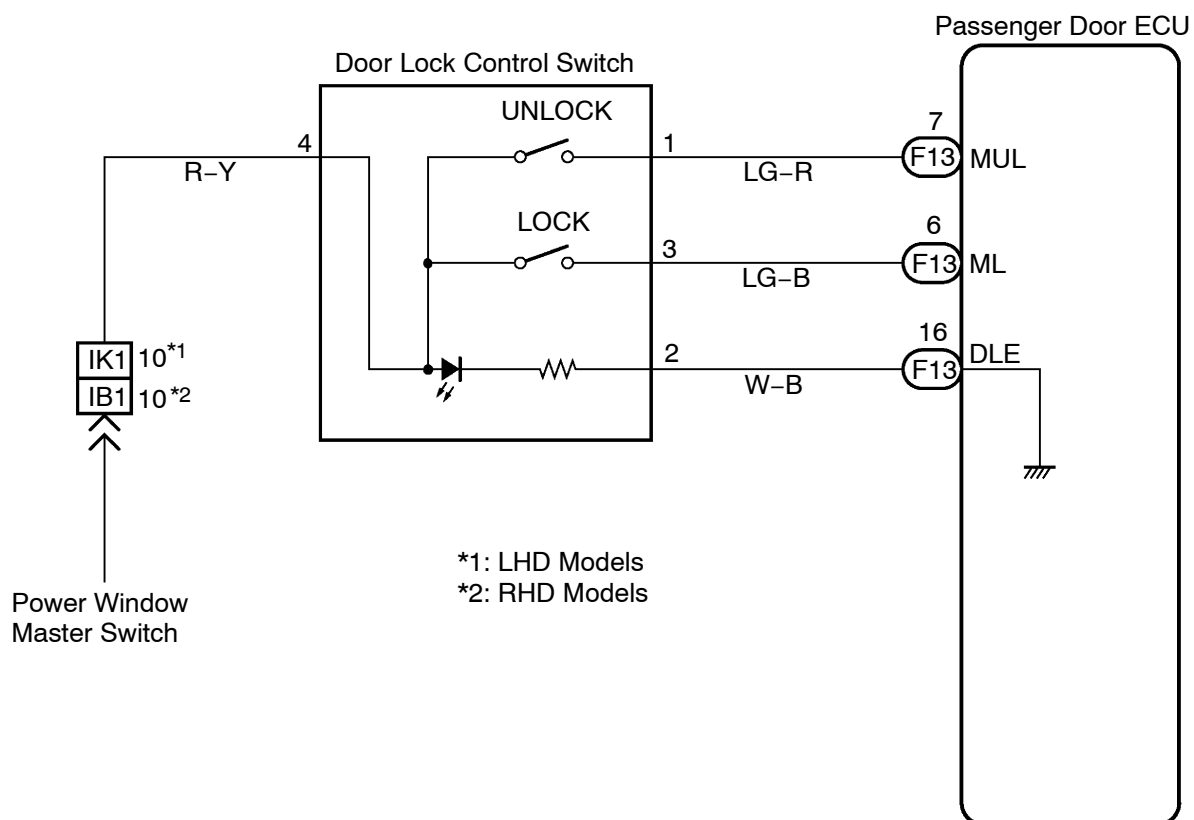

**INSPECTION PROCEDURE**

- |          |                                                                                      |
|----------|--------------------------------------------------------------------------------------|
| <b>1</b> | <b>Check the door lock control switch circuit using DTC check. (See page DI-836)</b> |
|----------|--------------------------------------------------------------------------------------|

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)

OK

- |          |                                                              |
|----------|--------------------------------------------------------------|
| <b>2</b> | <b>Check the door lock control switch. (See page BE-148)</b> |
|----------|--------------------------------------------------------------|

NG

Replace the door lock control switch.

OK

- |          |                                                                                                 |
|----------|-------------------------------------------------------------------------------------------------|
| <b>3</b> | <b>Check wireharness and connector between door lock control switch and passenger door ECU.</b> |
|----------|-------------------------------------------------------------------------------------------------|

NG

Repair or replace wireharness or connector.

OK

- |          |                                                                                                         |
|----------|---------------------------------------------------------------------------------------------------------|
| <b>4</b> | <b>Check wireharness and connector between door lock control switch and power window master switch.</b> |
|----------|---------------------------------------------------------------------------------------------------------|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page DI-616)