


Power window switch circuit

CIRCUIT DESCRIPTION

Power window switch circuit can be checked using DTC check. (Refer to [DI-836](#))

WIRING DIAGRAM

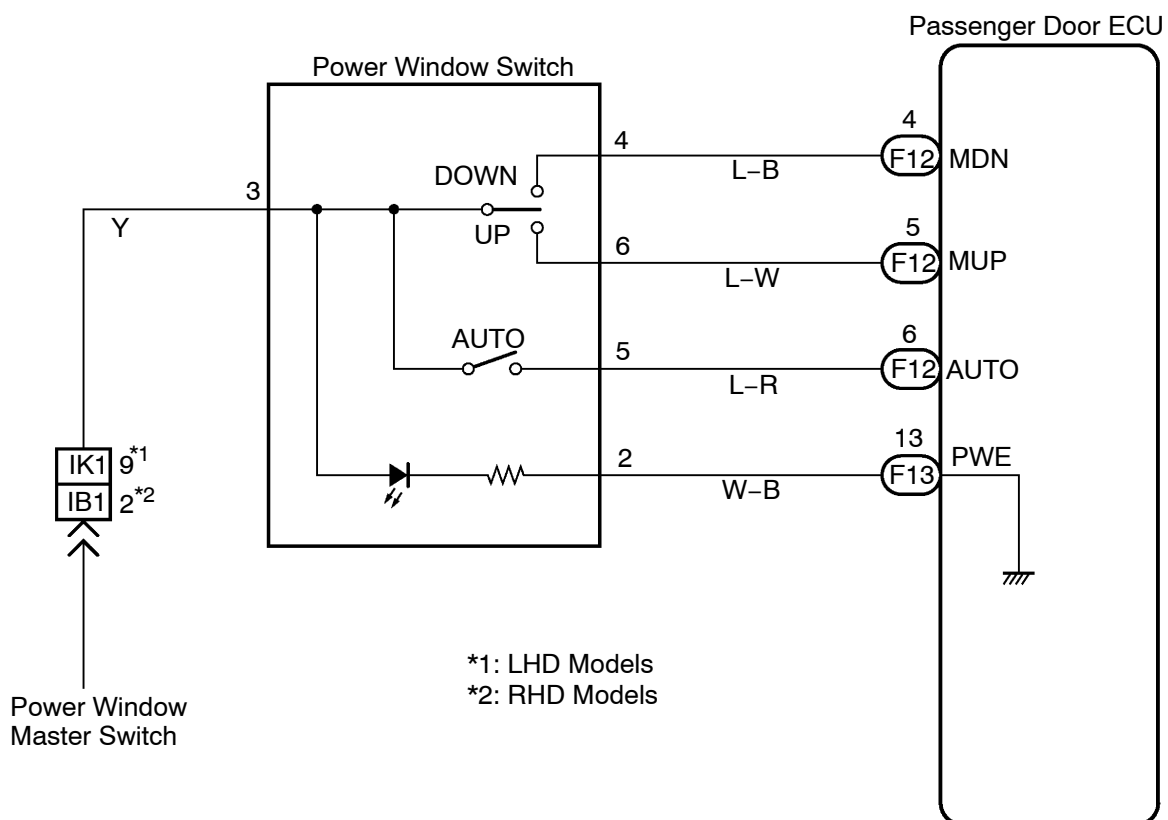

I05633

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check the power window switch circuit using DTC check. (See page DI-836) |
|----------|---|

OK**Proceed to next circuit inspection shown on problem symptoms table. ([See page DI-738](#))****OK**

- | | |
|----------|---|
| 2 | Check the power window switch. (See page BE-134) |
|----------|---|

NG**Replace the power window switch.****OK**

- | | |
|----------|--|
| 3 | Check wireharness and connector between power window switch and passenger door ECU. |
|----------|--|

NG**Repair or replace wireharness or connector.****OK**

- | | |
|----------|--|
| 4 | Check wireharness and connector between power window switch and power window master switch. |
|----------|--|

NG**Repair or replace wireharness or connector.****OK****Proceed to next circuit inspection shown on problem symptoms table. ([See page DI-738](#))**