



## Power source circuit

This circuit provides power to operate the rear right door ECU.

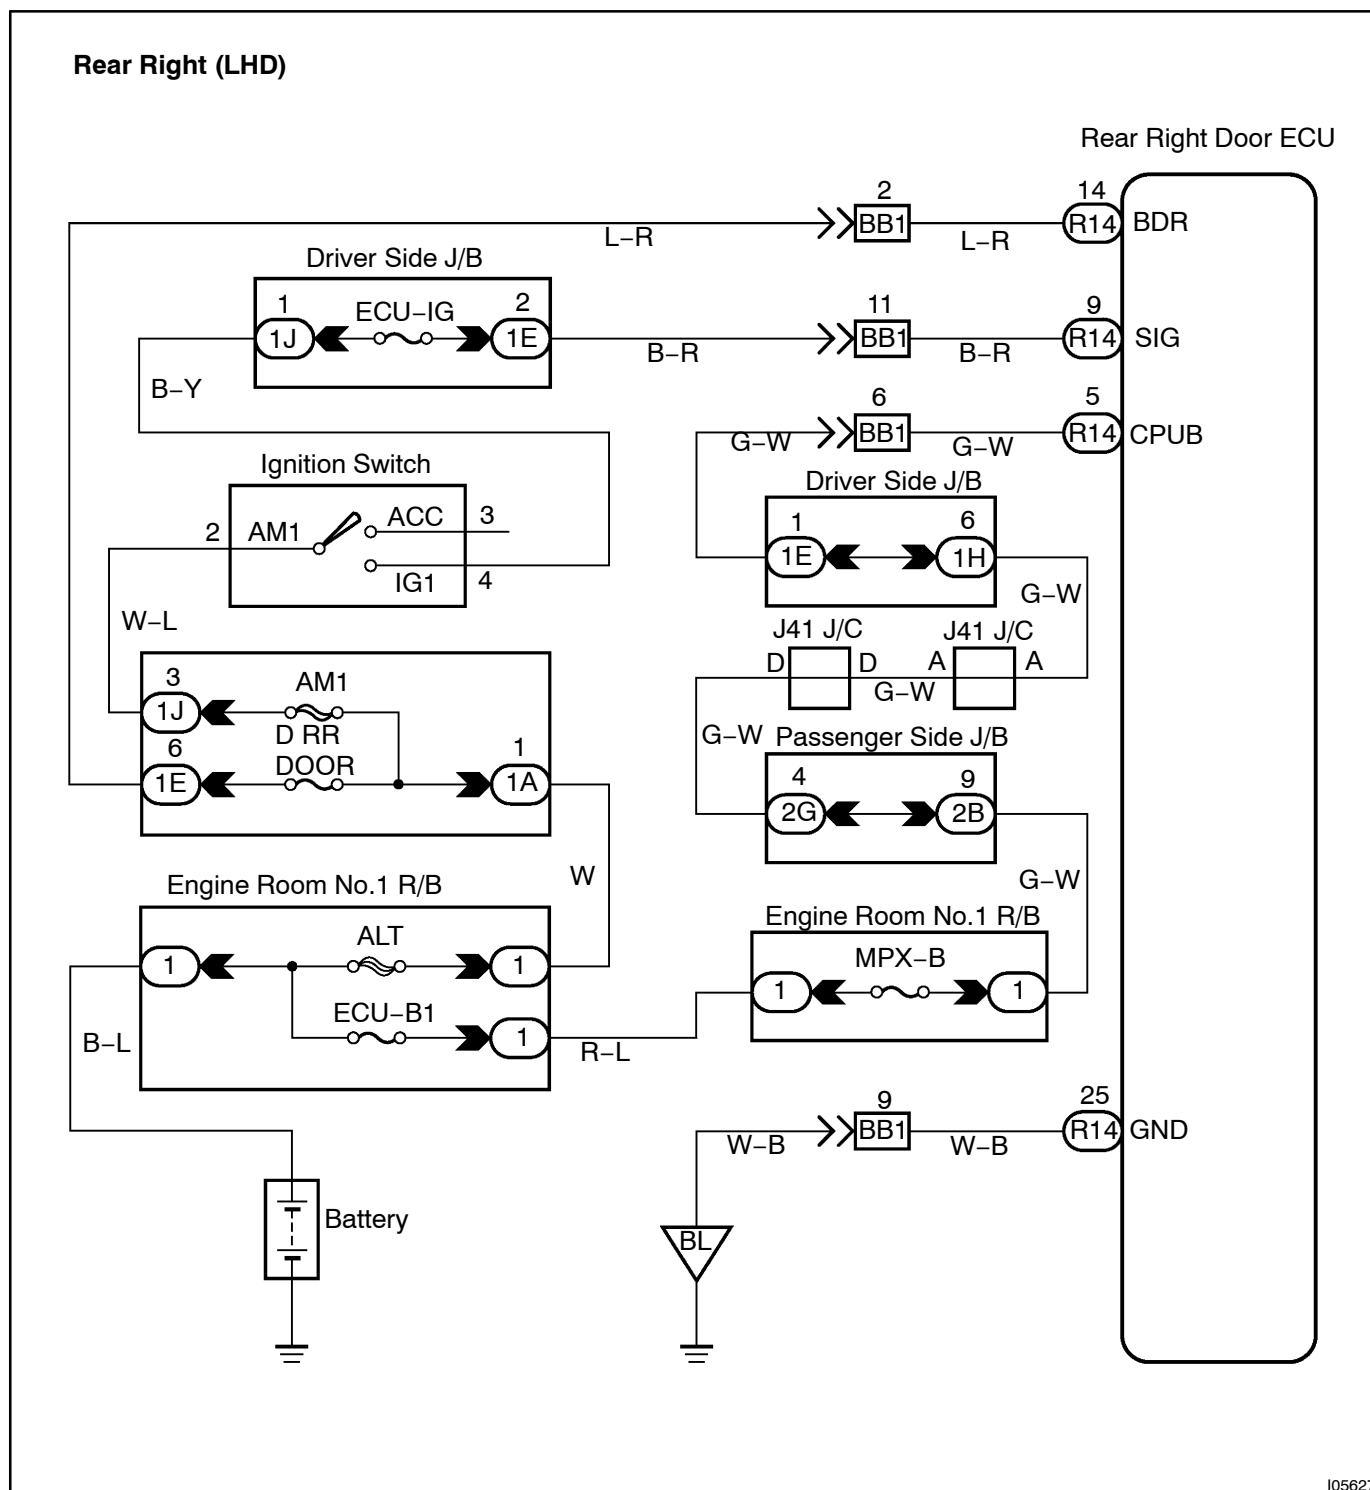

## Rear Right (RHD)

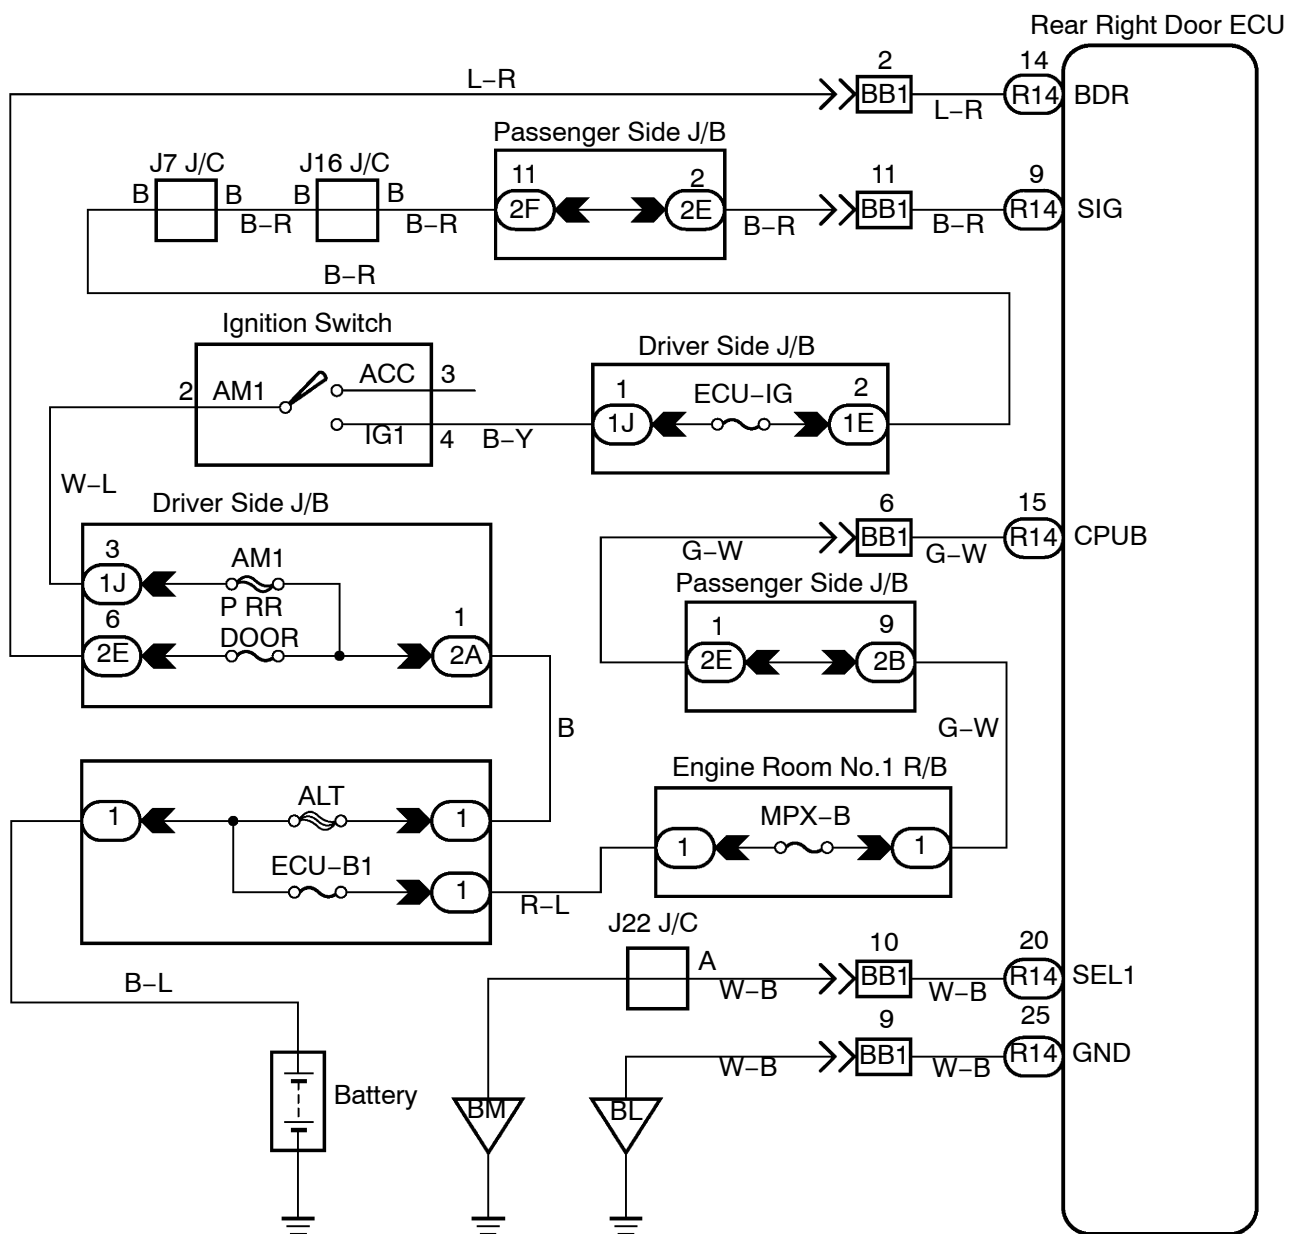

105628

**INSPECTION PROCEDURE**

- |          |                                             |
|----------|---------------------------------------------|
| <b>1</b> | <b>Check MPXB, GAUGE and DOOR(RR) fuse.</b> |
|----------|---------------------------------------------|

**CHECK:**

Check continuity of MPXB, GAUGE and DOOR(RR) fuse.

**OK:**

Continuity

NG

Replace the failure fuse.

OK

- |          |                                                                                                 |
|----------|-------------------------------------------------------------------------------------------------|
| <b>2</b> | <b>Check voltage between terminals BDR, CPUB, SIG and GND of rear right door ECU connector.</b> |
|----------|-------------------------------------------------------------------------------------------------|

**PREPARATION:**

Turn ignition switch ON.

**CHECK:**

Measure voltage between terminals SIG, and GND.

**OK:**

**Voltage: 10 – 14V**

**PREPARATION:**

(a) Turn ignition switch OFF.

(b) Disconnect the rear right door ECU connector.

**CHECK:**

Measure voltage between terminals BDR, CPUB and GND.

**OK:**

**Voltage: 10 – 14V**

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-788](#)).

NG

**3****Check wireharness and connector between ECU and body ground.****NG****Repair or replace wireharness or connector.****OK****Check and repair wireharness and connector  
between ECU and battery.**