


OXYGEN SENSOR (Except G.C.C. Countries)

COMPONENTS

SF00B-02


Bank 1 Sensor 1

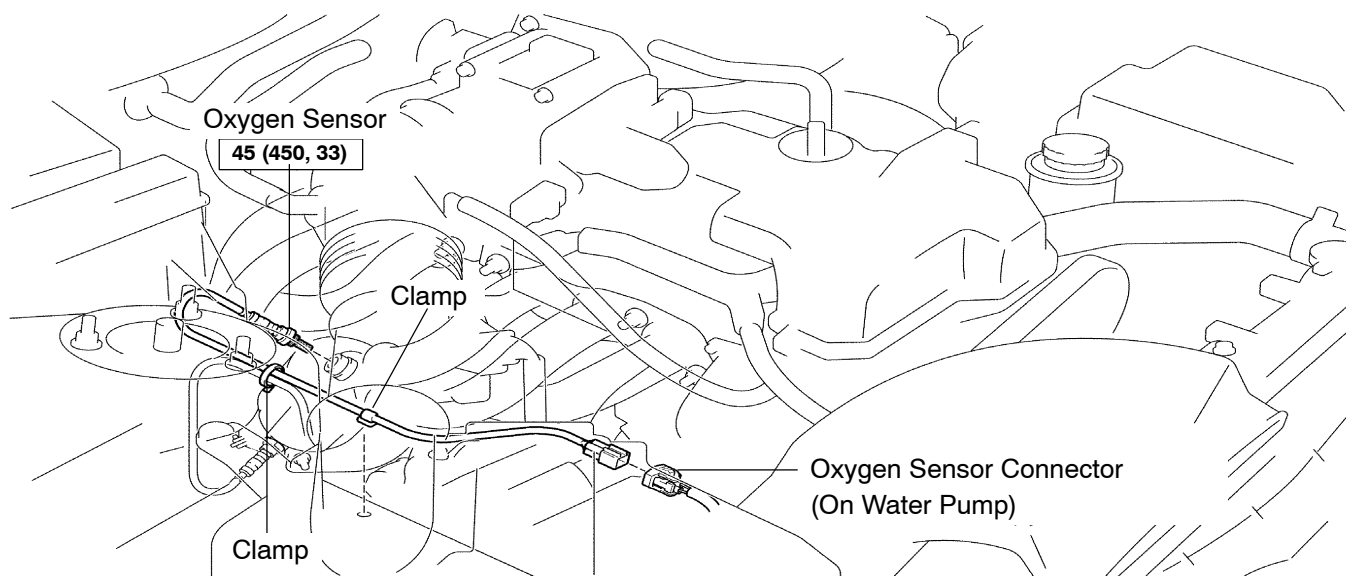

N·m (kgf·cm, ft·lbf) : Specified torque

B02025

Bank 1 Sensor 2

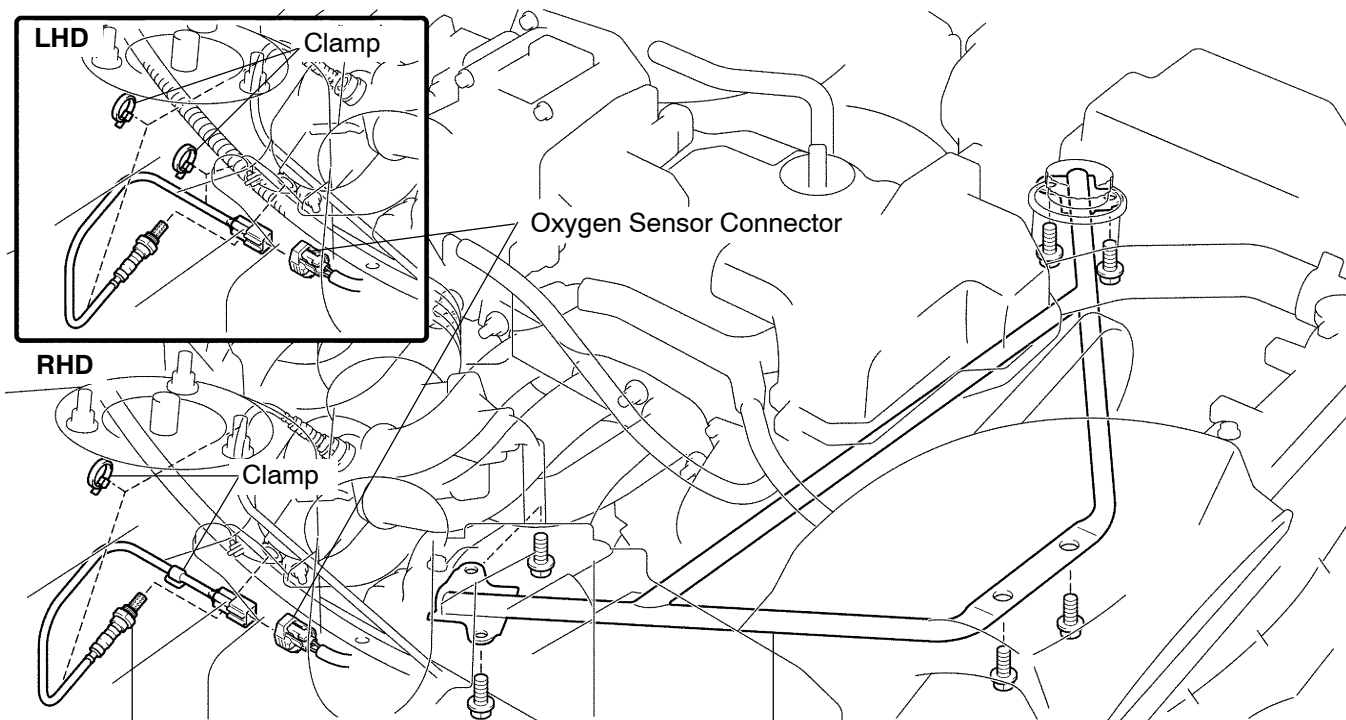


N·m (kgf·cm, ft·lbf) : Specified torque

B02831

Bank 2 Sensor 1

Air Cleaner, Air Flow Meter and Intake Air Resonator Assembly

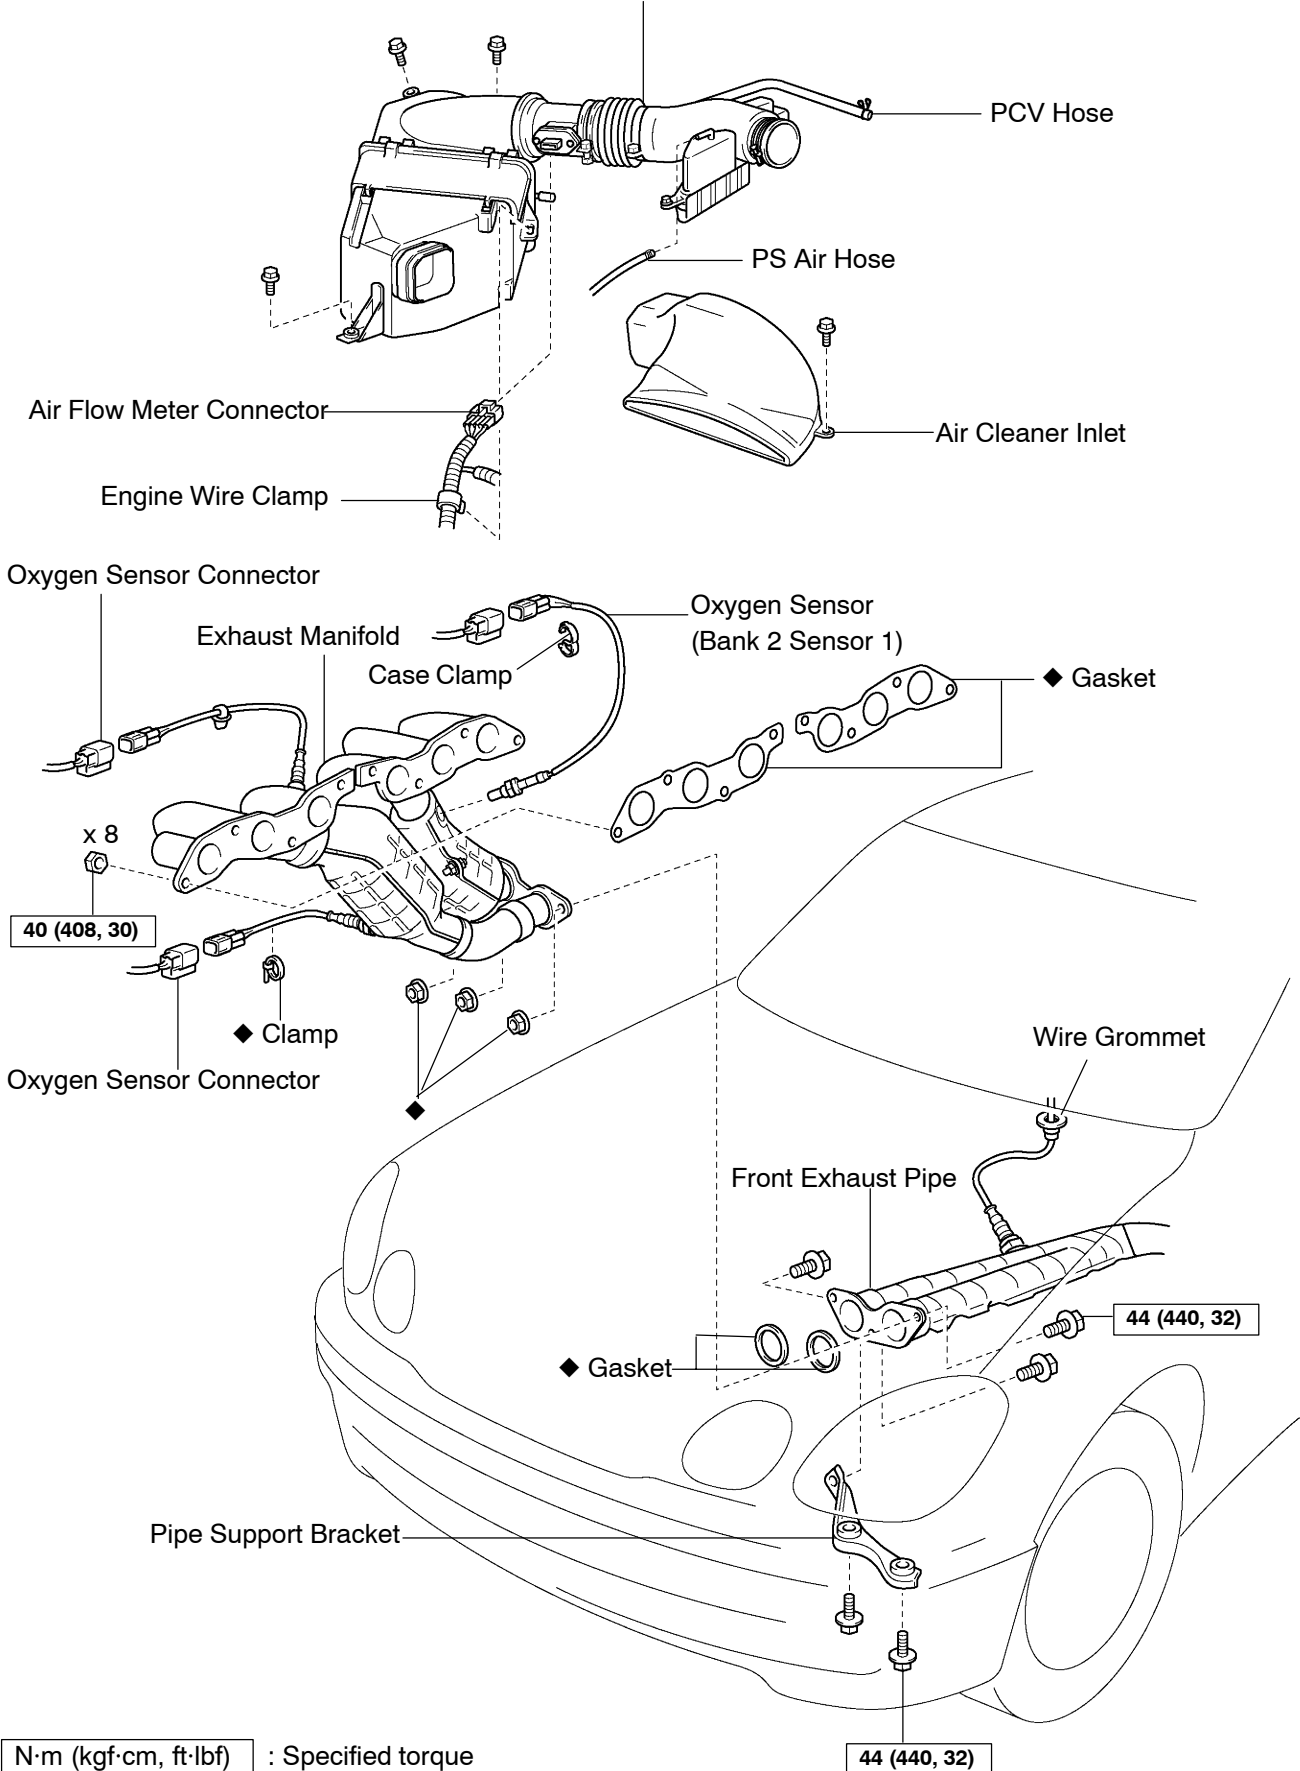


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

B02824

Bank 2 Sensor 2

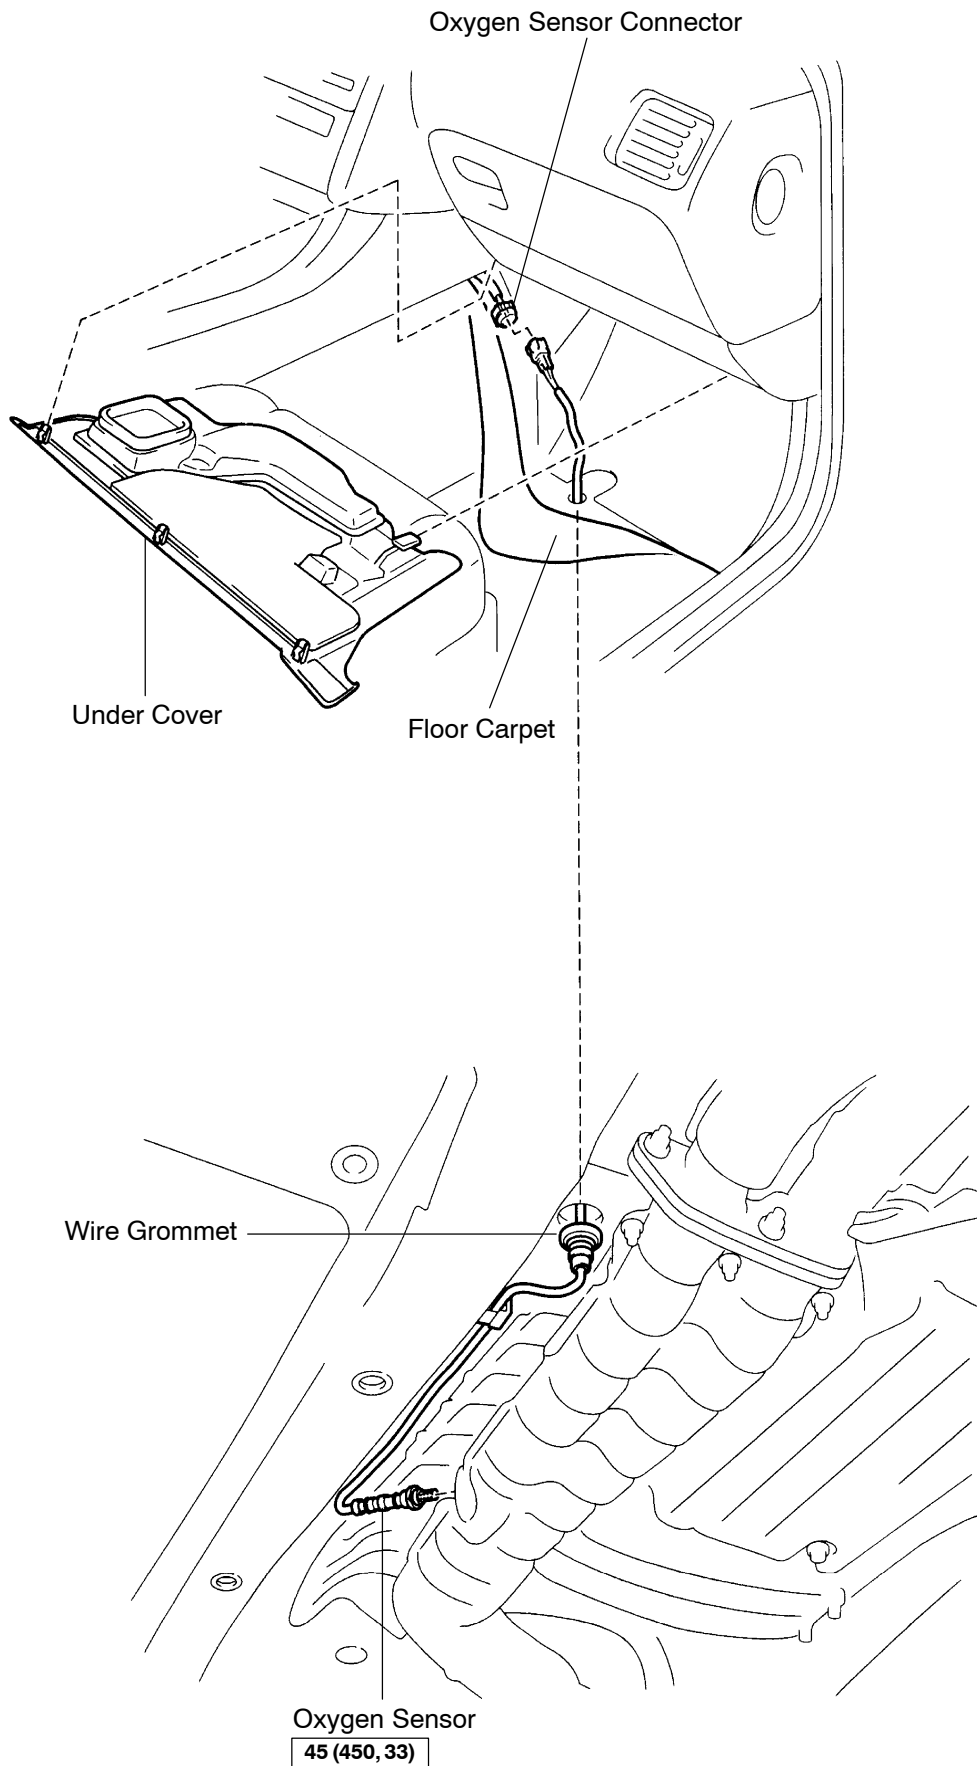

N·m (kgf·cm, ft·lbf) : Specified torque

B02815