

REMOVAL

REMOVE STEERING WHEEL AND SPIRAL CABLE ([See page SR-12](#))